
RX1-NV LCD



User Manual

File name: capitoli_en.p65

Version: 1.2

Date: 13/12/2001

Revision History

| Version | Date | Reason | Editor |
|---------|------------|----------------------------------|----------|
| 1.2 | 13/12/2001 | Update of the technical appendix | J. Berti |
| | | | |
| | | | |

RX1-NV LCD - User Manual
Version 1.2

© Copyright 1999-2001
R.V.R. Elettronica SpA
Via del Fonditore 2/2c - 40138 - Bologna (Italia)
Telefono: +39 051 6010506
Fax: +39 051 6011104
Email: info@rvr.it
Web: www.rvr.it

All rights reserved

Printed and bound in Italy. No part of this manual may be reproduced, memorized or transmitted in any form or by any means, electronic or mechanic, including photocopying, recording or by any information storage and retrieval system, without written permission of the copyright owner.

Table of Contents

| | |
|--|-----------|
| 1. Preliminary Instructions | 1 |
| 2. Warranty | 3 |
| 3. First Aid | 5 |
| 3.1 Treating electric shocks | 5 |
| 3.2 Treating electric burns | 6 |
| 4. General Description | 7 |
| 5. Quick Start | 9 |
| 5.1 Using the encoder | 9 |
| 5.2 Preparation | 10 |
| 5.3 Operation | 10 |
| 5.3 Adjusting | 13 |
| 6 External Description | 15 |
| 6.1 Front panel | 15 |
| 6.2 Rear panel | 16 |
| 6.3 Connectors description | 16 |
| 7. Operating System | 19 |
| 7.1 Exchange menu (“Exit”) | 20 |
| 7.2 Board Set | 20 |
| 7.3 General Setting | 20 |
| 7.4 Auto | 21 |
| 7.5 Alarm | 22 |
| 7.6 Meter | 24 |
| 7.7 Diagnostics | 25 |
| 7.8 Power Supply | 25 |
| 7.9 Stereo Set | 25 |
| 8. Technical Specifications | 27 |
| 8.1 Physical specifications | 27 |
| 8.2 Electrical Specifications | 27 |
| 9. Internal Description | 29 |
| 9.1 Modules Identification | 29 |
| 9.2 Configuration | 30 |
| 9.3 Frequency setting for tuned front-end | 30 |
| Appendix: | |
| Component layouts, schematics, bills of material | |

This page was intentionally left blank

1. Preliminary Instructions

This manual is designed to provide a general guide to skilled and qualified personnel, who are aware of the dangers that may arise when handling electric and electronic circuits.

It does not aim to provide a complete description of all the safety precautions that must be observed by people who use this or similar equipment.

The installation, operation, maintenance and use of this equipment involve risks both for people and the equipment itself, which must be handled only by experienced technicians.

R.V.R. Elettronica SpA does not assume responsibility for injuries to persons or damage to items caused by improper use or incorrect usage procedures, whether the users are experienced or not.

Users should observe local regulations and fire-prevention rules while installing and using this equipment.



WARNING: always disconnect the power before opening covers or removing any part of the equipment.

Take appropriate earthing measures to discharge the condensers and high voltage points before doing any maintenance work.



WARNING: this equipment may radiate radio-frequency energy, and if it is not installed according to the instructions, may cause troublesome interference to radio communications.

Operating this equipment in a residential environment may give rise to radio disturbance; if so, the user may be asked to take appropriate counter measures.

R.V.R. Elettronica SpA reserves the right to make modifications to the design and technical specifications of the equipment, and to update this manual without notice.

This page was intentionally left blank

2. Warranty

The guarantee, which is for 12 (twelve) months, is valid for any R.V.R. Elettronica product.

On components such as valves for finals, the manufacturer's guarantee applies.

R.V.R. Elettronica extends all transferable original guarantees to its own products. To ensure that servicing is carried out properly and as fast as possible, the work shall be handled by R.V.R. Elettronica; any claims should be sent directly to R.V.R. Elettronica, in accordance with the defined procedures.

The warranty does not include:

- 1 damage while the equipment is being shipped to R.V.R. for repairs;
- 2 any unauthorized modification or repair;
- 3 accidental damage, or damage not due to defects in the equipment;
- 4 nominal damage not accidental;
- 5 shipping the equipment and insuring it, and replacement of parts or units.

Any damage to the equipment caused during shipment must be reported to the transporters and notified in writing on the forwarding receipt.

Any difference or damage discovered after delivery must be reported to R.V.R. Elettronica within 5 (five) days from the delivery date.

To take advantage of the guarantee, adopt the following procedure:

- 1 Contact the retailer or dealer where you bought the equipment; describe the problem or fault to check if there is a simple solution.

Retailers and Distributors can provide full information on the problems that occur most frequently; they can normally repair the equipment much faster than the manufacturer

- 2 If your dealer cannot help you, contact R.V.R. Elettronica and describe the problem to them; if necessary, you will be sent authorization with the necessary instructions;
- 3 When you have received authorisation, return the equipment carriage paid to the address specified.

Pack it carefully, if possible in the original packing, and seal the package.



Do not return the machine without prior authorization, otherwise it may be returned to you

- 4 Quote the machine's type, model and serial number; attach a written technical diagnosis listing all the problems and faults encountered, and enclose a copy of the invoice.

Replacement of parts under guarantee or spare parts can be ordered from the following address:



R.V.R. Elettronica SpA
Via del Fonditore, 2/2c
40138 BOLOGNA
ITALY
Tel. +39 051 6010506

quoting type, model and serial number of the device.

3. First Aid

Personnel involved in the installation, use, and maintenance of the equipment must be familiar with the theory and practice of first aid.

3.1 Treating electric shocks

3.1.1 If the victim is unconscious

Follow the first aid principles described below.

- Lay the victim down on his back on a rigid surface
- Free the respiratory tracts by raising the neck and pushing the forehead back (Figure 1).
- If necessary, check the breathing of the victim opening his mouth.
- If the victim is not breathing, start artificial respiration immediately (Figure 2): incline the head, close the nostrils, apply your mouth to the victim's and make four fast respirations.

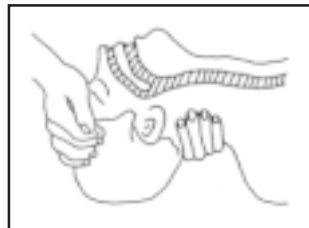


Figure 1



Figure 2

- Check the heart beat (Figure 3); if there is none, start a cardiac massage immediately (Figure 4) pressing the sternum approximately at the centre of the chest (Figure 5).



Figure 3



Figure 4

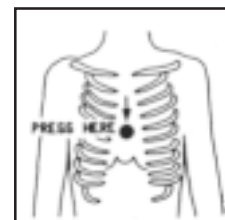


Figure 5

- If there is just one person providing first aid, he must adopt a rhythm of 15 compressions and 2 fast respirations alternately.
- If there are two persons, the rhythm must be 1 respiration and 5 compressions alternately

- Do not interrupt the cardiac massage during the artificial respiration.
- Call a doctor as soon as possible

3.1.2 If the victim is conscious

- Cover the victim with a blanket
- Keep him calm.
- Loosen the victim's clothes and keep him lying down
- Call a doctor as soon as possible

3.2 Treating electric burns

3.2.1 Large-scale burns and serious cuts

- Cover the area concerned with a sheet or a clean cloth.
- Do not break the blisters; remove any fabric and parts of clothing that may be attached to the skin; apply a suitable ointment.
- Treat the victim depending on the type of accident.
- Take the victim to hospital as soon as possible.
- If the arms and legs are injured, keep them raised.

If no medical help is available within an hour and the victim is conscious and has not retched, administer a liquid solution of salt and bicarbonate of soda: 1 teaspoonful of salt to every 250ml of water.

Get the victim to slowly drink half a glass of the solution, four times, over a period of 15 minutes.

Stop the treatment if the victim starts to retch.



Do not administer alcoholics!

3.2.2 Less serious burns

- Apply cold gauze compresses (not iced) using a clean cloth (i.e. as clean as possible).
- Do not break any blisters; remove any fabric and parts of clothing that may be attached to the skin; apply a suitable ointment.
- If necessary, dress the victim in clean dry clothes.
- Treat the victim depending on the type of accident.
- Take the victim to hospital as soon as possible.
- If the arms and legs are injured, keep them raised.

4. General Description

RVR Elettronica's RX1-NV is a professional FM receiver with harmonic distortion lower than 0.1%. Its audio characteristics make it suitable for broadcasting applications, where high fidelity performances are needed.

Its external box is 2HE high and mountable on standard 19" racks.

The user interface comprises a graphic LCD display and a knob (encoder). Using these elements, it is possible to read all the working parameters of the device and to modify the changeable parameters, for example the working frequency or the audio output configuration.

In the standard version of the receiver, the demodulated signal is provided to the user in the form of MPX (that is, the composite baseband signal) as well as in the form of mono. There are also two connectors for the output of RDS or SCA subcarriers.

As an option, the RX1-NV can be equipped with a stereo decoder section. In this version, the output of the device comprises the left and right channels, the MPX signal and the possible subcarriers.

Two types of RF front-end sections are available.

The standard version employs a RF filter that is tuned on the working frequency; this kind of front-end is particularly suitable when the receiver is part of a retransmitting system, since it gives the best quality in the received signal.

Optionally, the RX1-NV can be equipped with an input section featuring a RF filter that is automatically tuned by the control software when a certain working frequency is selected. This kind of front-end also includes a double antenna input; the used antenna input is selectable via software.

The RX1-NV is designed in a modular way: the different functionalities are performed by modules that are directly connected with male and female connectors or using connector-terminated flat cables. This kind of design facilitates the maintenance or the possible substitution of the modules.

The receiver's control software implements an alarms system that is completely user-configurable. Among the possibilities, an important one is the capability of changing the working frequency if an alarm is raised.

The RX1-NV can also be fitted with a RDS board, that enables the user to control the different RDS parameters and to manage alarms as a function of them.

The RX1-NV offers an auxiliary audio input, that is particularly useful when one doesn't want to let silence intervals to go on air: if an audio signal is connected to this input, it will be routed to the audio output of the receiver as soon as the muting function is triggered.

This page was intentionally left blank

5. Quick Start

This chapter gives a concise view of the points that are necessary for the installation of the device. If any item is not completely clear, for example when you use the receiver for the first time, we strongly suggest to read throughly the manual and the description of the operating system.

5.1 Using the encoder

The interaction between the user and the receiver's control software is performed using the encoder (fig. 5.1).

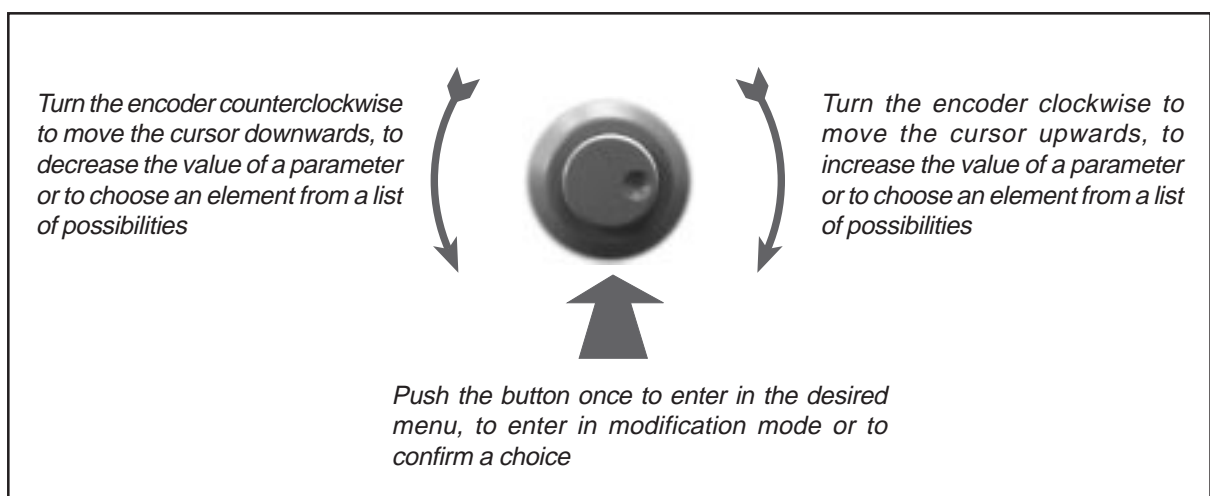


Figure 5-1

The operations supported by the encoder are:

- **rotation:** moves the cursor shown on the display; if you turn the encoder to the left (counterclockwise), the cursor moves downwards, if you turn it right the cursor moves upwards; it also permits to increase or diminish the parameters (turning the encoder left diminishes the parameter, turning it right increases it) or to select an item form a list of options
- **pushing:** push the button once when the cursor is on the name of a menu to enter in that menu, push it when the corsor is on the name of a parameter to enter in modification mod (the cursor starts blinking); after the modification of a parameter, push the button to save the new value.

After having modified the value of a parameter, the cursor goes on blinking for approximately 30 seconds, waiting for confirmation from the user. If the user doesn't confirm the new value (i.e., the button is not pressed), the device emits a sound to indicate that no modification has been saved; the cursor stops blinking and remains on the selected parameter.

5.2 Preparation

Unpack the receiver and before any other operation make sure that no damage due to the transport is present. In particular, inspect the conditions of all the connectors.

Check if the mains voltage is correct for your site. The selector is on the rear panel and the selected value is indicated by an arrow. If required, extract the fuse/selector block levering with a little screwdriver. Rotate the block until the correct printed value corresponds with the arrow, then reinsert it.

The correct value for the mains fuse is 2 A.

Verify that the mains switch of the unit is on the OFF position.

Connect to the RF input of the receiver the antenna cable. If your receiver includes the double RF input option and you use only one antenna, we suggest to use the input called A1.

Connect the mains power supply cable to the relative socket.



NOTE: this piece of equipment shall be correctly connected to earth. This is necessary both for safety reasons and to obtain the receiver's correct performances.

Finally, connect the audio output of the receiver to the devices that will use it, depending on the configuration of your installation.

5.3 Operation



Warning: Before using the receiver for the first time, we suggest to get familiar with the machine's control system reading this manual in full, and specifically chapter 7 (operating system).

Switch the receiver on using the switch on the front panel.

At start up, all the LEDs on the front panel are briefly switched on to permit the verification of their functionality. The display then shows some information regarding the model of the device (fig. 5.2).

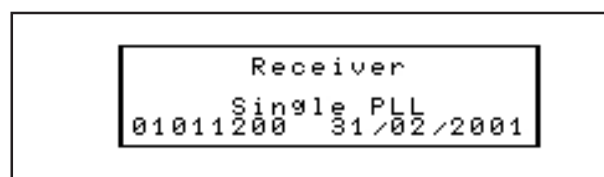


Figure 5-2

If the receiver is working correctly, the LEDs “alarm” and “waiting” will be off. The respective meanings are that the power supply is correct, and that the PLL is locked on the working frequency.

At this point, the software enters the main cycle, displaying the default screen.

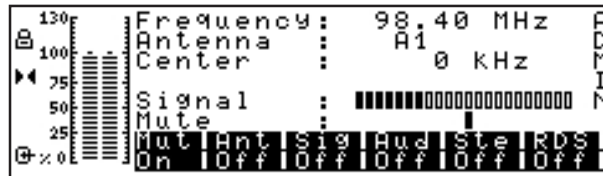








Figure 5-3

The default screen can be divided in the following part:

- Left column: status icons. The icons that can be shown are the following:
 -  The PLL is locked
 -  This icon is present if the receiver is working on the backup setup (frequency and antenna)
 -  Indicates that the working frequency is centered with respect to the received carrier
 -  This icon means that the auxiliary input is routed to the audio output. This situation is bound to the intervention of the muting functionality.
 -  This icon is present if the received program is stereo (only with Stereo decoder or/and RDS decoder options)
 -  Indicates that the RDS signal is correctly received (only with RDS decoder option)
- On the right of the icons, there is a double VU-meter column that indicates the instantaneous modulation level. 100% in this scale corresponds to a standard 75 kHz modulation
- The upper part of the screen contains the following indications:
 - Working frequency (modifiable)
 - Antenna used (A1 or A2, modifiable only when the tuneable RF front-end is present)
 - Offset between set and received frequencies
 - Analog representation of the received signal level
 - Muting level setting
- In the lower part of the screen, there is a bar (inverted visualization) indicating the status of the automatic management system of the machine
 - Mut This is the “muting” status. Off indicates that the muting function is idle, so that at the receiver’s output there is the received signal; On indicates that the muting is activated, so that the receiver’s output is silenced, or replicates the Aux In, if such input is used.



Note: the visualization of the following states is enabled only if the receiver is configured for automatic alarms management

Ant "Antenna": `Off` indicates that automatic commutation on the backup setup (frequency and antenna) is disabled. It corresponds to the menu item `Admin -> Auto -> Auto Off`

Sig "Signal", indicates the activation (`On`) of the automatic system depending on the receiver signal level. It corresponds to the menu item

`Admin -> Alarm -> Signal Alm -> Rescue`

Aud "Audio", indicates the activation (`On`) of the automatic system depending on the demodulated audio level in the received signal. It corresponds to the menu item

`Admin -> Alarm -> Audio Alm -> Rescue`

Ste "Stereo", indicates the activation (`On`) of the automatic system depending on the pilot tone level in the received signal. It corresponds to the menu item


`Admin -> Alarm -> Stereo Alm -> Rescue`

RDS "RDS", indicates the activation (`On`) of the automatic system depending on the correctness of the received RDS frames. It corresponds to the menu item

`Admin -> Alarm -> RDS Alm -> Rescue`

- In the right part of the default screen there is the menu item (`[Admin]`) that permits to go on to the administration menus. This element is visible only when one is in "input mode", that is when the encoder is moved.

Typically, the operations that are necessary to perform at the first start-up of the receiver are the following:

- (Only if automatic alarms management is enabled) - Verify in the status bar of the default menu that the audio output "AFO" is set on "Rec" and that the various automatic settings are all disabled (`Off`)
- (Only if the tunable front-end is present) - With the encoder, select the antenna input to be used. Each time you push the encoder the antenna input is switched
- Set the working frequency:
 - with the encoder select in the default menu the item "frequency"
 - push the encoder to enter in the frequency modification menu
 - push the encoder on the frequency value to enter in modification mode
 - turn the encoder until the desired frequency is reached; when the set frequency is at the center of a received radio station, the icon  is shown.
 - push the encoder to store the new frequency
 - confirm your choice pushing the encoder on "Yes"
 - push the encoder on "Exit" to go back to the default screen

- Set the desired muting level as described hereafter:
 - with the encoder, select in the default screen the line related to the muting level
 - push the encoder to enter in edit mode
 - rotate the encoder to select the desired muting level
 - push the encoder to store your selection

Please remember that if you feed the receiver with an audio signal using the Aux In input, when the muting function is activated the supplied audio signal is routed to the receiver's output. If no auxiliary audio is used, the muting intervention will just produce silence at the output.

- If it is necessary, check the settings of the audio section (ADMIN → BdSet) and of the stereo board if it's present (ADMIN → StSet). To know more about these menus, please check chapter 7.
- If the device is configured for automatic alarms management, set the related parameters. For details, see chapter 7.

5.3 Adjusting

The only adjustments that have to be manually done on the RX1-NV are those related to the output levels.

On the rear panel, you will find a trimmer for each of the independent output. When you insert the receiver in a system, you will have to adjust the level depending on your system configuration.

On the front panel there is a mono jack plug for phone output. Above the plug, a trimmer permits to adjust the level.

Using the software, it's possible to adjust all the parameters of the alarm system. The different parameters and the working principles of the alarm system are described in chapter 7.



For receivers fitted with tuned RF front-end, changing the working frequency requires the intervention of technically skilled personnel and the use of suitable instruments. The procedure to be used is described in chapter 9.

This page was intentionally left blank

6 External Description

This chapter describes the different elements that can be seen on the front and rear panels of RX1-NV.

6.1 Front panel

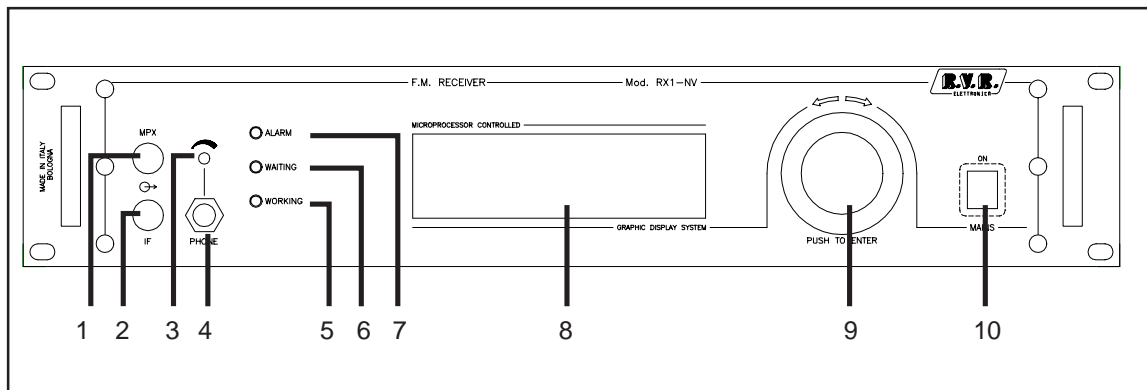


Figure 6-1

- | | |
|-------------|--|
| [1] MPX | MPX Output Monitor BNC connector |
| [2] IF | IF monitor BNC connector |
| [3] VOL | Regulation trimmer for the phone plug |
| [4] PHONE | Jack plug for phone output |
| [5] WORKING | Green LED, lit when the device is working |
| [6] WAITING | Yellow LED, lit when the receiver is waiting for the PLL to lock |
| [7] ALARM | Red LED, lit if the receiver is out of order |
| [8] DISPLAY | LCD graphic display |
| [9] ENCODER | Knob/button to control the machine |
| [10] MAINS | Mains supply switch |

6.2 Rear panel

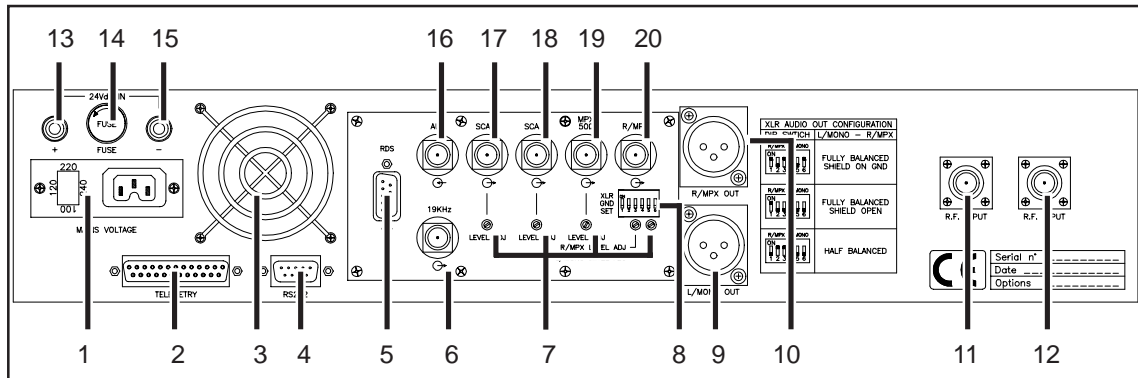



Figure 6-2

- | | |
|----------------|---|
| [1] PLUG | mains plug with fuse and voltage changer |
| [2] TELEMETRY | DB25 female connector for telemetry signals |
| [3] FAN | fan for forced ventilation |
| [4] RS232 | DB9 female connector for direct or modem serial communication |
| [5] RDS | DB9 female connector for RDS output (if installed) |
| [6] 19KHz | BNC for regenerated 19 kHz subcarrier |
| [7] Trimmers | Output level adjusting trimmers |
| [8] Dip Switch | miniswitch for XLR connectors grounding configuration |
| [9] L/Mono | XLR connector for Left/Mono output |
| [10] R/MPX | XLR connector for Right/MPX output |
| [11] ANTENNA | N-type connector for antenna input (A1) |
| [12] ANTENNA | N-type connector for antenna input (optional, A2) |
| [13] 24V + | 24Vcc positive input connector (red) |
| [14] FUSE | Vcc supply fuse |
| [15] 24V - | 24Vcc negative input connector (black) |
| [16] AUX IN | Auxiliary audio input |
| [17] SCA 1 | BNC connector for SCA/RDS output |
| [18] SCA 2 | BNC connector for SCA/RDS output |
| [19] MPX 50 Ω | demodulated MPX signal output, buffered to drive a 50 Ω load with up to 250 mt RG58 cable |
| [20] R/MPX | BNC connector for Right/MPX output (in parallel with [10]) |

6.3 Connectors description

6.3.1 Audio output

Type: XLR female

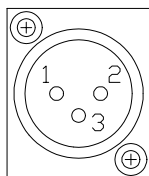


- | | |
|---|------------|
| 1 | Ground |
| 2 | Signal (+) |
| 3 | Signal (-) |

This description is valid for balanced configuration.
In unbalanced configuration, pin 3 is at ground.

The possible configurations of XLR connectors are described on the rear panel.

6.3.2 Telemetry

Type: DB25 female



| | Standard version | With alarms card options |
|----|----------------------------------|-----------------------------------|
| 1 | GND | GND |
| 2 | N.A. | Signal level alarm |
| 3 | N.A. | Signal level alarm |
| 4 | V Field (Analog O) | V Field (Analog O) |
| 5 | Reset CPU if grounded | Reset CPU if grounded |
| 6 | I2C SDA | I2C SDA |
| 7 | I2C SCL | I2C SCL |
| 8 | Mutes the output if grounded | Mutes the output if grounded |
| 9 | GND | Mute alarm |
| 10 | Mute demodulatore (TTL O) | Mute alarm |
| 11 | N.A. | Pilot level alarm |
| 12 | GND | Pilot level alarm |
| 13 | GND | RDS level alarm |
| 14 | N.A. | RDS level alarm |
| 15 | N.A. | RDS PI alarm |
| 16 | N.A. | RDS PI alarm |
| 17 | GND | Receiving on antenna 2 alarm |
| 18 | GND | Receiving on antenna 2 alarm |
| 19 | I2C GND | I2C GND |
| 20 | GND | GND |
| 21 | Mutes the demodulator if grounde | Mutes the demodulator if grounded |
| 22 | Frequency unlocked (TTL O) | Receiver fault alarm |
| 23 | GND | Receiver fault alarm |
| 24 | N.A. | Audio level alarm |
| 25 | GND | Audio level alarm |

The alarm pins on the optional board are of the type “dry contact”.

This page was intentionally left blank

7. Operating System

The receiver's control software structure is divided into a default menu and a series of administration menu (figure 7.1). One of the default menu items ([ADMIN]) permits to pass to the administration menus.

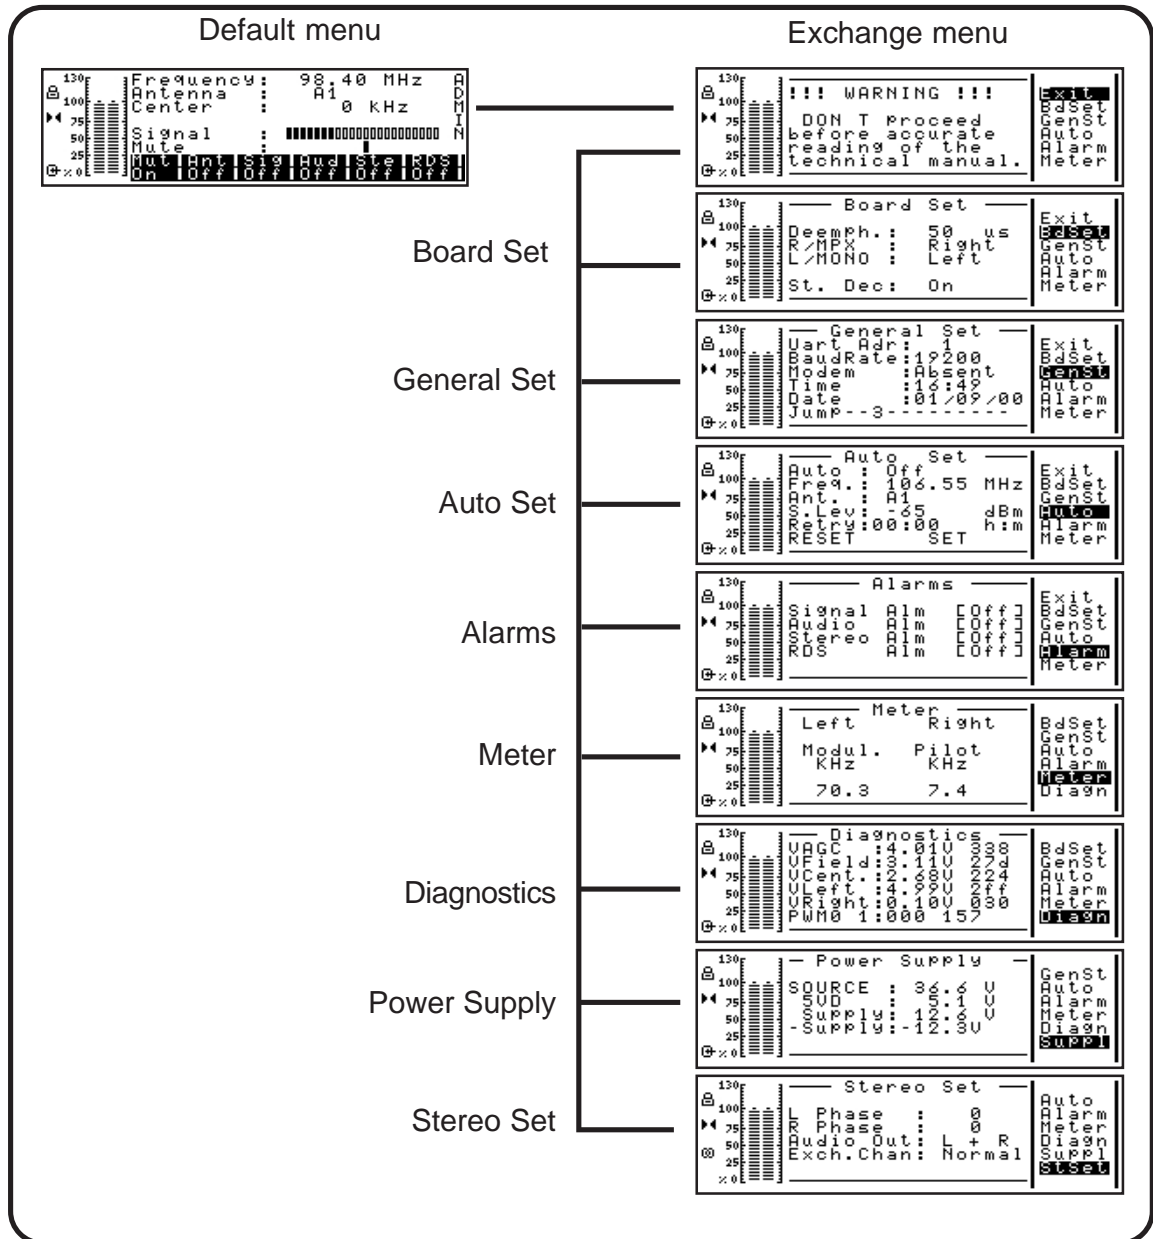


Figure 7-1

For the description of the default menu, please refer to chapter 5.3

7.1 Exchange menu (“Exit”)

This menu is the exchange point between the default menu and the administration menus set. When the user reaches this screen from the default menu using the [ADMIN] item, he will be warned to proceed only after reading the manual of the receiver:

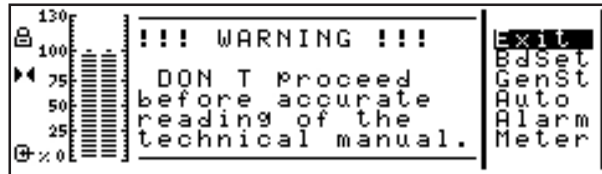


Figure 7-2

When one reaches this screen coming from an administration menu, there will be only the indication to push the button to go back to the default menu.

7.2 Board Set

This menu is related to the audio section settings of the receiver.

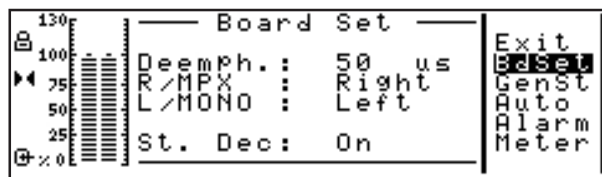


Figure 7-3

Deemph decides the kind of deemphasys to be applied to the audio signal (mono or left and right). The possible choices are 0, 25, 50 or 75 us.

R/MPX describes the R/MPX output

L/Mono describes the L/Mono output.

St.Dec this menu item, that is shown only if the stereo decoder is installed, allows to activate or deactivate it. When the stereo decoder is deactivated, the receiver behaves the same as if it was not fitted with the board.

7.3 General Setting

General setting menu.

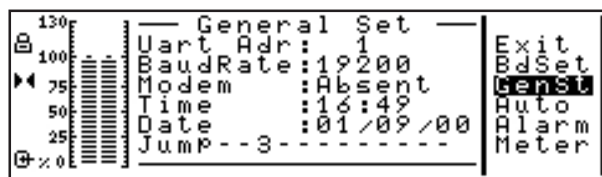


Figure 7-4

- UART ADR** address of the RX1-NV (serial port and IIC protocol), selectable between 1 and 200. If the receiver is in a stand-alone configuration, the address has to be set to 1
- BAUD RATE** tranfert rate of the RX1-LCD serial port
- MODEM** configures the device to use a modem (Present) or the direct cable connection
- JUMP** indicates the jumper setting of the receiver. If a number is shown, the respective jumper is closed, while the symbol “-” indicates that the jumper is open. The meaning of the jumper configurations is given in 9.2.

7.4 Auto

Receiver’s automation setting.

In the standard configuration of the receiver this menu and the succeeding Alarm are not activated. The following explanation is related to receivers with activated automatic alarms management (see chapter 9.2).

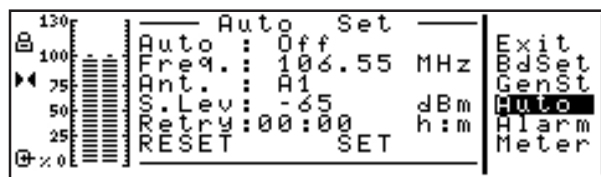


Figure 7-5

When the receiver is fitted with the tunable front-end option, one can configure the receiver so that it will switch to a backup configuration if an alarm condition is raised. The backup configuration includes a frequency value and an antenna input, that can differ or not from the normal setting.

- Auto** select On to activate the automatic switching
- Freq** Backup configuration frequency
- Ant.** Backup configuration antenna input
- S. Lev** Minimum level, in dBm, admitted for the backup configuration received signal. If Retry is set to 00:00, the receiver will switch back to the default setting when the signal level goes below this threshold.
- Retry** Time interval (hours : minutes) to wait before the receiver switches from the backup setting to the default one. If set to 00:00, the receiver will switch back automatically if the backup received signal goes below S.Lev
- RESET** forces the switching to the default setting
- SET** forces the switching to the backup setting

7.5 Alarm

In its standard configuration, the receiver has this menu, the connected submenus and the former `Auto` are not activated. The following explanation is related to receivers with activated automatic alarms management (see chapter 9.2).

Using this menu, it's possible to set the way the alarm system of the receiver intervenes. For each submenu, this menu indicates if it's activated or not.

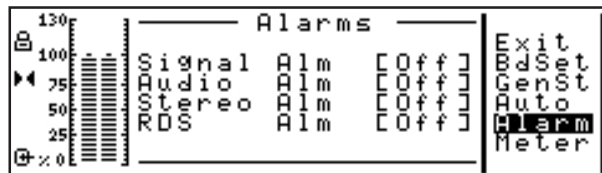


Figure 7-6

To get into one of the submenus, push the encoder when the cursor is on the desired item. Hereafter you will find the explanation of the submenus.

7.5.1 Signal Alarm

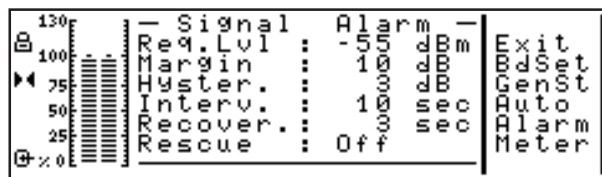


Figure 7-7

Setting of the alarm related to the received signal level for the standard working frequency. The alarm will be raised when the signal level remains below the level (`Req.Lev - Margin`) for `Interv` seconds. The alarm will be cancelled when the signal goes below the level (`Req.Lev - Margin + Hyster`) for `Recover` seconds.

Req.Lev

setting of the level normally required for the received signal

Margin

attenuation margin permitted for the received signal without the alarm being raised

Hyster

Level hysteresis to activate/deactivate the alarm. This setting permits to avoid instability situations when the received signal level fluctuates around the threshold level

Interv

delay for the alarm to be raised (the level has to remain below the set level during the time defined by this variable before the situation being interpreted as alarm)

Recover

delay for the alarm to be cancelled (the level has to remain above the set level during the time defined by this variable before the alarm situation being cancelled)

Rescue activates or deactivates the alarm. When the alarm is deactivated, the signal level that has been set will be used only by the audio exchange (or muting) function.

7.5.2 Audio Alarm

Audio level alarm setting. When this alarm is activated, the receiver will monitor the modulation level in the received signal, and an alarm situation will be signalled depending on the parameters set in this menu

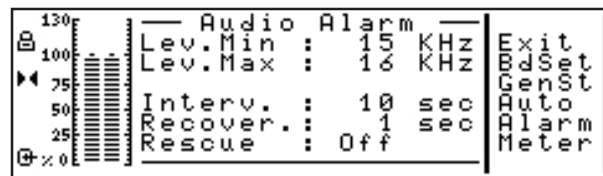


Figure 7-8

Lev.Min

minimum modulation level in kHz under which the audio alarm will be raised

Lev.Max

modulation level in kHz above which the audio alarm will be cancelled

Interv delay for the alarm to be raised (the level has to remain below the set level during the time defined by this variable before the situation being interpreted as alarm)

Recover

delay for the alarm to be cancelled (the level has to remain above the set level during the time defined by this variable before the alarm situation being cancelled)

Rescue activates or deactivates the alarm. When the alarm is deactivated, the receiver will not signal modulation level related alarms

7.5.3 Stereo Alarm

Stereo operation alarm setting. When this alarm is activated, the receiver will monitor the level of the pilot tone component in the demodulated signal, and an alarm situation will be signalled depending on the parameters set in this menu

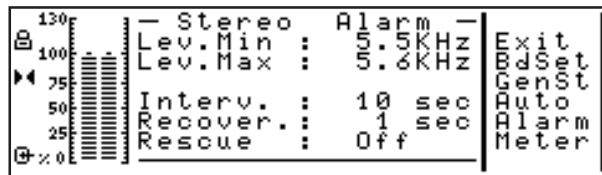


Figure 7-9

Lev.Min

minimum modulation level in kHz due to the pilot tone under which the stereo alarm will be raised

Lev.Max

modulation level in kHz due to the pilot tone above which the stereo alarm will be cancelled

Interv

delay for the alarm to be raised (the pilot tone level has to remain below the set level during the time defined by this variable before the situation being interpreted as alarm)

Recover

delay for the alarm to be cancelled (the pilot tone level has to remain above the set level during the time defined by this variable before the alarm situation being cancelled)

Rescue

activates or deactivates the alarm. When the alarm is deactivated, the receiver will not signal pilot tone level related alarms

7.5.4 RDS Alarm

Setting of the alarms related to the correctness of the received RDS data.

This submenu is not active if the RDS decoder board is not installed.

7.6 Meter

This menu is used to visualize the measurements of a series of parameters related to the received signal.

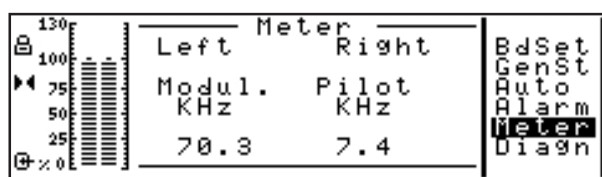


Figure 7-10

When the software is visualizing this menu, the VU meters in the left part of the display show the items that are selected in the menu (when the software is in any other menu, the VU-meters always show the modulation level). Note that when the software is in this menu, the audio and stereo alarms are momentarily inactive.

7.7 Diagnostics

Using this menu, the user can read a few values that can be useful to check the good working of the piece of equipment.

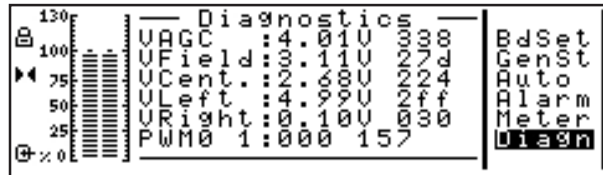


Figure 7-10

The reported values are the analog and digital representations of some internal voltages.

7.8 Power Supply

This menu displays the measurements of the different internal power supply voltages

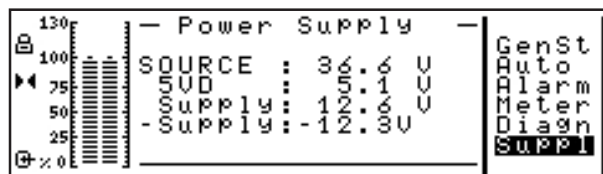


Figure 7-10

7.9 Stereo Set

Stereo decoder board setting menu. This menu will be present only if the stereo decoder option is provided.

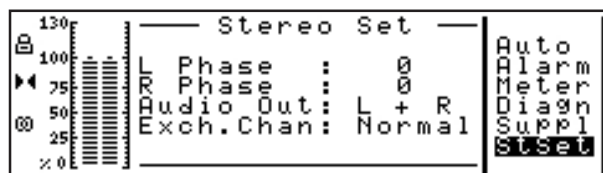


Figure 7-10

L Phase

Left channel phase setting, normal (0) or inverted (180).

R Phase

Right channel phase setting, normal (0) or inverted (180).

Audio Out

setting of the stereo decoder output. The possible choices are L & R or (L+R) / 2. In the first case, the decoder output will give the decoded signal, while in the second case on both channel there is the mono signal reconstructed by the decoder

Exch.Chan

this menu item permits to exchange the left and the right channels (Excha.) or to leave them unchanged (Normal)

8. Technical Specifications

8.1 Physical specifications

| | |
|-------------------|--------------------------------------|
| Panel Size | 483 mm (19") x 88 mm (3 1/2") (2 HE) |
| Depth | 377 mm |
| Peso | 10.7 Kg |
| Temperature range | -10 °C ÷ 50 °C |

8.2 Electrical Specifications

RF Section

| | |
|---------------------------|--|
| Frequency range | 87.5 MHz ÷ 108 MHz |
| Channel spacing | 10 kHz |
| Tuning | Sinthesized PLL |
| Frequency stability | ±1ppm from -10°C to 50°C |
| RF input connector | "N" type (optional 2 nd "N" type connector) |
| RF input impedance | 50 Ohm |
| Frequency setting | direct, software based |
| RF maximum input level | +23 dBm |
| Muting level | software selectable, 0 dBm to -100 dBm |
| IF | 10.7 MHz, 700 kHz |
| Image frequency rejection | > 80 dB |

MPX Operation

Output connectors (type, impedance, level)

1 BNC, 50 Ω, 18 dBu (in parallel with XLR)
 1 XLR, 50 Ω, 24 dBu
 1 BNC, 50 Ω, 0 dBu on 50 Ω, 6 dBu on
 600Ω, buffered output capable to drive a
 50 Ω load with 250 mt. cable

S/N (L and R channels, external measuring stereo decoder)

72 dB, RMS, filter 20 Hz - 20 kHz,
 deenph. 50 μs
 61 dB, QuPk, filter CCIR weighted,
 deenph. 50 μs

Amplitude/frequency response

± 0.07 dB (40 Hz ÷ 60 kHz)
 ± 0.5 dB (60 kHz ÷ 75 kHz)

Stereo separation (with external measuring stereo decoder)

> 55 dB (40 Hz ÷ 15 kHz)

Total harmonic distortion

< 0.1 %

Stereo operation (with optional stereo decoder)

Output connectors (type, impedance, level)

2 XLR, 50 Ω, 24 dBu

Sensitivity

< 200 μV
 for 54 dB S/N QuPk weighted CCIR filter,
 deenph. 50 μs

Dynamic selectivity at ± 300 kHz

35 dB

S/N

70 dB, RMS, filter 20 Hz - 20 kHz,
 deenph. 50 μs
 60 dB, QuPk, filter CCIR weighted,
 deenph. 50 μs

Amplitude/frequency response

± 0.25 dB (40 Hz ÷ 15 kHz)

| | |
|---------------------------|--------------------------|
| Stereo Separation | > 50 dB (40 Hz ÷ 15 kHz) |
| Deemphasys | 0, 25 µs, 50 µs, 75 µs |
| Total harmonic distortion | < 0.25 % |

Mono operation

Output connector (type, impedance, level)

XLR, 50 Ω, 24 dBu

| | |
|----------------------------------|--|
| Sensitivity | < 12 µV for 54 dB S/N QuPk filter CCIR weighted deemph. 50 µs |
| Dynamic selectivity at ± 300 kHz | 33 dB |
| S/N | 74 dB, RMS, filter 20 Hz - 20 kHz, deemph. 50 µs 61 dB, QuPk, filtro CCIR weighted, deemph. 50 µs |
| Amplitude/frequency response | ± 0.25 dB (40 Hz ÷ 15 kHz) |
| Deempasys | 0, 25 µs, 50 µs, 75 µs |
| Total harmonic distortion | < 0.1 % |

General characteristics

| | |
|-------------------|-------------------------------|
| Power supply | 170 V ÷ 250 V 90 V ÷ 135 V |
| Power consumption | < 50 VA |

Interfaces

| | |
|-----------|--|
| Serial | DB9, RS 232 DCE/DTE selectable optional RS 485 with external conversion |
| Telemetry | DB25 |

Options

| | |
|-----|-------------------------|
| /05 | Internal stereo decoder |
| /06 | Internal RDS decoder |
| /07 | Tunable RF front-end |

9. Internal Description

9.1 Modules Identification

Figure 9.1 represents the upper view of the receiver. In the following the different modules are enumerated.


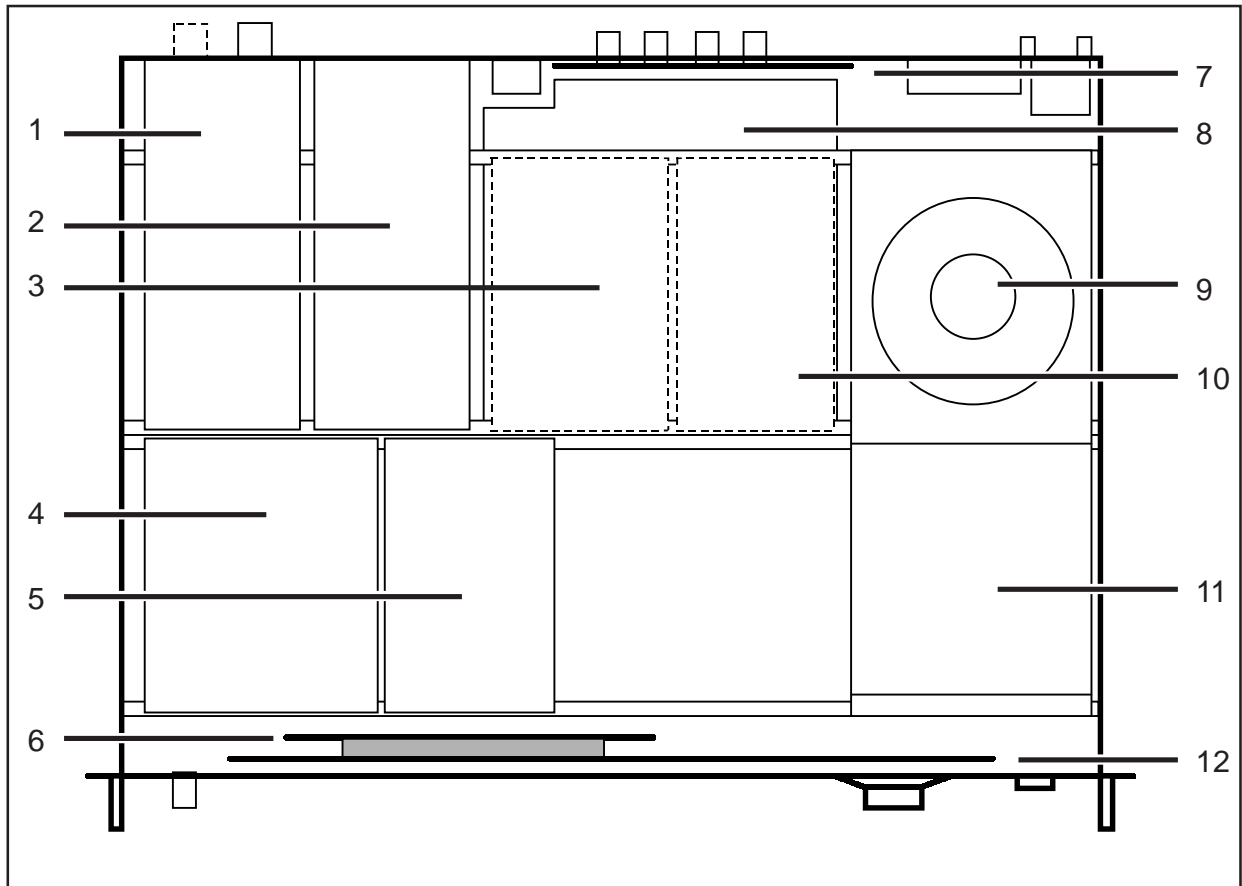


Figure 9-1

- [1] RF front-end
- [2] IF section 700 kHz
- [3] Stereo decoder board (option)
- [4] PLL/VCO section (the VCO box is on the lower side)
- [5] Discriminator
- [6] CPU board
- [7] Audio output board
- [8] Audio board (the component side is on the lower side)
- [9] Transformer
- [10] RDS decoder board (option)
- [11] Power supply (on the lower side)
- [12] Panel board

9.2 Configuration

The RX1-NV can have different options and configurations. The device's management software configures itself to correctly control the receiver on the basis of the presence or absence of some jumpers on the panel board:

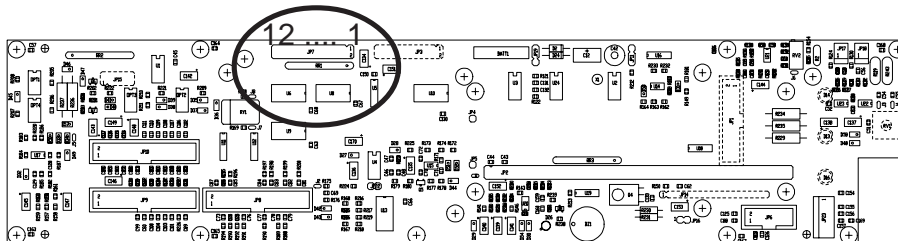

The configuration of the receiver is fixed by JP7 jumpers:

- [1,2] Reserved
- [3] Stereo decoder presence
- [4] RDS board present
- [5] Automatic alarms management
- [6] Tunable RF front-end presence
- [7] Digital visualisation (i.e. non analog) of the received signal level and muting level in the default menu
- [8 ... 12] Reserved

Please don't enable the management of options your receiver is not fit with, since this could cause mfunctions (jumpers 3, 4 and 6).

The automatic alarms management (jumper 5 closed) is particularly useful when the alarms board option is present, nevertheless it can be used without it.

The digital visualisation (jumper 7 closed) can be selected, if you want, independently from the options the receiver comprises.

9.3 Frequency setting for tuned front-end

The operation described in this chapter is necessary when one wants to change the working frequency of a receiver having the tuned version of the RF front-end.

This operation has to be performed by skilled personnel using suitable instrumentation; the suggested instruments are the following:

- a) Spectrum analyser with signal generator (Tracking)
- b) Precision stereo audio signal generator/analyser
- c) Radio signal generator with low distortion and external modulation input
- d) Isolated screwdriver to drive smd capacitance coils
- e) A 50 W coaxial cable terminated with a "N" connector and a "SMB" connector, to be used to connect the receiver's preamplifier output to the spectrum analyser.

- f) A 50 W coaxial cable terminated with a couple of "N" connectors, to link the output of the RF signal generator with the input of the receiver.
- g) A 50 W coaxial cable terminated with a "BNC" connector on one side, and a connector suitable for the signal input of the audio analyser on the other side.
- h) Coaxial cables adapted for the signal connection between RF signal generator and the audio signal generator/analyser.

The tuning procedure for the front-end is the following:

- Unscrew and remove both the receiver's covers
- Identify the RF front-end with the help of figure 9-1

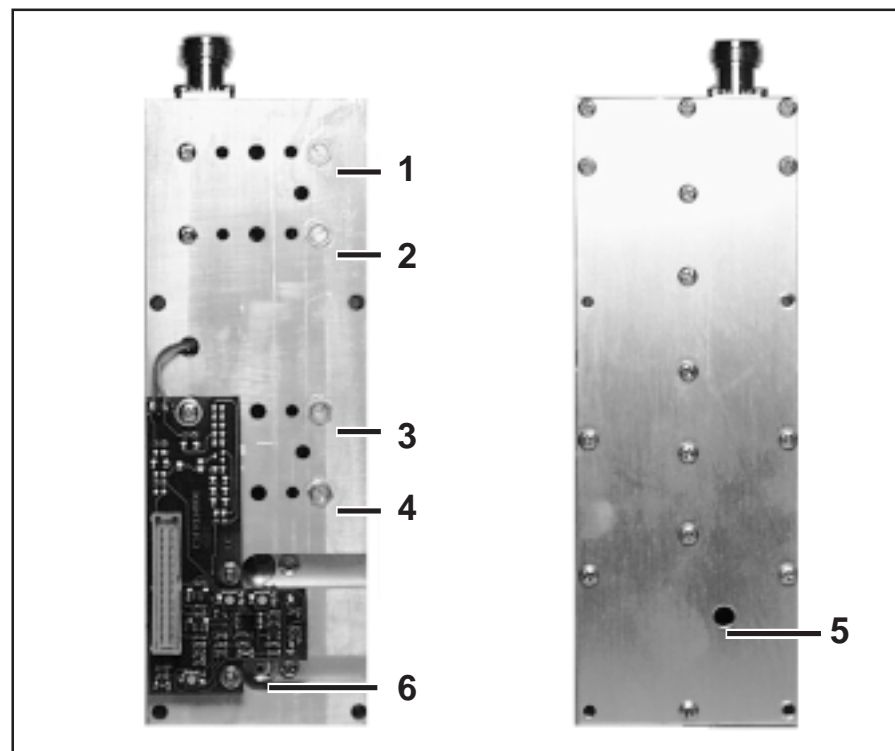


Figure 9-3

- Identify the five variable capacitances that will be used (Figure 9-3): the regulators 1,2,3 and 4 are on the bottom side of the receiver and have a screw-like look; the regulator 5 is a SMD capacitance trimmer mounted on the internal PCB and it is possible to operate on it with the proper screwdriver, without opening the box, through a hole.
- Set the spectrum analyser center frequency to the receiver's new working frequency, and the span shall be at least +/-10MHz.
- Set the tracking signal generator of the spectrum analyser to have a RF output power between -50dBm and -60dBm
- • Connect the signal generator to the receiver's antenna connector.
- In the receiver, disconnect the link between the RF front-end and the IF circuit. Use the SMB connector of the front-end that is now free (6, Figure 9-3) to connect it to the spectrum analyser. Switch on the receiver.

- Adjust all the trimmers so that the amplified signal reaches its maximum at the desired frequency: you should operate on the trimmer controlling the result on the spectrum analyzer. Trimmers 1-4 reduce the tuned frequency when turned clockwise, while trimmer 5 shall be turned left or right depending on the case. At the end of this operation, the signal gain should be between 28dB and 32dB.
- Narrow the frequency span of the spectrum analyser down to +/- 500 kHz.
- Fine-adjust the trimmers again, trying to obtain the best simmetry in the frequency response, while keeping the gain at its maximum value. The response shall be sensibly flat (< 1dB) in a +/- 200 kHz range around the tuning frequency.
- Reestablish the link between the input circuit and the IF circuit.
- The RF front-end at this point can be considered tuned. Before putting in place the receiver's covers, if you have the necessary instruments, you can measure the stereo separation and the distortion of the receiver. If they differ from the values described in the factory tests, very fine adjustments of the capacitance trimmers will improve them. Note that the regulations of this step have to be really fine, to avoid impacting the selectivity of the receiver maximized before at the spectrum analyzer.

Appendice A


Piani di montaggio, schemi elettrici, liste componenti / *Component layouts, schematics, bills of material*

Questa parte del manuale contiene i dettagli tecnici riguardanti la costruzione delle singole schede componenti il RX1-NV LCD. L'appendice è composta dalle seguenti sezioni:

This part of the manual contains the technical details about the different boards of the RX1-NV LCD. This appendix is composed of the following sections:

| Description | RVR Code Pages | Vers. | |
|------------------------|-------------------|-------|----|
| Schemi a blocchi | | 1.1 | 2 |
| Decoder RDS | CSRXRDSPIL02 | 1.1 | 8 |
| Sheda Audio | CSAUDRXLCD01 | 1.2 | 6 |
| Decoder Stereo | CSDECRXLCD01 | 1.1 | 8 |
| Filtro 19Khz | CSFIL19K01 | 1.2 | 4 |
| Ingresso Audio | AUDCNRTX01 | 1.1 | 4 |
| Alimentatore | PSSRLNEW | 1.1 | 4 |
| Demodulatore FM | SLFMD0001RXH | 1.3 | 4 |
| Interfaccia Relè | CSINTRXLCD01 | 1.2 | 4 |
| Buffer IF | CS107MONLCD | 1.1 | 4 |
| Doppia Conversione IF | CSIF0E7 | 1.2 | 4 |
| PLL | CSPLLRTX01 | 1.2 | 4 |
| VCO | SLVCORTXLCD01 | 1.2 | 4 |
| Scheda Pannello | SLSTLPANS001 | 1.3 | 6 |
| Scheda CPU | SLPTCPU55202 | 1.1 | 4 |
| Front-End RF | | 1.1 | 10 |
| | CSFRENDDC | 1.1 | |
| | FOUT100M | 1.1 | |
| | FLNA100M | 1.1 | |
| Front-End RF a Varicap | CSFRVARLCD01 | 1.1 | 4 |

*Pagina lasciata intenzionalmente in bianco
This page intentionally left blank*

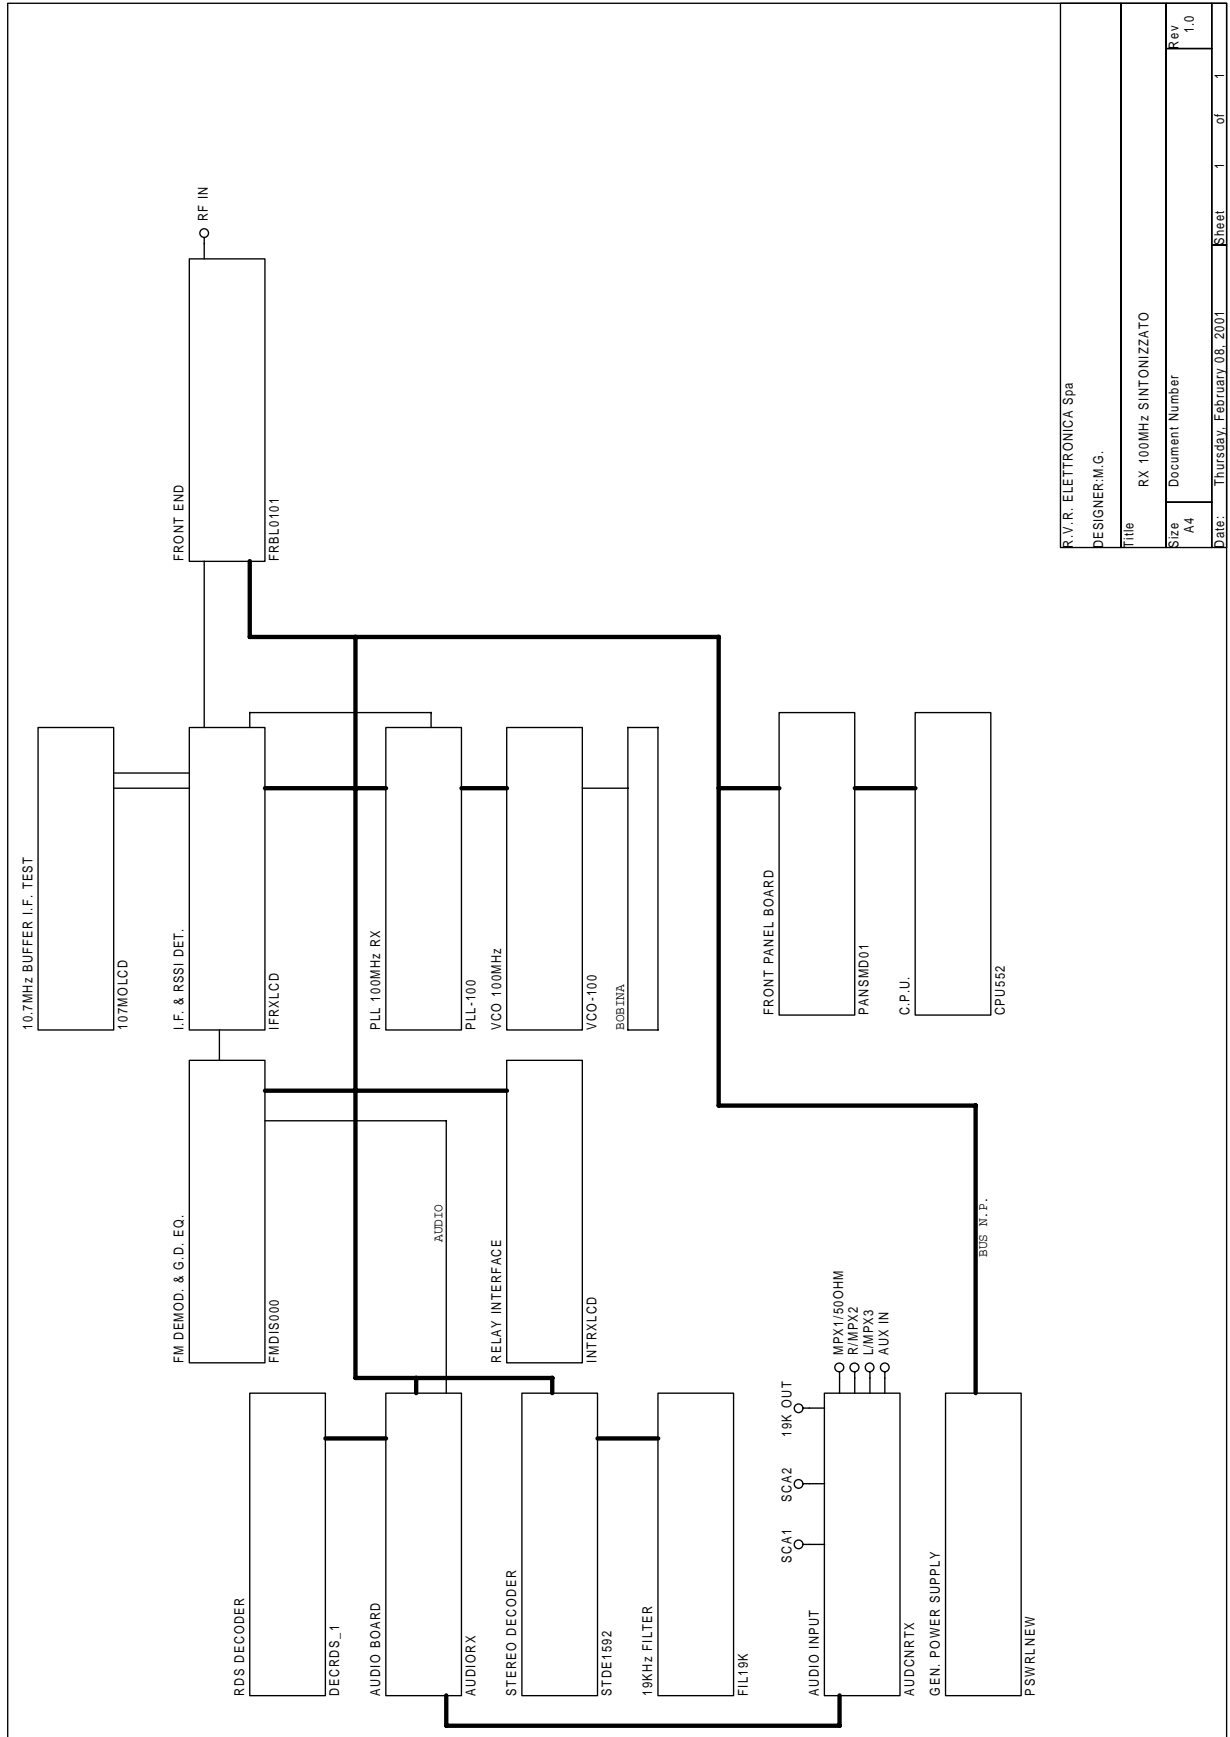

R.V.R. ELETTRONICA Spa

DESIGNER:M.G.


Title
RX 100MHz SINTONIZZATO

Size
A4

Rev
1.0

Date:
Thursday, February 08, 2001

Sheet
1 of 1

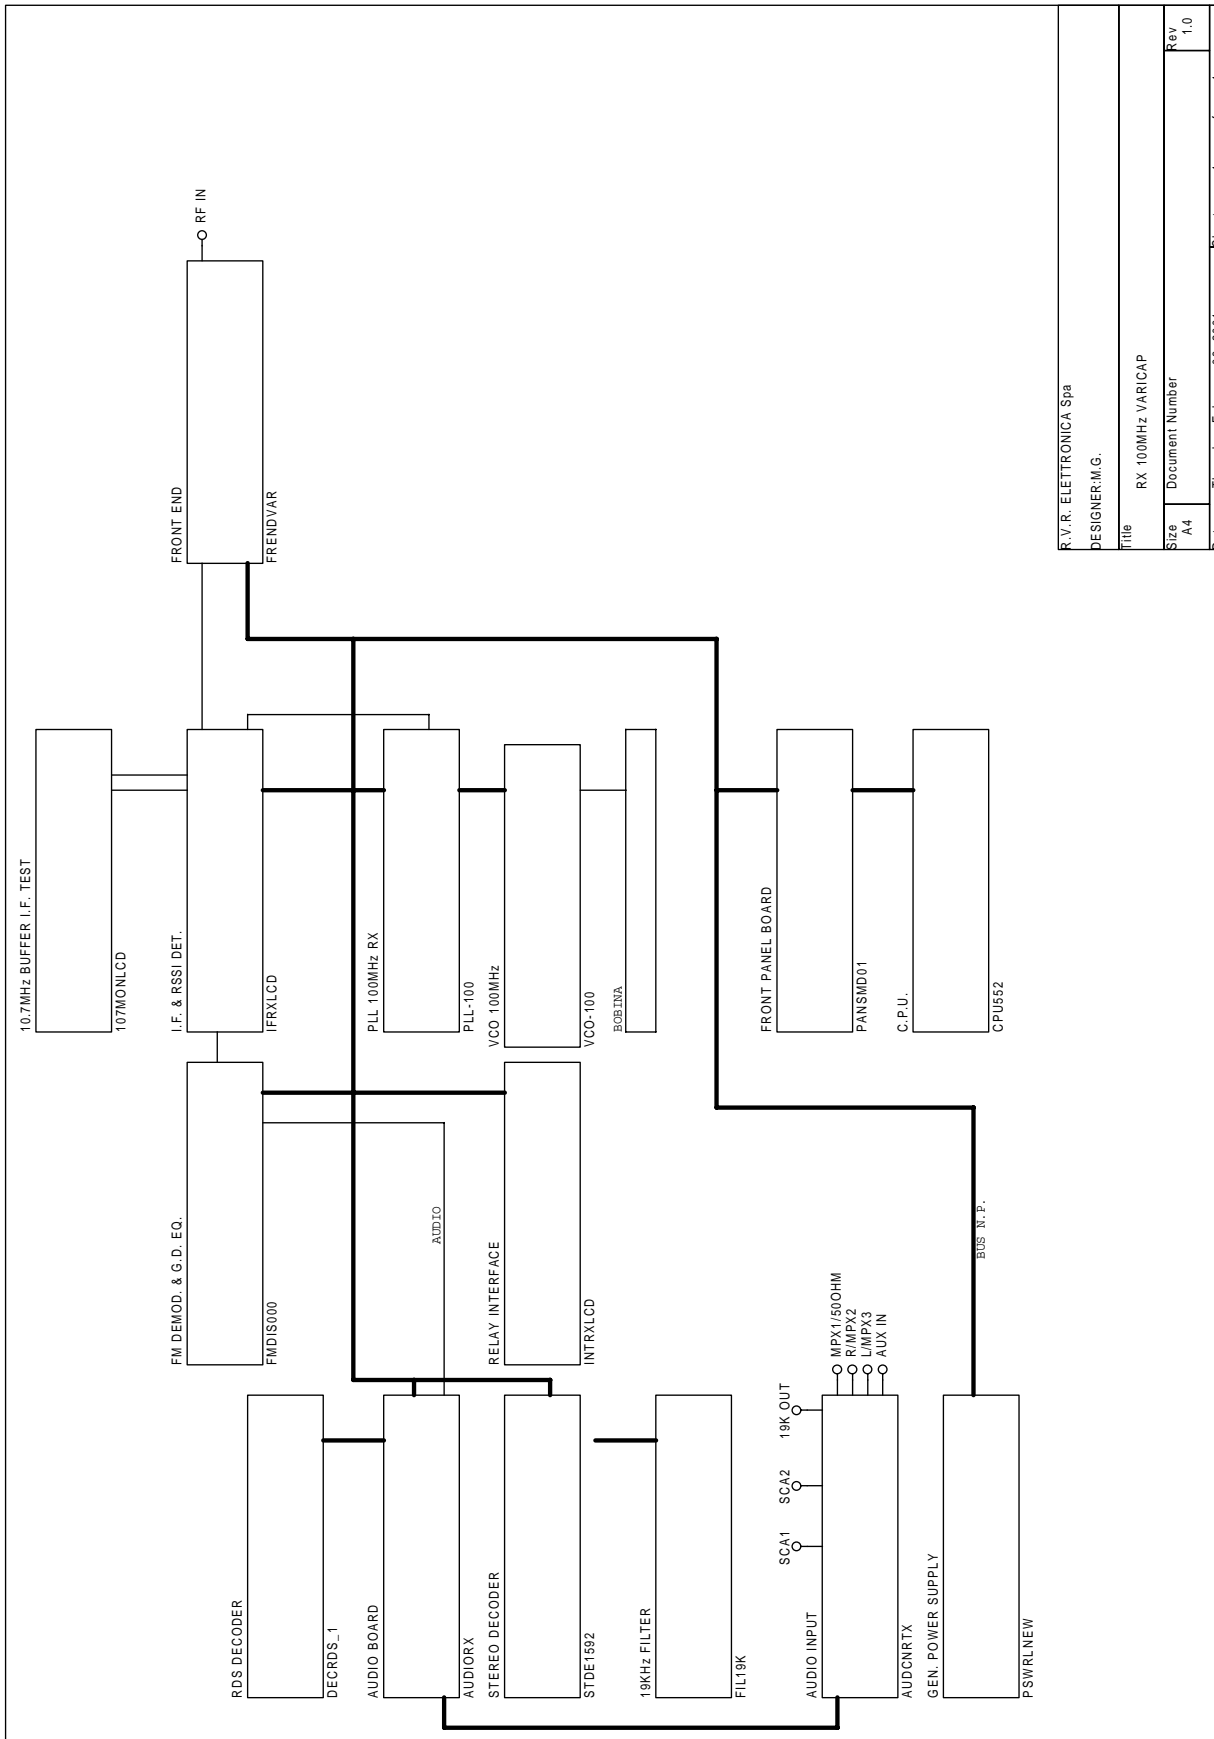

R.V.R. ELETTRONICA Spa

DESIGNER:M.G.


Title RX 100MHz VARICAP

Size A4 Document Number


Rev 1.0

Date: Thursday, February 08, 2001


Sheet 1 of 1

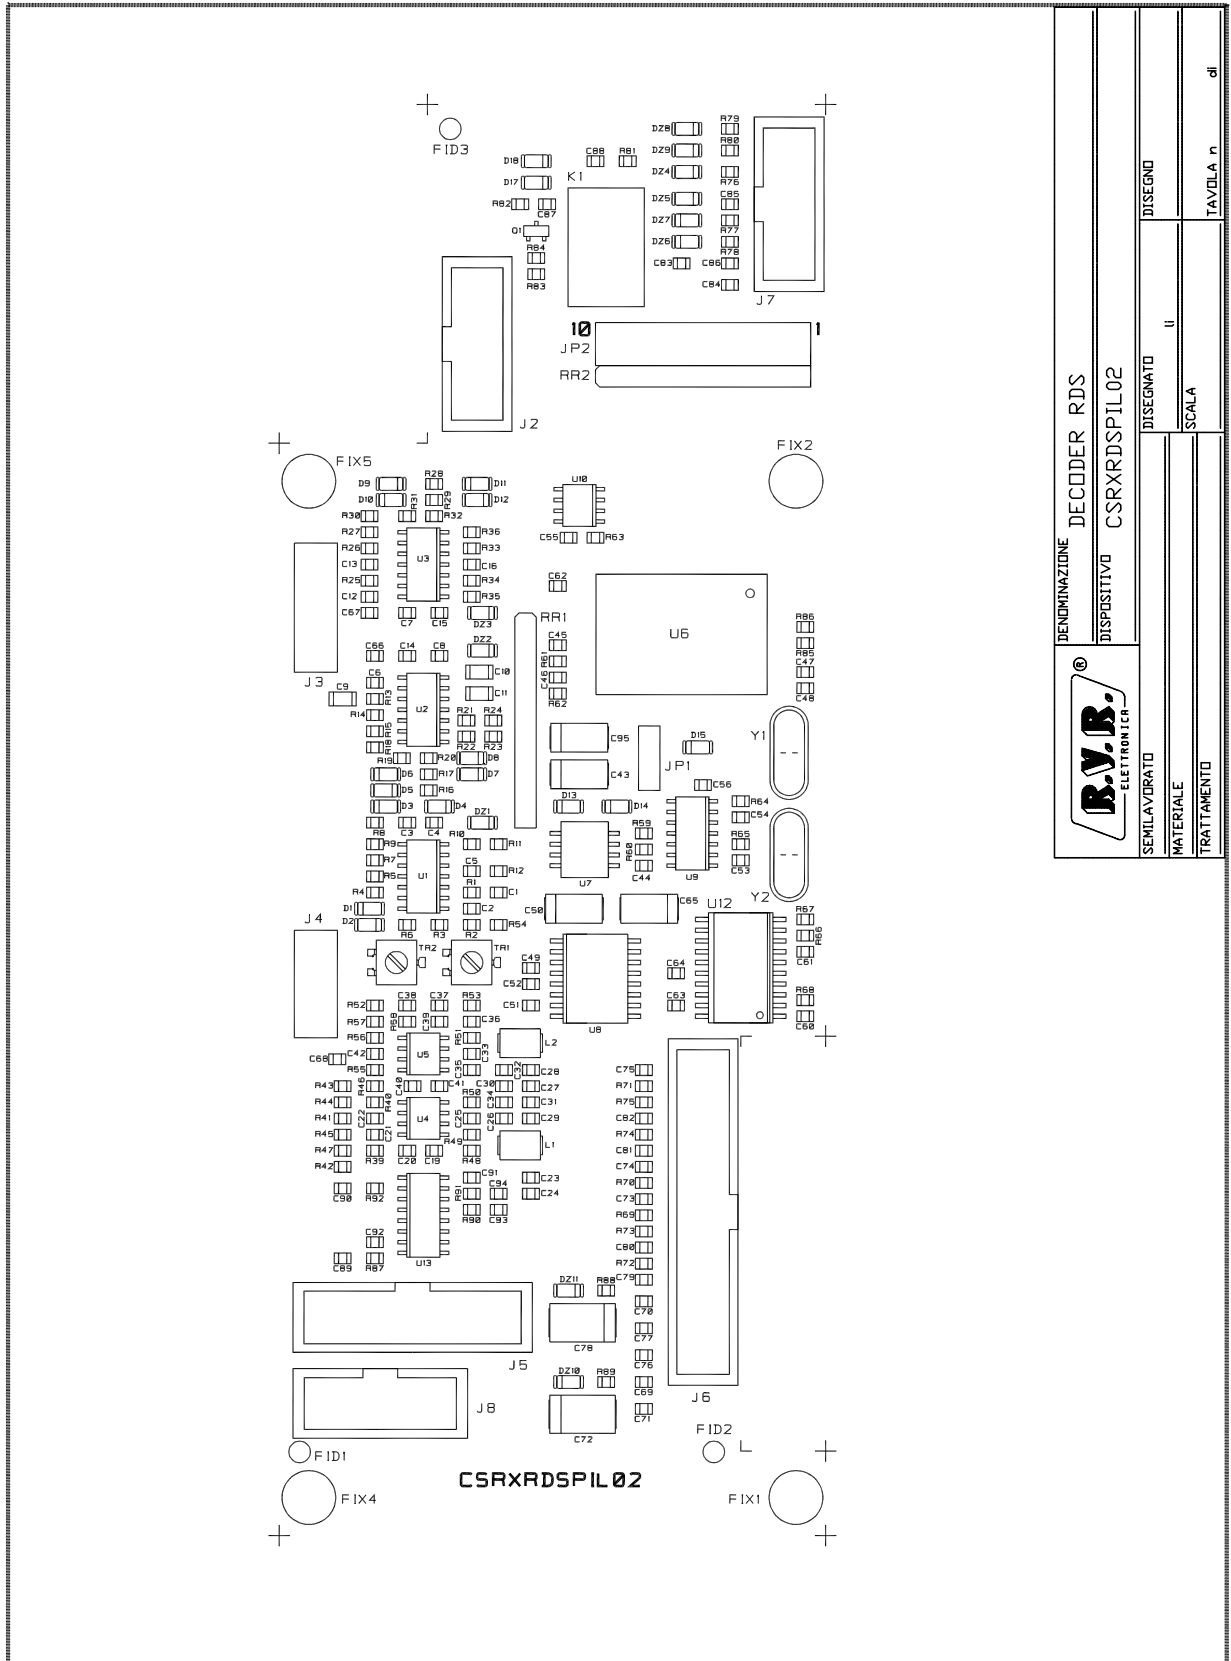


| | | | |
|---------------|--|--------------|--|
| DENOMINAZIONE | | DECODER RDS | |
| DISPOSITIVO | | CSRXRDSPIL02 | |
| SEMILAVORATO | | DISEGNATO | |
| MATERIALE | | II | |
| TRATTAMENTO | | SCALA | |
| | | TAVOLA n. di | |

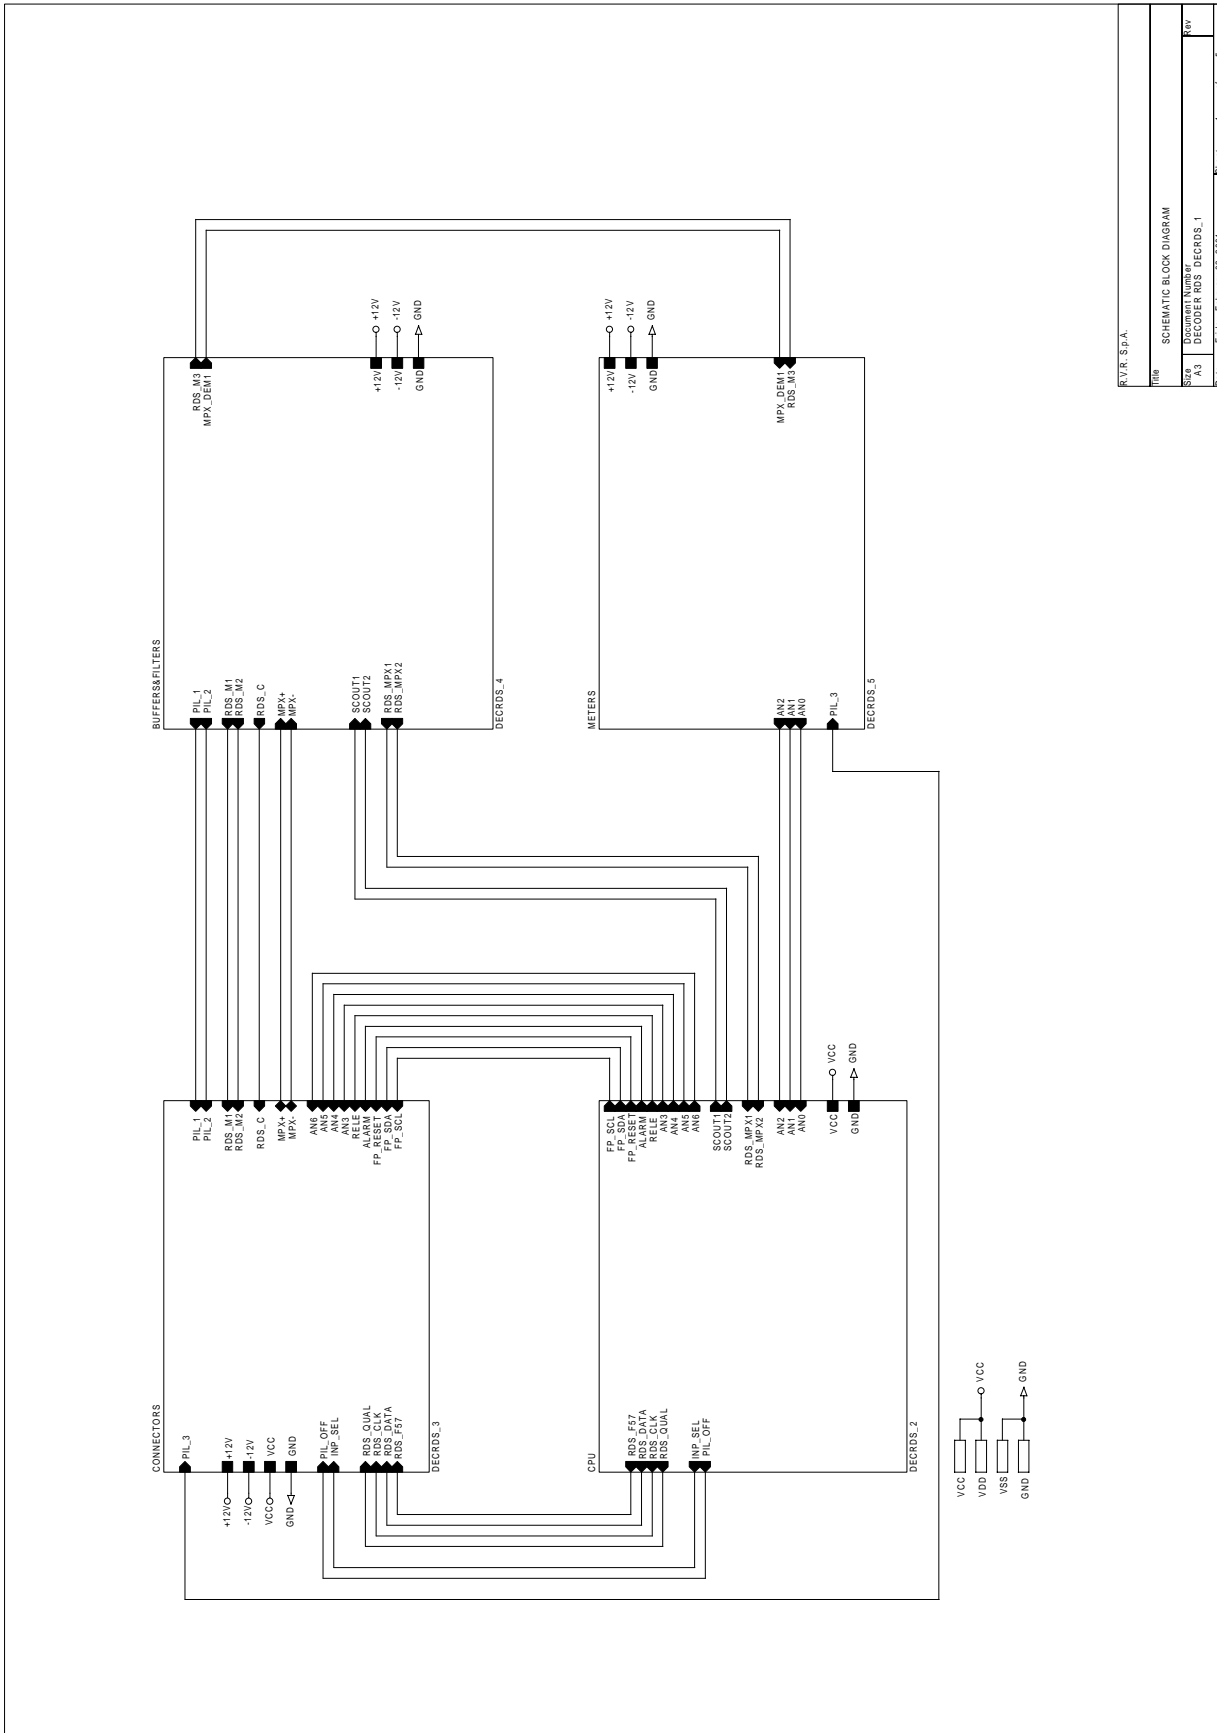


| | |
|---------------|---------------------------|
| R.V.R. S.p.A. | |
| Title | SCHEMATIC BLOCK DIAGRAM |
| Size | Document Number |
| A3 | DECODER R/S DECRDS_1 |
| Date | Friday, February 02, 2001 |
| Sheet | 1 of 5 |

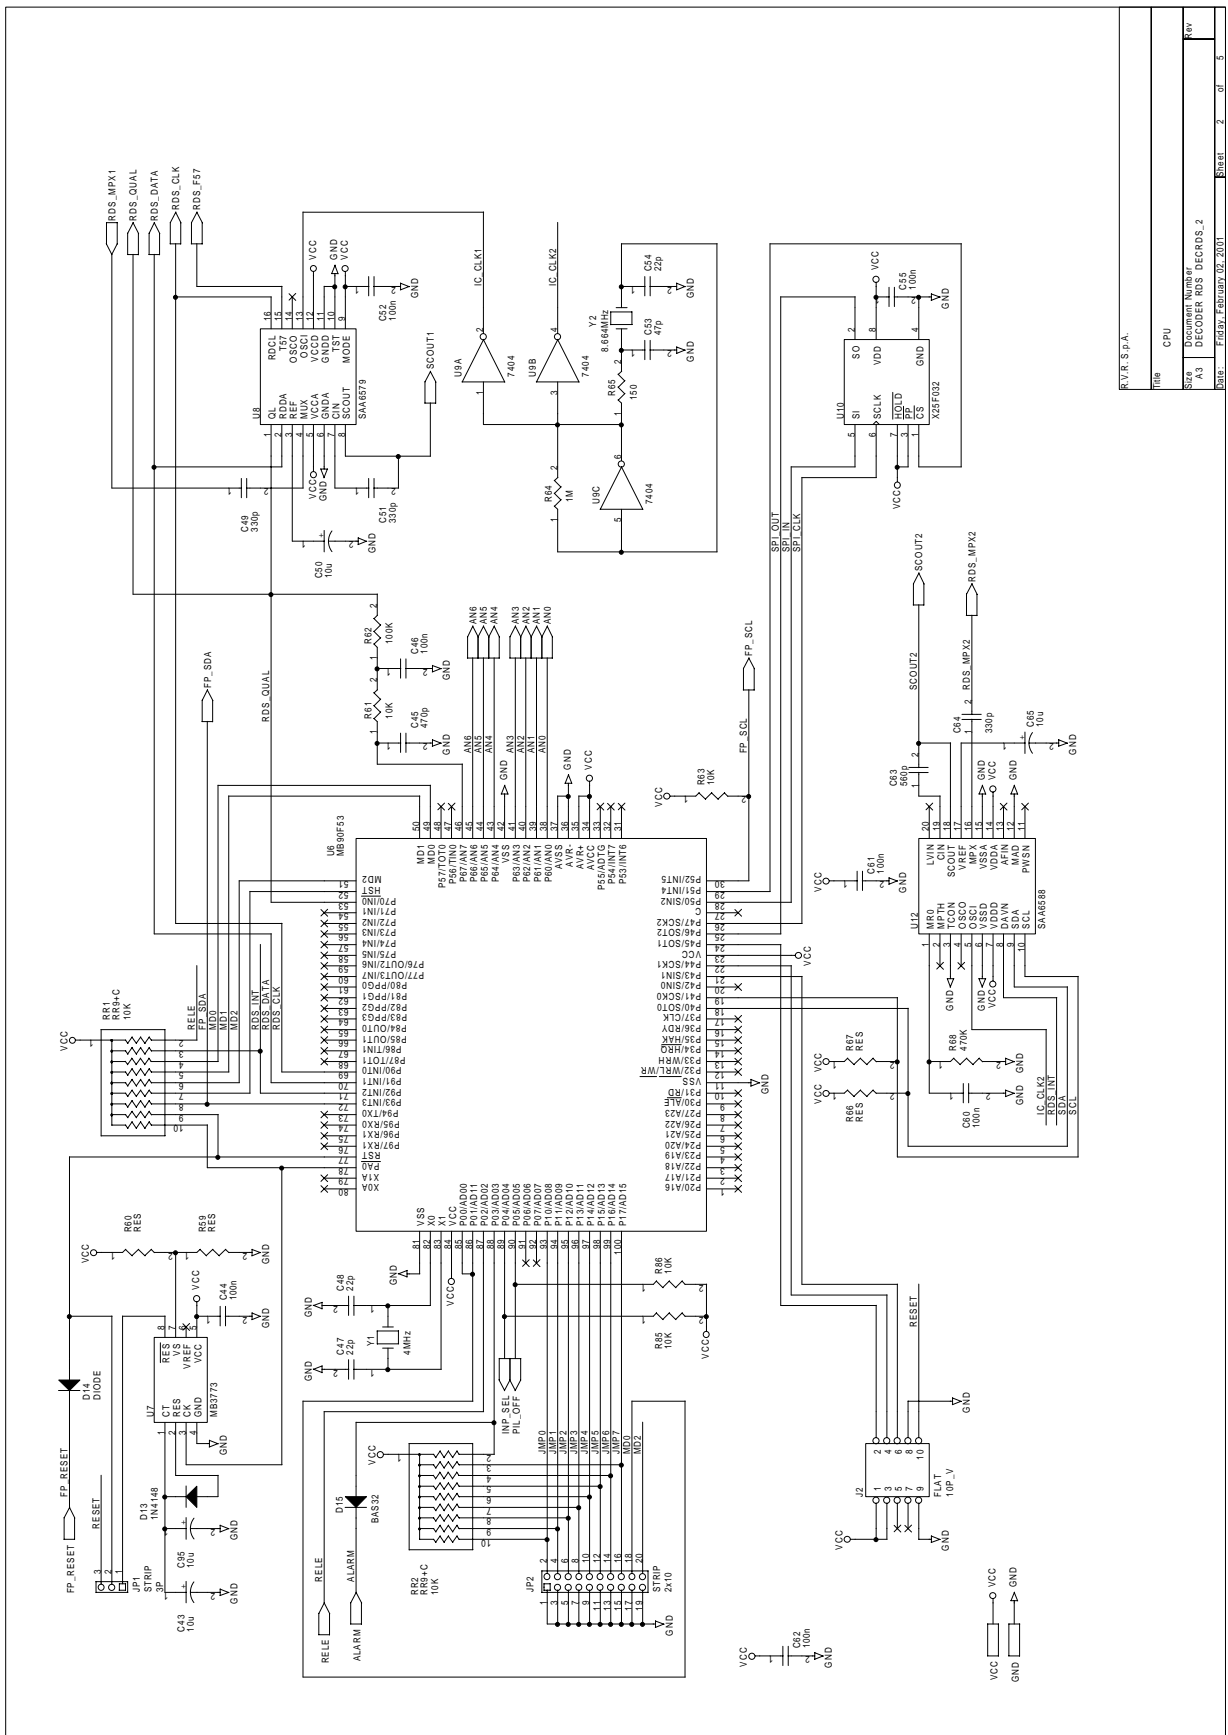


| | |
|-------|----------------------------|
| File | CPU |
| Size | Document Number: DECRRDS_2 |
| Rev | Rev |
| Date | Friday, February 02, 2001 |
| Sheet | 2 of 5 |

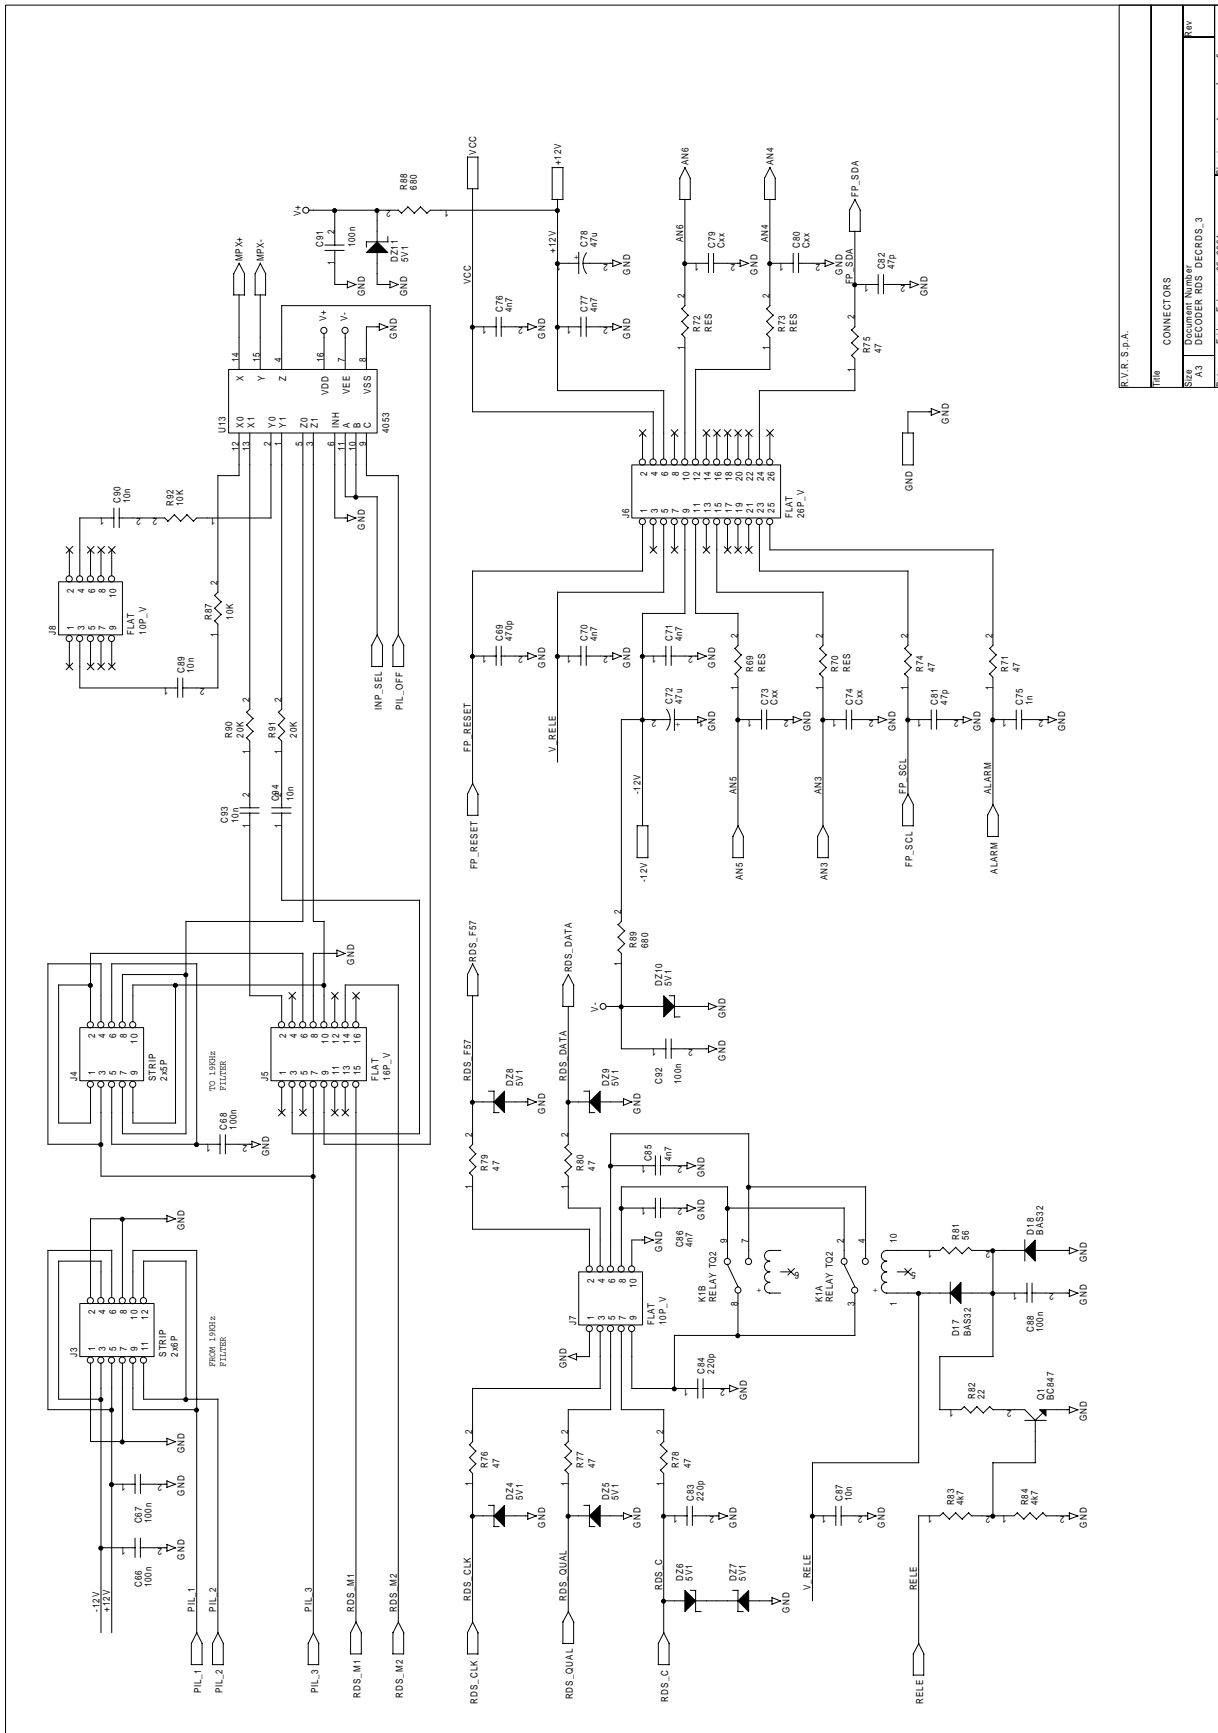

| | |
|---------------------------------|---------------------------|
| R.V.R. S.p.A. | |
| Title: CONNECTORS | |
| Size: A3 | Document Number: DECRDS_3 |
| Rev: 5 | Rev: 3 |
| Date: Friday, February 02, 2001 | |
| Sheet: 4 | of: 5 |

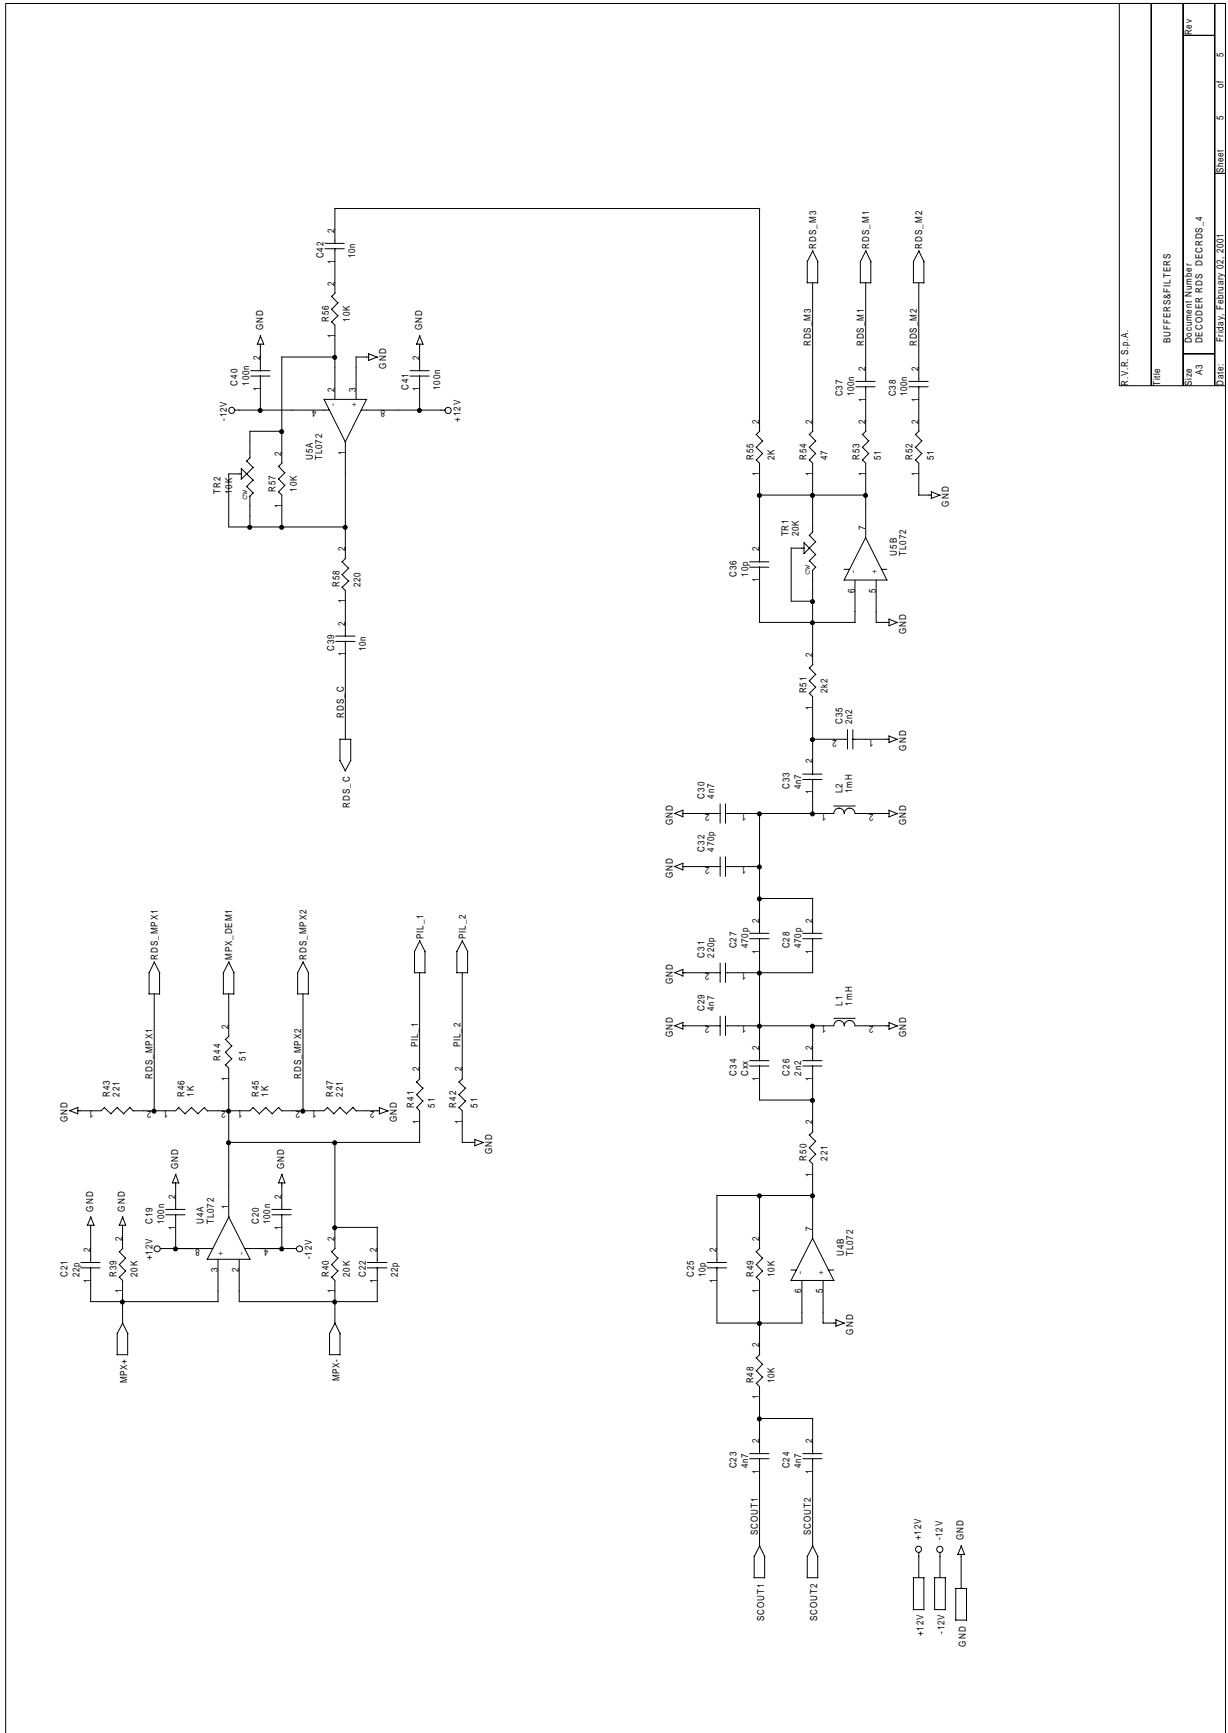

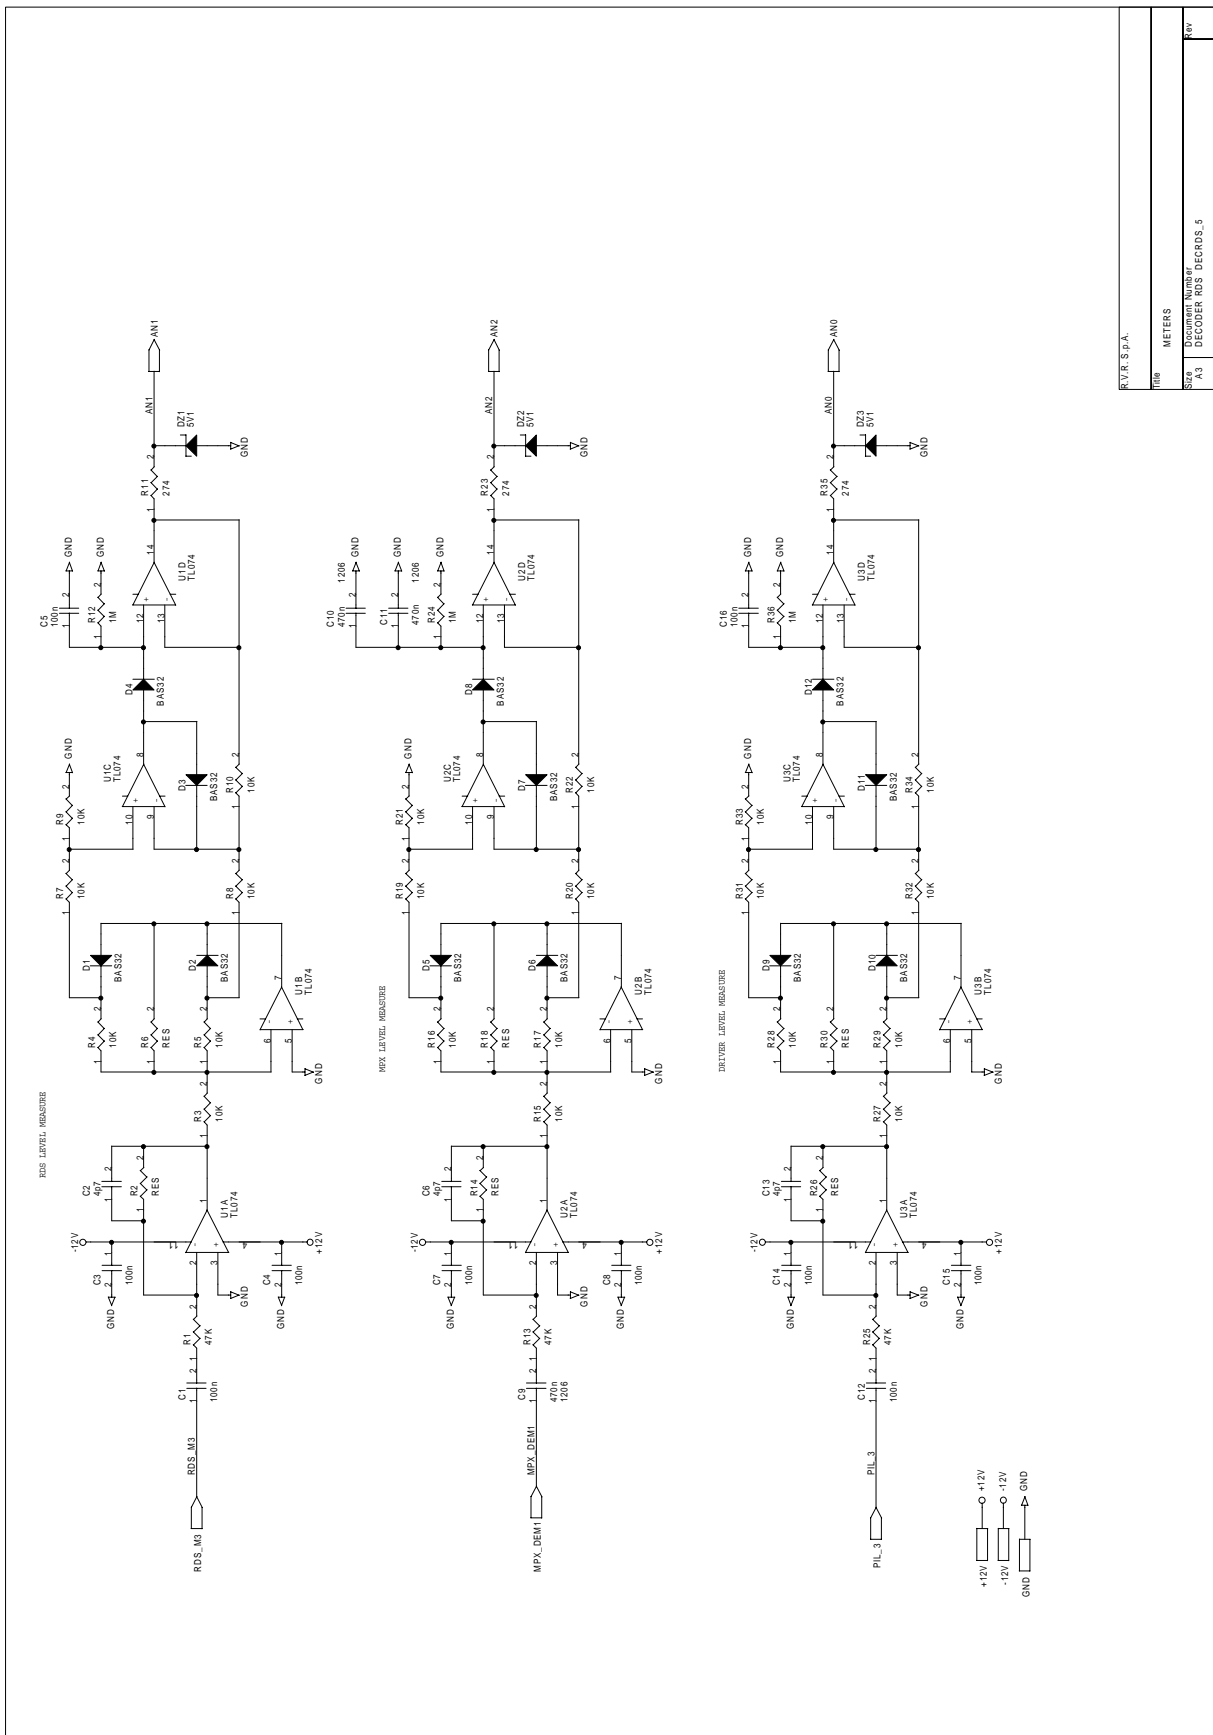

R.V.R. S.p.A.

Titolo METERS

Size Document Number
A3 DECODER RDS DECRDS_5

N°

di

3

di

5

Rev. Friday, February 02, 2001

Sheet

3

of

5

Rev.

5

of

5

Rev.

5

of

5

Rev.

5

of

5

Rev.

5

of

5

Rev.

5

of

5

Rev.

5

of

5

Rev.

5

of

5

Rev.

5

of

5

Rev.

5

of


5


Rev.


5

| RX1/RXRL-NV R.D.S. DECODER | | Bill Of Materials | | Page | 1 |
|----------------------------|--------|---|---------|-----------------------|------|
| Item | Quant. | Reference | Part | Description | Code |
| 1 | 30 | C1, C3, C4, C5, C7, C8, C12, C14, C15, C16, C19, C20, C37, C38, C40, C41, C44, C46, C52, C55, C56, C60, C61, C62, C66, C67, C68, C88, C91, C92 | .1u | COND. CHIP 0805 | |
| 2 | 3 | C2, C6, C13 | 4p7 | COND. CHIP 0805 | |
| 3 | 3 | C9, C10, C11 | .47u | COND. CHIP 1206 | |
| 4 | 5 | C21, C22, C47, C48, C54 | 22p | COND. CHIP 0805 | |
| 5 | 15 | C23, C24, C29, C30, C33, C70, C71, C73, C74, C76, C77, C79, C80, C85, C86 | 4n7 | COND. CHIP 0805 | |
| 6 | 2 | C25, C36 | 10p | COND. CHIP 0805 | |
| 7 | 2 | C26, C35 | 2n2 | COND. CHIP 0805 | |
| 8 | 5 | C27, C28, C32, C45, C69 | 470p | COND. CHIP 0805 | |
| 9 | 3 | C31, C83, C84 | 220p | COND. CHIP 0805 | |
| 10 | 8 | R2, R14, R26, C34, R59, R60, R66, R67 | * | | |
| 11 | 7 | C39, C42, C87, C89, C90, C93, C94 | 10n | COND. CHIP 0805 | |
| 12 | 4 | C43, C50, C65, C95 | 10u | COND. EL. SMD16V | |
| 13 | 3 | C49, C51, C64 | 330p | COND. CHIP 0805 | |
| 14 | 3 | C53, C81, C82 | 47p | COND. CHIP 0805 | |
| 15 | 1 | C63 | 560p | COND. CHIP 0805 | |
| 16 | 2 | C72, C78 | 47u | COND. EL. SMD16V | |
| 17 | 1 | C75 | 1n0 | COND. CHIP 0805 | |
| 18 | 11 | DZ1, DZ2, DZ3, DZ4, DZ5, DZ6, DZ7, DZ8, DZ9, DZ10, DZ11 | DZ5V1 | DIODO ZENER SMD 5V1 | |
| 19 | 17 | D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, D17, D18 | 4148S | DIODO SIL. MINIMELF | |
| 20 | 4 | FIX1, FIX2, FIX4, FIX5 | FIX35 | | |
| 21 | 1 | JP1 | JP3 | STRIP M 2.54 3PIN | |
| 22 | 1 | JP2 | CN20PDF | STRIP F 2X2.54 20 PIN | |
| 23 | 3 | J2, J7, J8 | CN10PD | CONN. M 2X2.54 10PIN | |
| 24 | 1 | J3 | CN12PDF | STRIP F 2X2.54 12 PIN | |
| 25 | 1 | J4 | CN10PDF | STRIP F 2X2.54 10 PIN | |
| 26 | 1 | J5 | CN16PD | CONN. M 2X2.54 16PIN | |


| | | | | |
|----|----|---|-----------|----------------------|
| 27 | 1 | J6 | CN26PD | CONN. M 2X2.54 26PIN |
| 28 | 1 | K1 | RLYTQ212V | RELE' TQ2 12V |
| 29 | 2 | L2, L1 | 1mH | IMPEDEZZA SMD 1812 |
| 30 | 1 | Q1 | BC847 | TRANSISTOR SOT23 |
| 31 | 2 | RR1, RR2 | RR9+C 10K | RES. SMD 0805 5% |
| 32 | 3 | R1, R13, R25 | 47K | RES. SMD 0805 5% |
| 33 | 31 | R3, R4, R5, R7, R8, R9, R10, R15, R16, R17, R19, R20, R21, R22, R27, R28, R29, R31, R32, R33, R34, R48, R49, R56, R57, R61, R63, R85, R86, R87, R92 | 10K | RES. SMD 0805 5% |
| 34 | 7 | R6, R12, R18, R24, R30, R36, R64 | 1M0 | RES. SMD 0805 5% |
| 35 | 3 | R11, R23, R35 | 270 | RES. SMD 0805 5% |
| 36 | 4 | R39, R40, R90, R91 | 20K0 | RES. SMD 0805 1% |
| 37 | 7 | R41, R42, R44, R52, R53, R54, R81 | 51H | RES. SMD 0805 5% |
| 38 | 4 | R43, R47, R50, R58 | 220 | RES. SMD 0805 5% |
| 39 | 2 | R46, R45 | 1K0 | RES. SMD 0805 5% |
| 40 | 2 | R51, R55 | 2K2 | RES. SMD 0805 5% |
| 41 | 1 | R62 | 100K | RES. SMD 0805 5% |
| 42 | 1 | R65 | 150 | RES. SMD 0805 5% |
| 43 | 1 | R68 | 470K | RES. SMD 0805 5% |
| 44 | 6 | R69, R70, R72, R73, R83, R84 | 4K7 | RES. SMD 0805 5% |
| 45 | 8 | R71, R74, R75, R76, R77, R78, R79, R80 | 47H | RES. SMD 0805 5% |
| 46 | 1 | R82 | 22H | RES. SMD 0805 5% |
| 47 | 2 | R88, R89 | 680 | RES. SMD 0805 5% |
| 48 | 1 | TR1 | 20KTRIM4 | TRIM.4X4mm SMD 20K |
| 49 | 1 | TR2 | 10KTRIM4 | TRIM.4X4mm SMD 10K |
| 50 | 3 | U1, U2, U3 | TL074S | CI LIN. TL074SMD |
| 51 | 2 | U4, U5 | TL072S | CI LIN. TL072SMD |
| 52 | 1 | U6 | MB90F53 | CI DIG. MB90F53 |
| 53 | 1 | U7 | MB3773S | CI DIG. MB3773SMD |
| 54 | 1 | U8 | SAA6579S | CI DIG. SAA6579SMD |
| 55 | 1 | U9 | 74HC04S | CI DIG. 74HC04SMD |
| 56 | 1 | U10 | X25F032 | CI DIG. X25F032SMD |
| 57 | 1 | U12 | SAA6588S | CI DIG. SAA6588SMD |
| 58 | 1 | U13 | 4053S | CI DIG. 4053SMD |
| 59 | 1 | Y1 | Q4M00 | QUARZO 4.00MHz HC18 |
| 60 | 1 | Y2 | Q8M664 | QUARZO 8.664MHz HC18 |

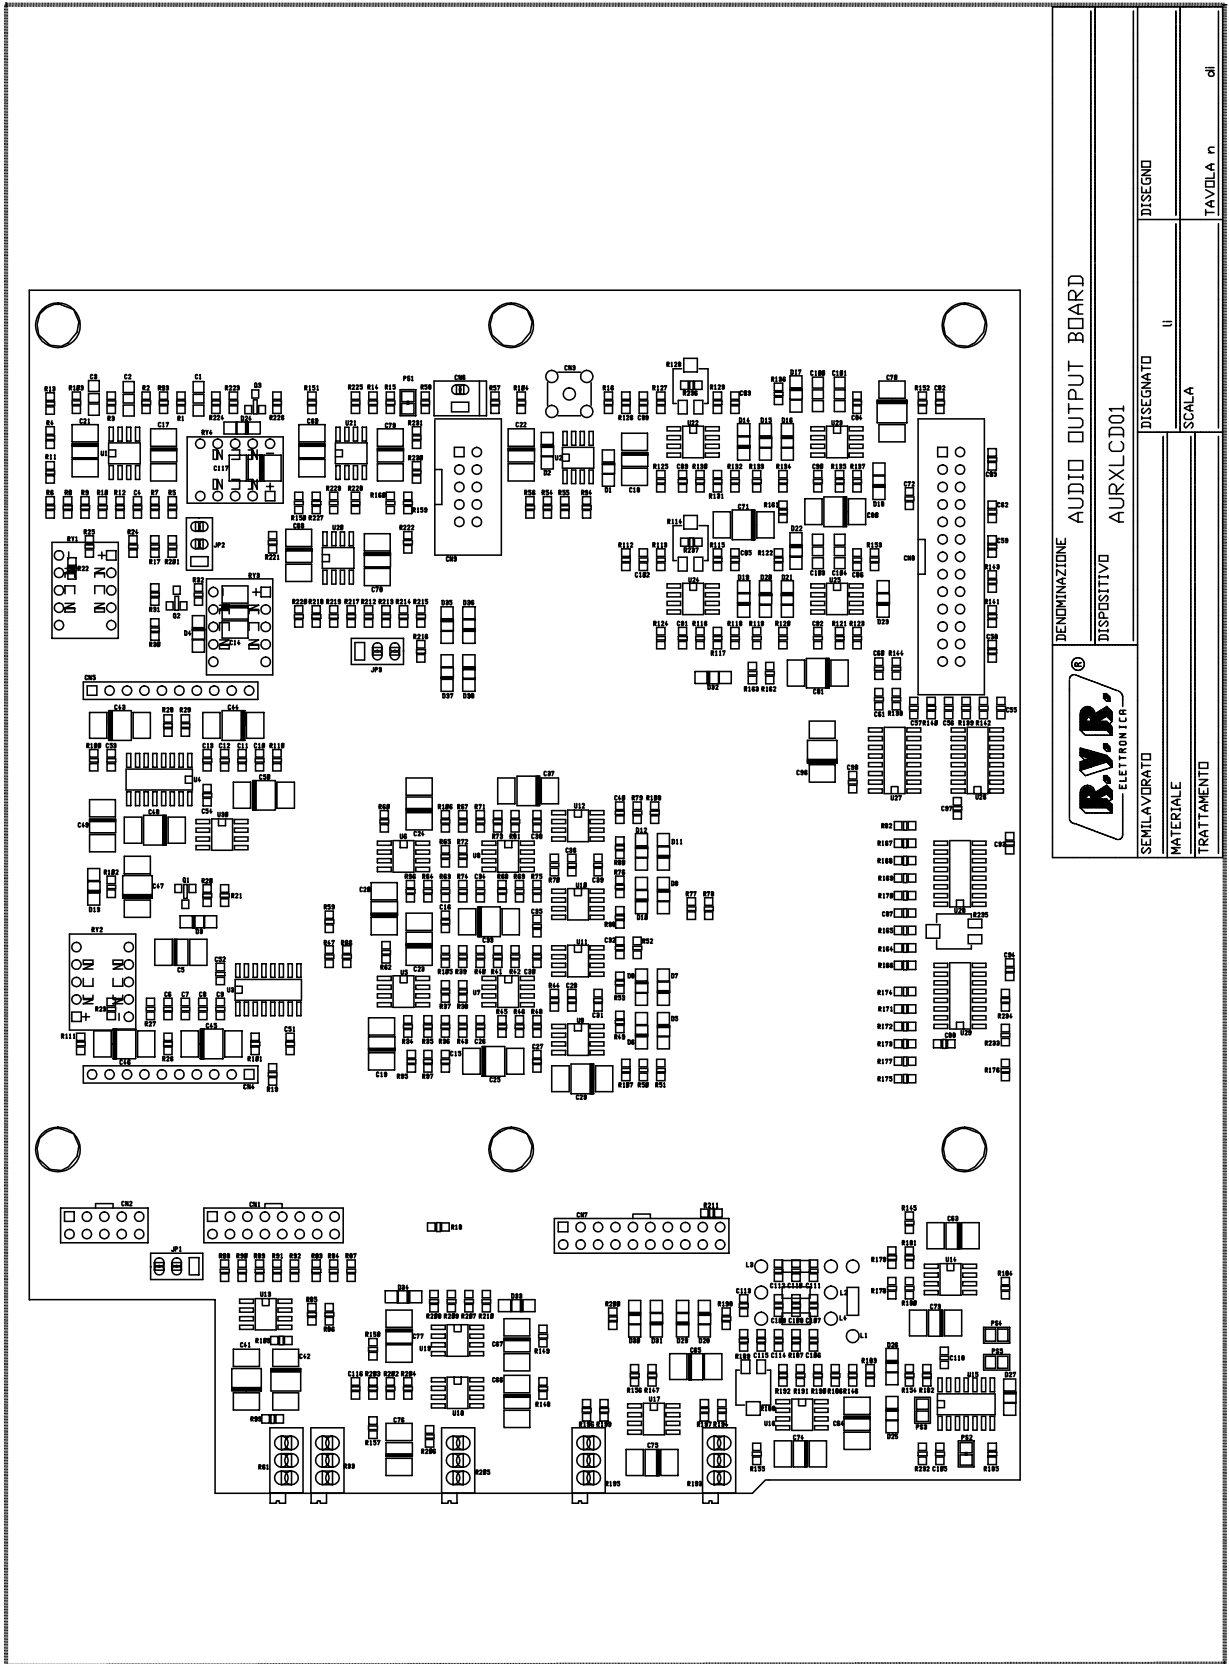

| | | | |
|--|--|--------------------|--|
|  | | DENOMINAZIONE | |
| SEMILAVORATO | | AUDIO OUTPUT BOARD | |
| MATERIALE | | DISPOSITIVO | |
| TRATTAMENTO | | AURXLCD01 | |
| SCALA | | DISEGNATO | |
| II | | TAVOLA n | |
| di | | | |

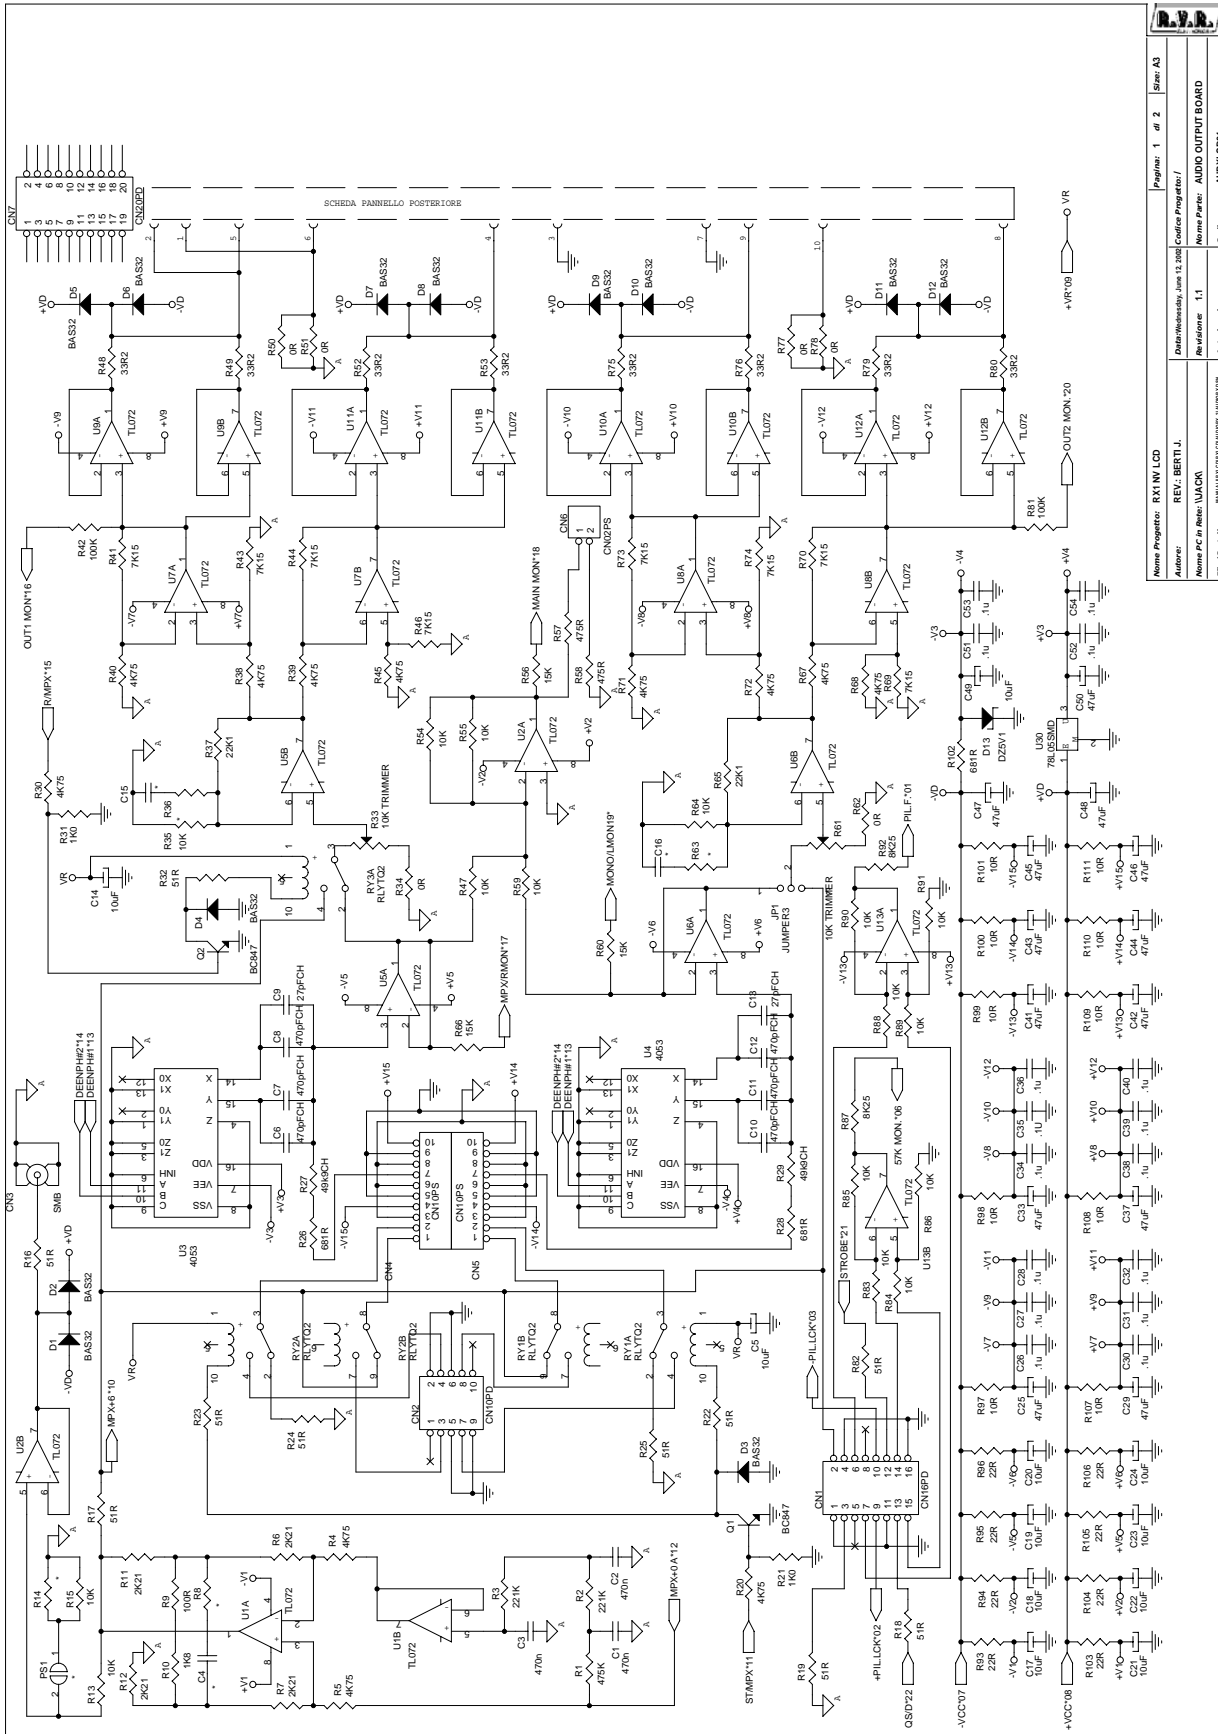

| | |
|---------------------|--|
| Nome Progetto: | RX1 NV LCD |
| Autore: | REV: BERT J. |
| Data/Versione: | June 12, 2002 Codice Progetto / Revisione: 1.1 |
| Nome PC File: | UACK |
| Autore/Disegnatore: | UACK |
| File/Catena: | AURXLCD01 |
| Page: | 1 of 2 |
| Sheet: | A3 |

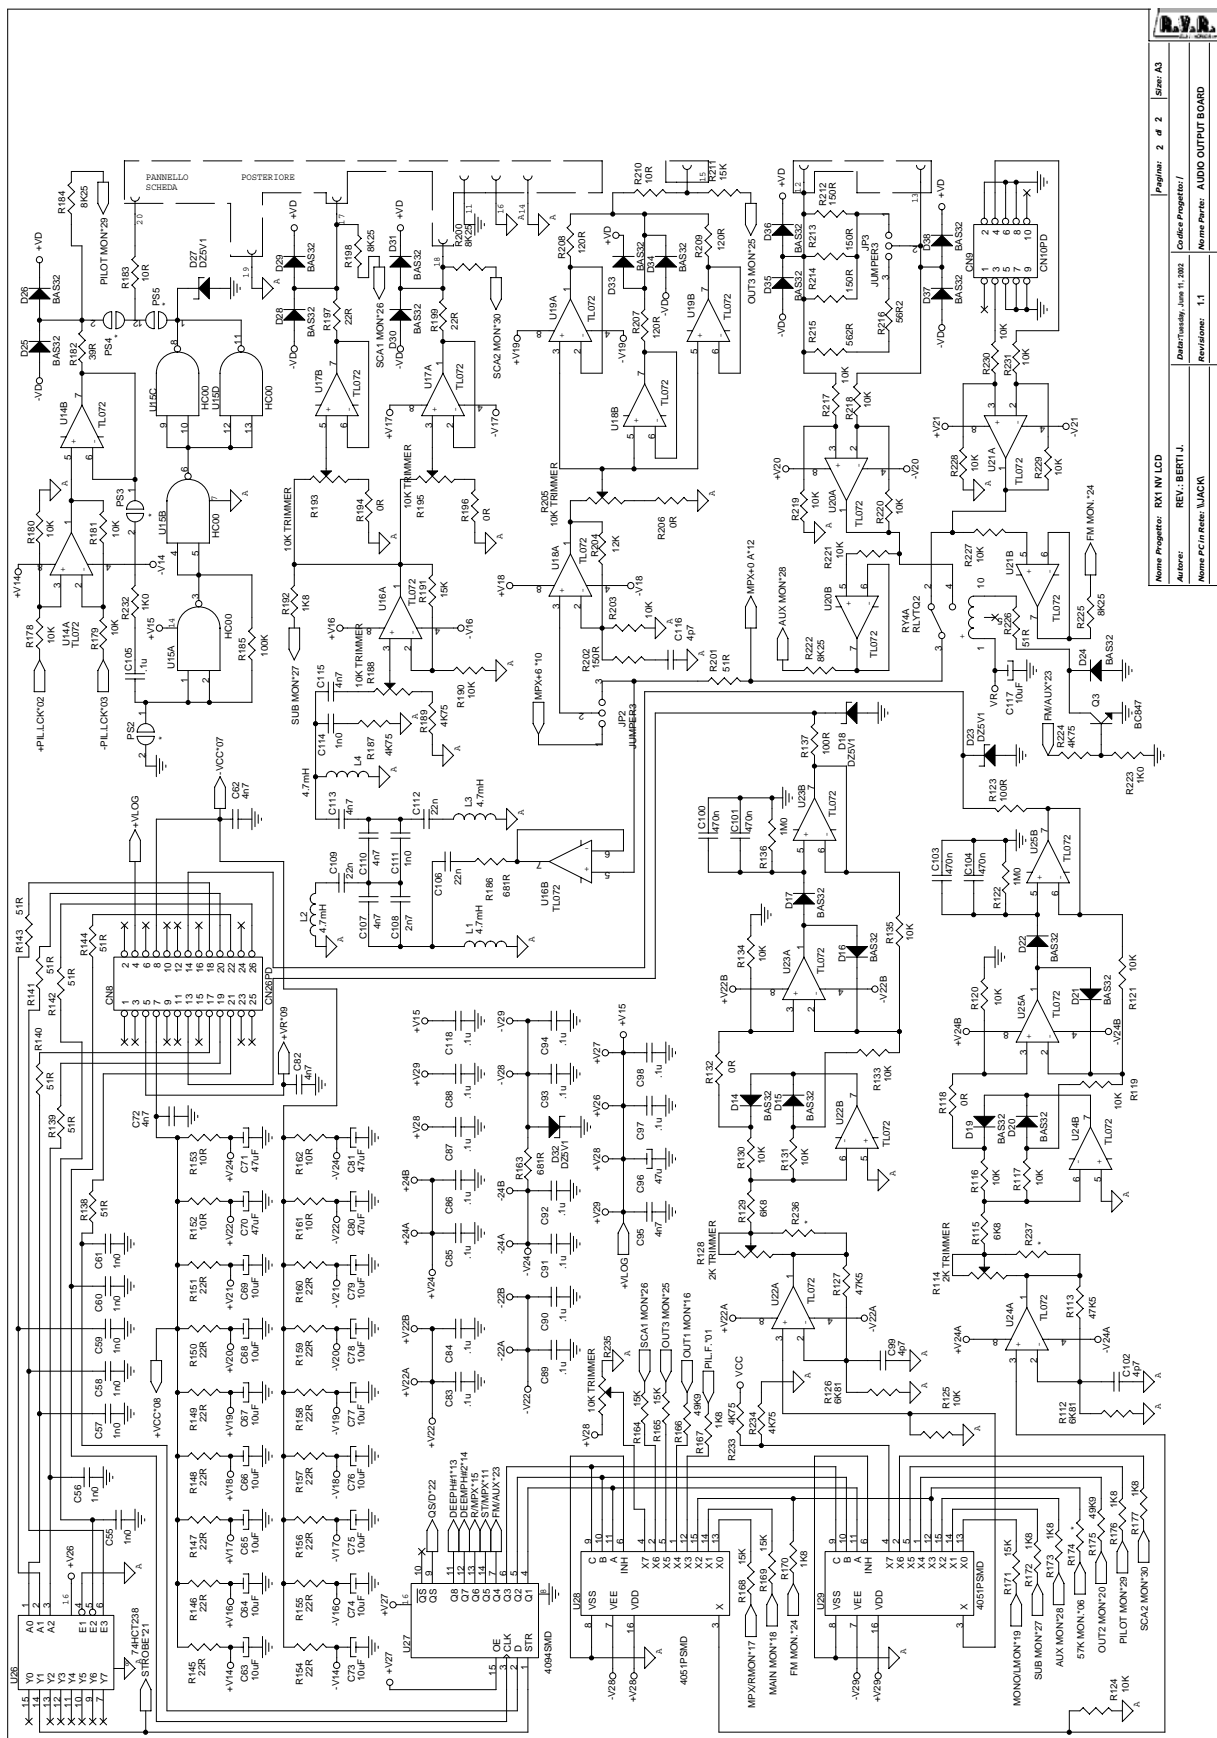



| | | | |
|---------------------------|--|-------------------------------|--|
| Nome Progetto: RX1 NV LCD | | Pagina: 2 di 2 | |
| Autore: REV. BERTI J. | | Data: Tuesday, June 11, 2002 | |
| Nome File: RX1 NV LCD | | Nome Part: AUDIO OUTPUT BOARD | |
| Rev/Version: 1.1 | | Autorezzazione: | |
| File/Carichi: | | Controlli: | |


| Item | Quant. | Reference | Part | Description | Code |
|------|--------|--|---------|----------------------|------|
| 1 | 1 | CN1 | CN16PD | CONN. M 2X2.54 16PIN | |
| 2 | 2 | CN2, CN9 | CN10PD | CONN. M 2X2.54 10PIN | |
| 3 | 1 | CN3 | SMB_CS | CONN.SMB A STAMPATO | |
| 4 | 2 | CN4, CN5 | CN10PSF | STRIP F 2.54 10 PIN | |
| 5 | 1 | CN6 | CN02MPS | CONN. MOLEX 2.54 02P | |
| 6 | 1 | CN7 | CN20PD | CONN. M 2X2.54 20PIN | |
| 7 | 1 | CN8 | CN26PD | CONN. M 2X2.54 26PIN | |
| 8 | 7 | C1, C2, C3, C100, C101, C103, C104 | .47u | COND. CHIP 1206 | |
| 9 | 15 | PS1, PS2, PS3, PS4, C4, PS5, R8, R14, C15, C16, R36, R63, R236, R237, R174 | * | | |
| 10 | 26 | C5, C14, C17, C18, C19, C20, C21, C22, C23, C24, C49, C63, C64, C65, C66, C67, C68, C69, C73, C74, C75, C76, C77, C78, C79, C117 | 10u | COND. EL. SMD16V | |
| 11 | 8 | C115, C62, C72, C82, C95, C107, C110, C113 | 4n7 | COND. CHIP 0805 | |
| 12 | 6 | C6, C7, C8, C10, C11, C12 | 27pFCH | COND. CHIP 0805 | |
| 13 | 1 | C108 | 2n7 | COND. CHIP 0805 | |
| 14 | 18 | C25, C29, C33, C37, C41, C42, C43, C44, C45, C46, C47, C48, C50, C70, C71, C80, C81, C96 | 47u | COND. EL. SMD16V | |
| 15 | 32 | C26, C27, C28, C30, C31, C32, C34, C35, C36, C38, C39, C40, C51, C52, C53, C54, C83, C84, C85, C86, C87, C88, C89, C90, C91, C92, C93, C94, C97, C98, C105, C118 | .1u | COND. CHIP 0805 | |
| 16 | 9 | C55, C56, C57, C58, C59, C60, C61, C111, C114 | 1n0 | COND. CHIP 0805 | |
| 17 | 3 | C99, C102, C116 | 4p7 | COND. CHIP 0805 | |
| 18 | 3 | C106, C109, C112 | 22n | COND. CHIP 0805 | |
| 19 | 33 | D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D14, D15, D16, D17, D19, D20, D21, D22, D24, D25, D26, D28, D29, D30, D31, D33, D34, D35, D36, D37, D38 | BAS32 | DIODO SIL. MIMIMELF | |

| | | | | | |
|----|----|---|-----------|---------------------|----|
| 20 | 5 | D13,D18,D23,D27, D32 | DZ5V1 | DIODO ZENER SMD 5V1 | |
| 21 | 3 | JP1,JP2,JP3 | JP3 | STRIP M 2.54 3PIN | |
| 22 | 4 | L1,L2,L3,L4 | 4m7H | RF CHOKE | |
| 23 | 3 | Q1,Q2,Q3 | BC847 | TRANSISTOR SOT23 | |
| 24 | 4 | RY1,RY2,RY3,RY4 | RLYTQ212V | RELE' TQ2 12V | |
| 25 | 1 | R1 | 475K | RES. SMD 0805 1% | |
| 26 | 2 | R2,R3 | 221K | RES. SMD 0805 1% | |
| 27 | 17 | R4,R5,R20,R30, R38,R39,R40,R45, R67,R68,R71,R72, R187,R189,R224, R233,R234 | 4K75 | RES. SMD 0805 1% | |
| 28 | 4 | R6,R7,R11,R12 | 2K21 | RES. SMD 0805 1% | |
| 29 | 3 | R9,R123,R137 | 100 | RES. SMD 0805 5% | |
| 30 | 8 | R10,R167,R170, R172,R173,R192, R176,R177 | 1K8 | RES. SMD 0805 5% | |
| 31 | 46 | R13,R15,R231, 10K R35,R47,R54,R55, R59,R64,R83,R84, R85,R86,R88,R89, R90,R91,R116, R117,R119,R120, R121,R124,R125, R130,R131,R133, R134,R135,R178, R179,R180,R181, R190,R203,R217, R218,R219,R220, R221,R227,R228, R229,R230 | | RES. SMD 0805 5% | R(|
| 32 | 19 | R16,R17,R18,R19, R22,R23,R24,R25, R32,R82,R138, R139,R140,R141, R142,R143,R144, R201,R226 | 51H | RES. SMD 0805 5% | |
| 33 | 4 | R21,R31,R223, R232 | 1K0 | RES. SMD 0805 5% | |
| 34 | 5 | R26,R28,R102, R163,R186 | 680 | RES. SMD 0805 5% | |
| 35 | 5 | R33,R61,R193, R195,R205 | 10KTRIMH | TRIM.MULT.3296 RG H | |
| 36 | 11 | R34,R50,R51,R62, R77,R78,R118, R132,R194,R196, R206 | 0 | RES. SMD 0 OHM | |
| 37 | 2 | R37,R65 | 22K1 | RES. SMD 0805 1% | |
| 38 | 8 | R41,R43,R44,R46, R69,R70,R73,R74 | 7K15 | RES. SMD 0805 1% | |
| 39 | 3 | R42,R81,R185 | 100K | RES. SMD 0805 5% | |
| 40 | 8 | R48,R49,R52,R53, R75,R76,R79,R80 | 33H | RES. SMD 0805 5% | |

| | | | | |
|----|----|---|----------|---------------------|
| 41 | 10 | R56,R60,R66, R164,R165,R168, R169,R171,R191, R211 | 15K | RES. SMD 0805 5% |
| 42 | 2 | R58,R57 | 475H | RES. SMD 0805 1% |
| 43 | 7 | R87,R92,R184, R198,R200,R222, R225 | 8K25 | RES. SMD 0805 1% |
| 44 | 24 | R93,R94,R95,R96, R103,R104,R105, R106,R145,R146, R147,R148,R149, R150,R151,R154, R155,R156,R157, R158,R159,R160, R197,R199 | 22H | RES. SMD 0805 5% |
| 45 | 16 | R97,R98,R99, R100,R101,R107, R108,R109,R110, R111,R152,R153, R161,R162,R183, R210 | 10H | RES. SMD 0805 5% |
| 46 | 4 | R112,R115,R126, R129 | 6K8 | RES. SMD 0805 5% |
| 47 | 2 | R113,R127 | 47K5 | RES. SMD 0805 1% |
| 48 | 2 | R114,R128 | 2KTRIM4 | TRIM.4X4mm SMD 2K |
| 49 | 2 | R136,R122 | 1M0 | RES. SMD 0805 5% |
| 50 | 2 | R175,R166 | 49K9 | RES. SMD 0805 1% |
| 51 | 1 | R182 | 39H | RES. SMD 0805 5% |
| 52 | 2 | R235,R188 | 10KTRIM4 | TRIM.4X4mm SMD 10K |
| 53 | 4 | R202,R212,R213, R214 | 150 | RES. SMD 0805 5% |
| 54 | 1 | R204 | 12K | RES. SMD 0805 5% |
| 55 | 3 | R207,R208,R209 | 120 | RES. SMD 0805 5% |
| 56 | 1 | R215 | 560 | RES. SMD 0805 5% |
| 57 | 1 | R216 | 56H | RES. SMD 0805 5% |
| 58 | 22 | U1,U2,U5,U6,U7, U8,U9,U10,U11, U12,U13,U14,U16, U17,U18,U19,U20, U21,U22,U23,U24, U25 | TL072S | CI LIN. TL072SMD |
| 59 | 2 | U4,U3 | 4053S | CI DIG. 4053SMD |
| 60 | 1 | U15 | 74HC00S | CI DIG. 74HC00SMD |
| 61 | 1 | U26 | 74HC238S | CI DIG. 74HC238SMD |
| 62 | 1 | U27 | 4094S | CI DIG. 4094SMD |
| 63 | 2 | U28,U29 | 4051S | CI DIG. 4051SMD |
| 64 | 1 | U30 | LM78L05S | CI LIN.78L05SMD SO8 |
| 65 | 2 | C9,C13 | 27pFCH | COND. CHIP 0805 |
| 66 | 2 | R27,R29 | 49k9CH | COND. CHIP 0805 |

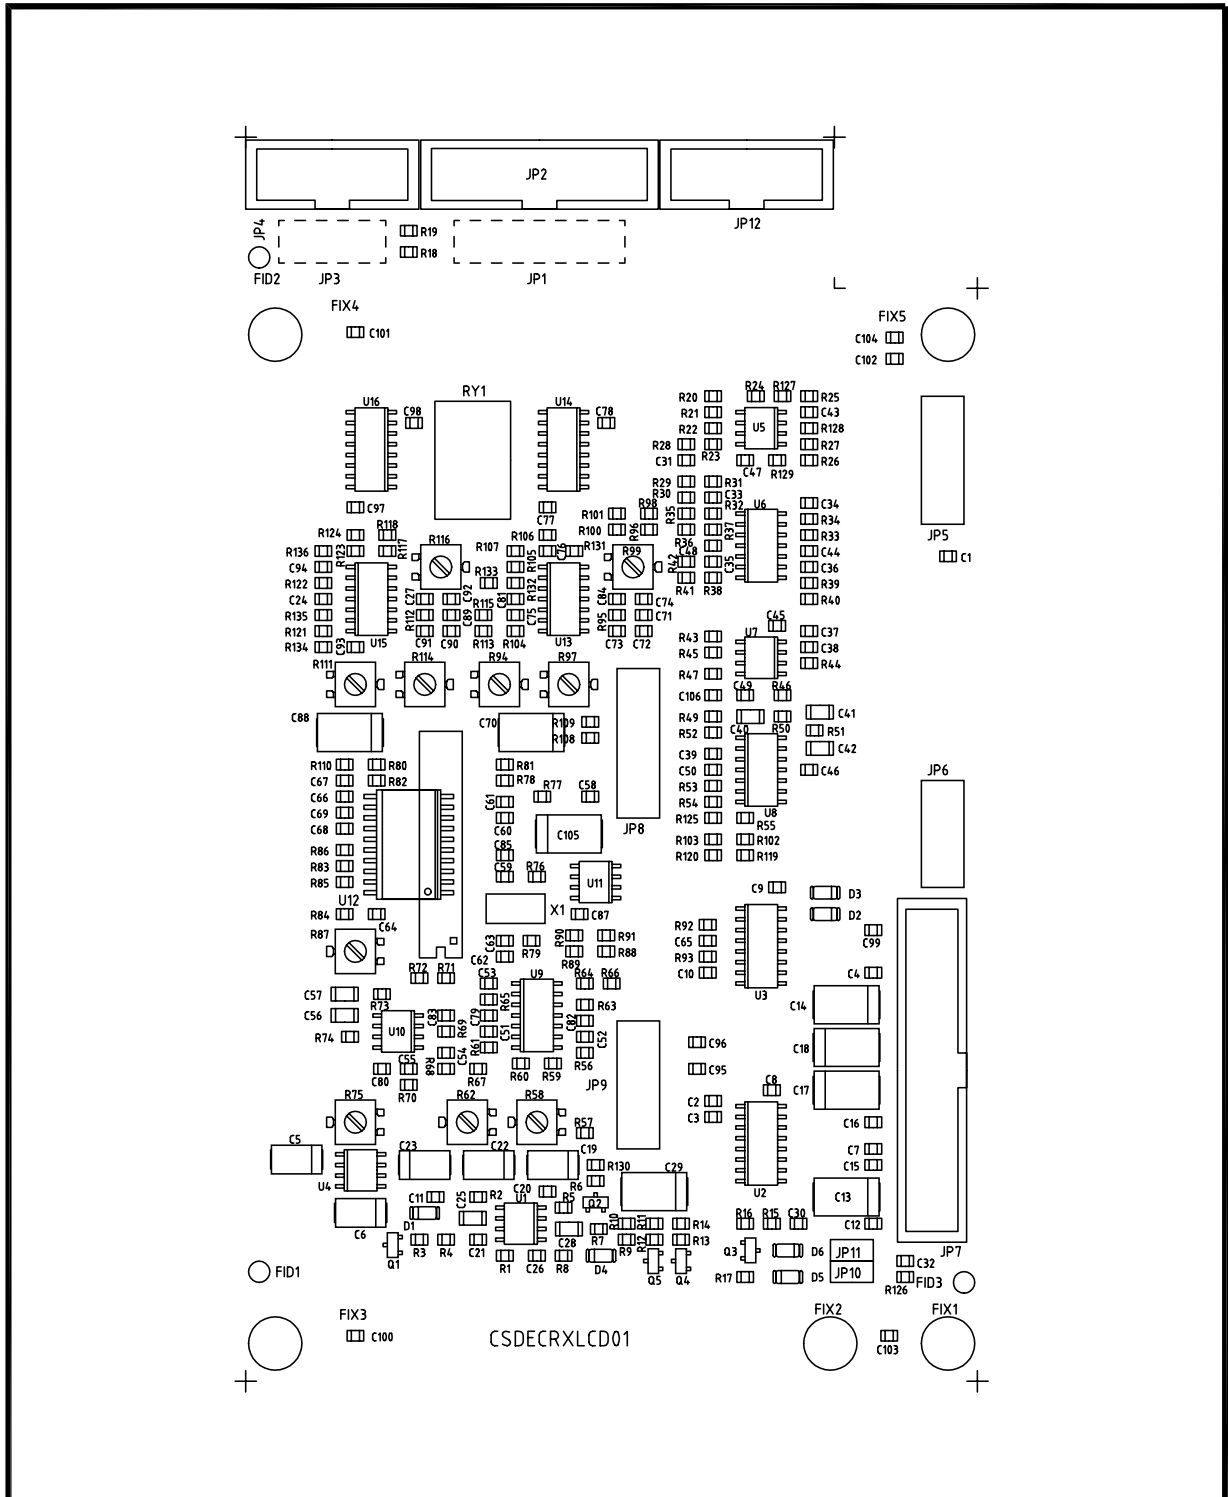


| | | |
|---|---|-------------|
|  | DENOMINAZIONE MB. DECODER STEREO RX1/RXRLNV-LCD | |
| | DISPOSITIVO CSDECRXLCD01 | |
| SEMILAVORATO | DISEGNATO li | DISEGNO |
| MATERIALE | SCALA | TAVOLA n di |
| TRATTAMENTO | | |

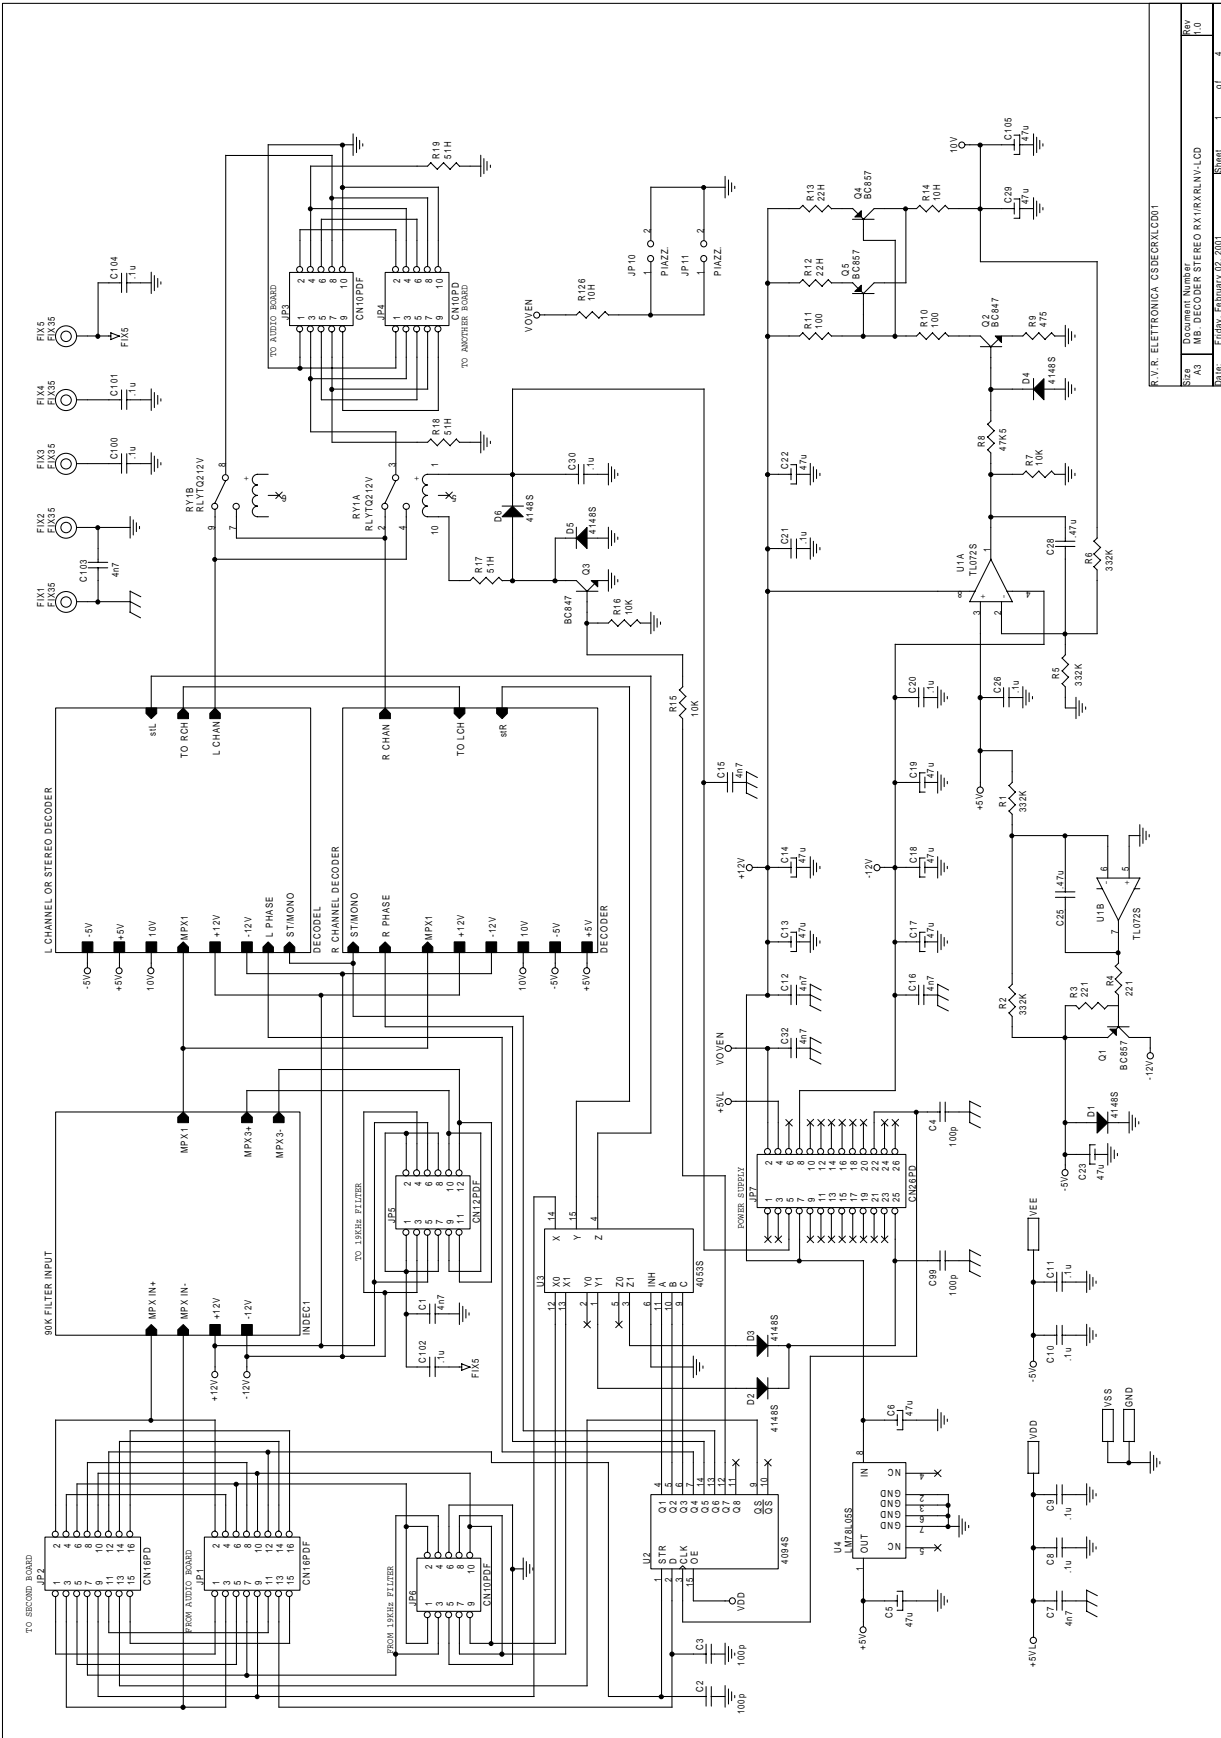


R.V.R. ELETTRONICA CSBEKXLC001


| | | | | | |
|------|---------------|-----------------|---------------------------------|-----|-----|
| Size | A3 | Document Number | MB_DECODER_STEREO_RX1/RX1NV-LCD | Rev | 1.0 |
| DATE | FEBRUARY 2001 | Rev | 1 | of | 4 |

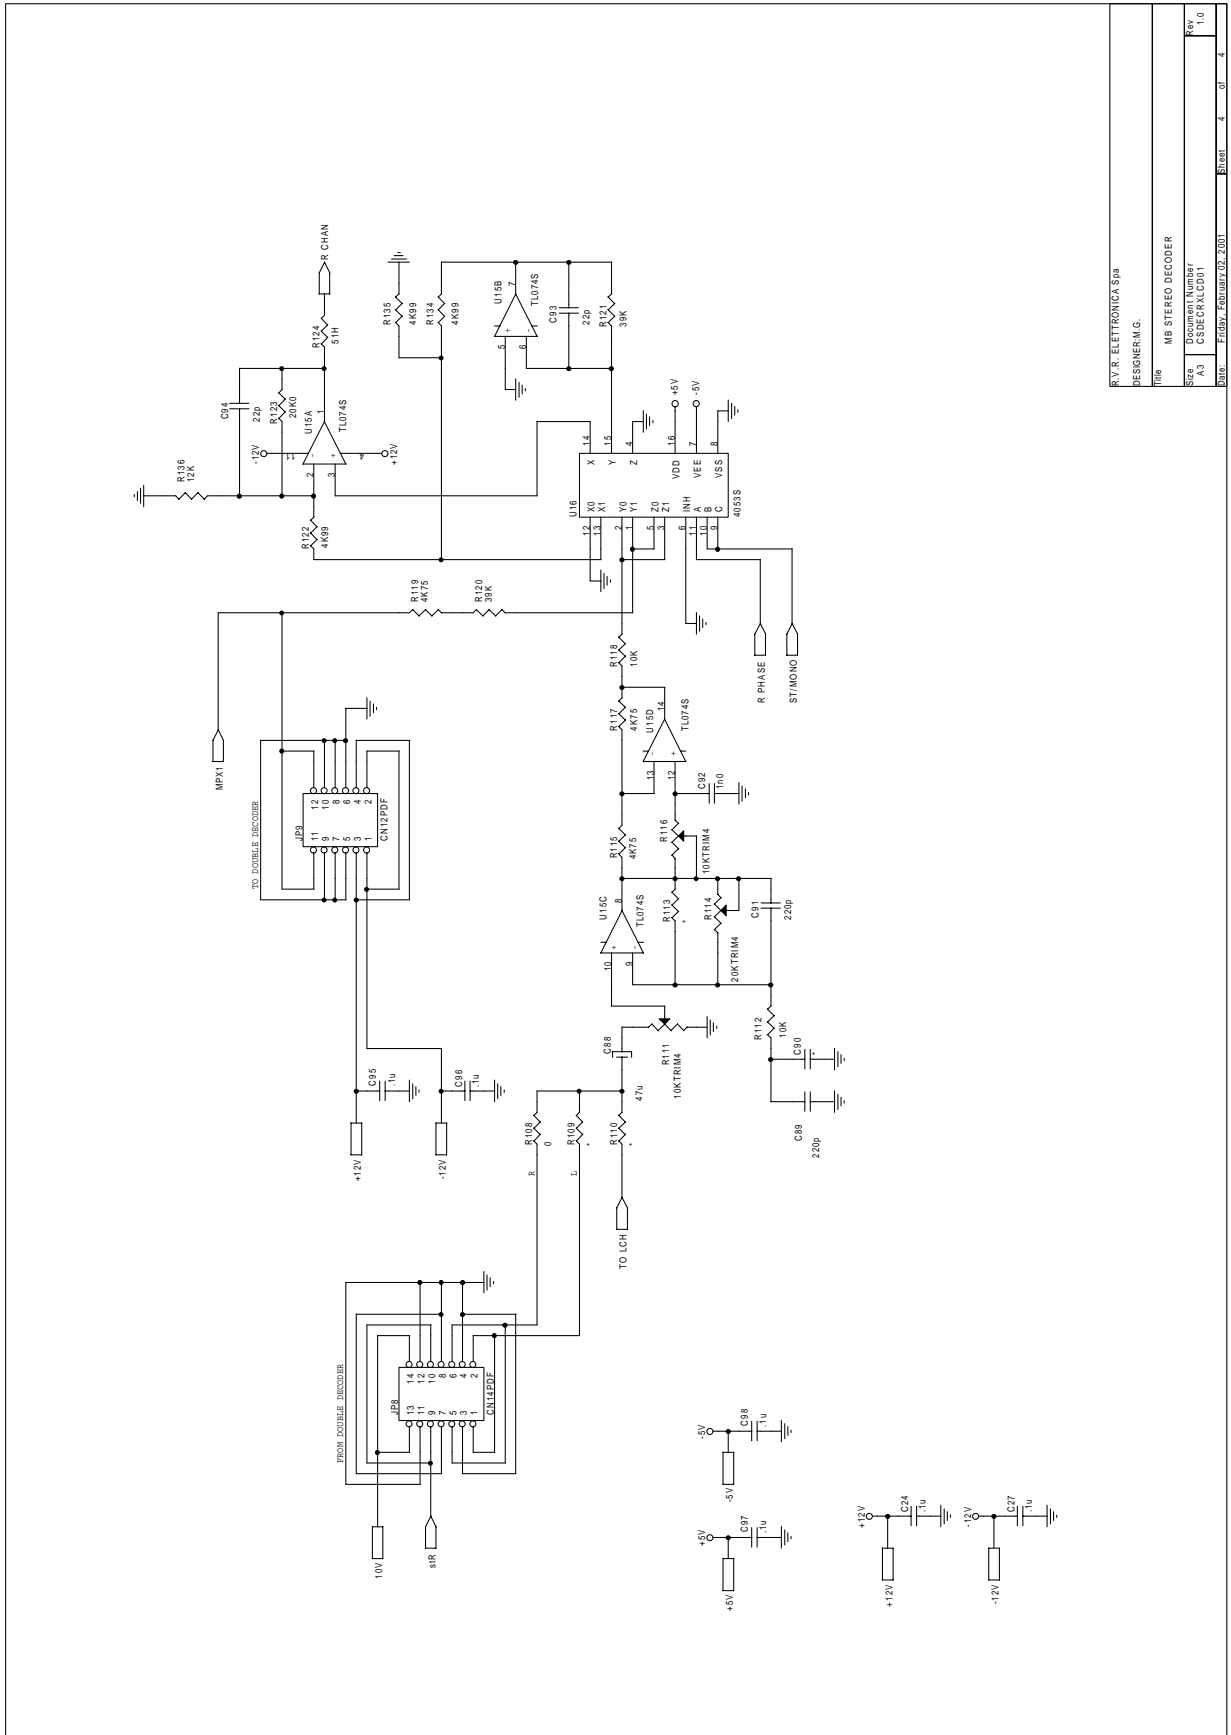

| | |
|---------------------------|---------------------------------|
| R.V.R. ELETTRONICA S.p.A. | |
| DESIGNER: M.G. | |
| FILE: MB STEREO DECODER | |
| Size: A3 | Document Number: CS06CALCD01 |
| Rev: 1.0 | Date: Friday, February 02, 2001 |
| Sheet: 4 | of: 4 |

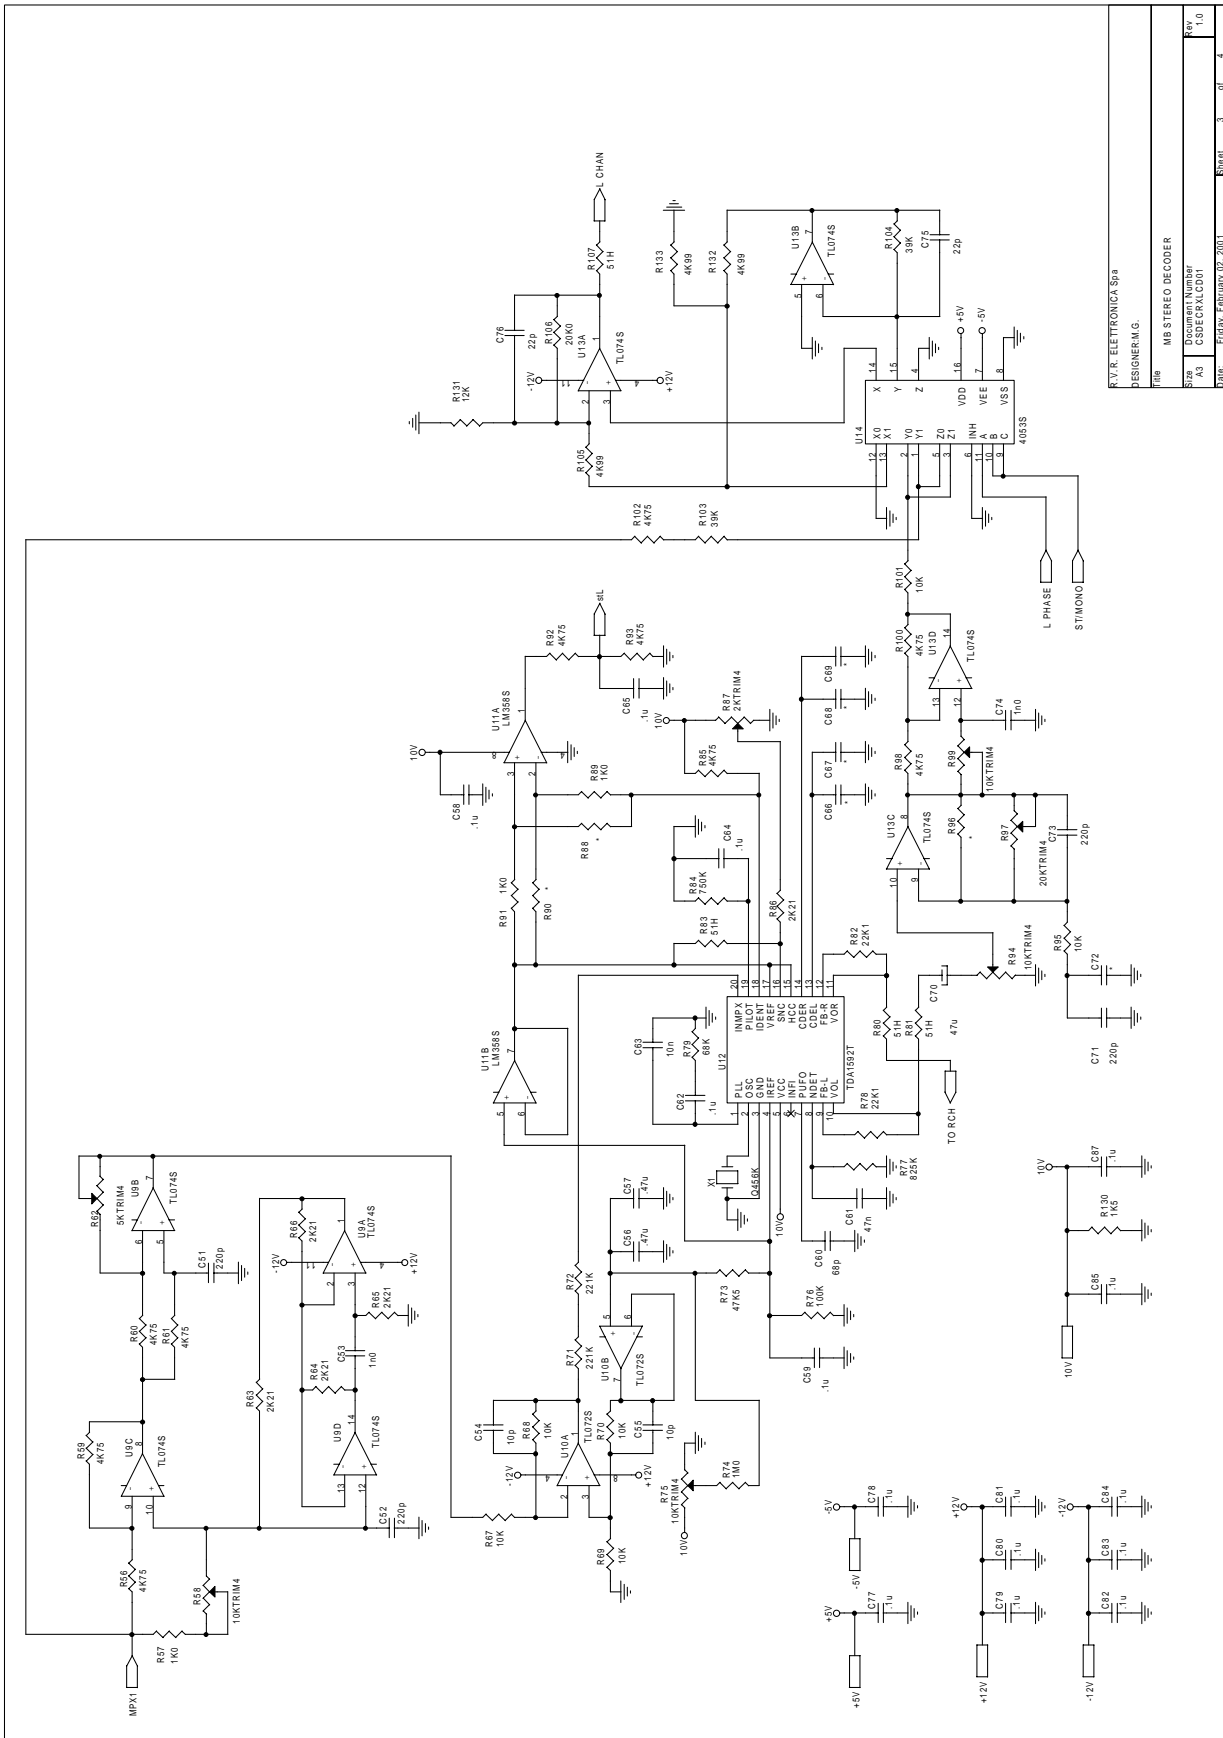

| | |
|------------------------|-------------------|
| R.V.R. ELETTRONICA Spa | |
| DESIGNER: M. G. | |
| Rev | MB STEREO DECODER |
| Size | Document Number |
| A3 | CSDECRLCD01 |
| Date | February 02, 2001 |
| Sheet | 3 of 4 |

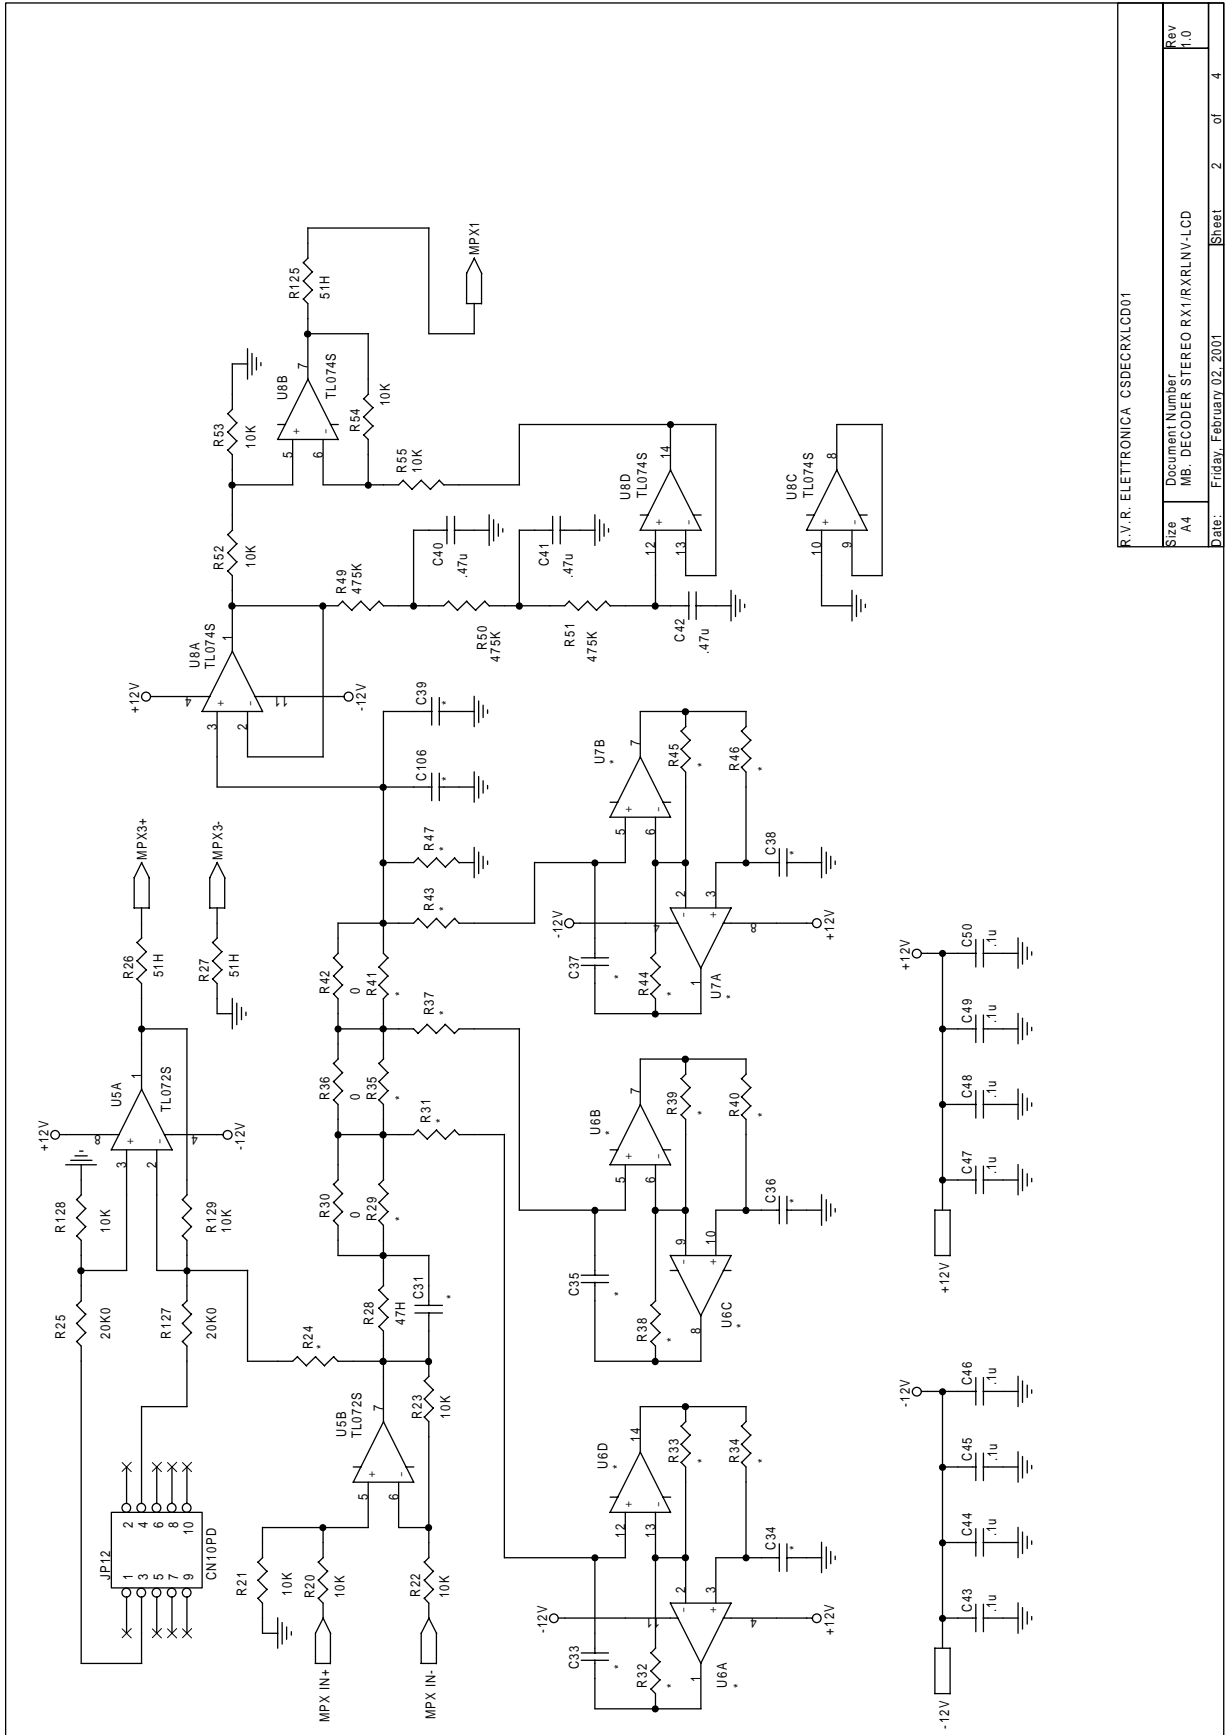


R.V.R. ELETTRONICA CSDECRXLCD01

| | | | |
|-------|---------------------------|-----------------|-----------------------------------|
| Size | A4 | Document Number | MB. DECODER STEREO RX1/RXRLNV-LCD |
| Date: | Friday, February 02, 2001 | Sheet | 2 of 4 |
| Rev | 1.0 | | |


| MB.DECODER STEREO RX1/RXRLNV-LCD | | | Bill Of Materials | | Page |
|----------------------------------|--------|---|-------------------|-----------------------|------|
| Item | Quant. | Reference | Part | Description | Code |
| 1 | 7 | C1, C7, C12, C15, C16, C32, C103 | 4n7 | COND. CHIP 0805 | |
| 2 | 4 | C2, C3, C4, C99 | 100p | COND. CHIP 0805 | |
| 3 | 13 | C5, C6, C13, C14, C17, C18, C19, C22, C23, C29, C70, C88, C105 | 47u | COND. EL. SMD16V | |
| 4 | 41 | C8, C9, C10, C11, C20, C21, C24, C26, C27, C30, C43, C44, C45, C46, C47, C48, C49, C50, C58, C59, C62, C64, C65, C77, C78, C79, C80, C81, C82, C83, C84, C85, C87, C95, C96, C97, C98, C100, C101, C102, C104 | .1u | COND. CHIP 0805 | |
| 5 | 7 | C25, C28, C40, C41, C42, C56, C57 | .47u | COND. CHIP 1206 | |
| 6 | 40 | U6, U7, R24, R29, R31, C31, R32, R33, C33, R34, C34, R35, C35, C36, R37, C37, R38, C38, R39, C39, R40, R41, R43, R44, R45, R46, R47, C66, C67, C68, C69, C72, R88, R90, C90, R96, C106, R109, R110, R113 | * | | |
| 7 | 6 | C51, C52, C71, C73, C89, C91 | 220p | COND. CHIP 0805 | |
| 8 | 3 | C53, C74, C92 | 1n0 | COND. CHIP 0805 | |
| 9 | 2 | C54, C55 | 10p | COND. CHIP 0805 | |
| 10 | 1 | C60 | 68p | COND. CHIP 0805 | |
| 11 | 1 | C61 | 47n | COND. CHIP 0805 | |
| 12 | 1 | C63 | 10n | COND. CHIP 0805 | |
| 13 | 4 | C75, C76, C93, C94 | 22p | COND. CHIP 0805 | |
| 14 | 6 | D1, D2, D3, D4, D5, D6 | 4148S | DIODO SIL. MINIMELF | |
| 15 | 1 | JP1 | CN16PDF | STRIP F 2X2.54 16 PIN | |
| 16 | 1 | JP2 | CN16PD | CONN. M 2X2.54 16PIN | |
| 17 | 2 | JP6, JP3 | CN10PDF | STRIP F 2X2.54 10 PIN | |
| 18 | 2 | JP4, JP12 | CN10PD | CONN. M 2X2.54 10PIN | |
| 19 | 2 | JP5, JP9 | CN12PDF | STRIP F 2X2.54 12 PIN | |
| 20 | 1 | JP7 | CN26PD | CONN. M 2X2.54 26PIN | |
| 21 | 1 | JP8 | CN14PDF | STRIP F 2X2.54 14 PIN | |
| 22 | 3 | Q1, Q4, Q5 | BC857 | TRANSISTOR SOT23 | |
| 23 | 2 | Q3, Q2 | BC847 | TRANSISTOR SOT23 | |
| 24 | 1 | RY1 | RLYTQ212V | RELE' TQ2 12V | |
| 25 | 4 | R1, R2, R5, R6 | 332K | RES. SMD 0805 1% | |
| 26 | 2 | R3, R4 | 221H | RES. SMD 0805 1% | |
| 27 | 21 | R7, R15, R16, R20, R21, R22, R23, R52, R53, R54, R55, R67, R68, R69, R70, R95, R101, R112, R118, R128, R129 | 10K | RES. SMD 0805 5% | |
| 28 | 2 | R8, R73 | 47K5 | RES. SMD 0805 1% | |
| 29 | 1 | R9 | 475H | RES. SMD 0805 1% | |
| 30 | 2 | R11, R10 | 100 | RES. SMD 0805 5% | |
| 31 | 2 | R12, R13 | 22H | RES. SMD 0805 5% | |
| 32 | 1 | R14, R126 | 10H | RES. SMD 0805 5% | |
| 33 | 4 | R25, R106, R123, R127 | 20K0 | RES. SMD 0805 1% | |
| 34 | 12 | R17, R18, R19, R26, R27, R80, R81, R83, R107, R124, R125 | 51H | RES. SMD 0805 5% | |
| 35 | 1 | R28 | 47H | RES. SMD 0805 5% | |
| 36 | 4 | R30, R36, R42, R108 | 0 | RES. SMD O OHM | |

| | | | | |
|----|----|---|----------|----------------------|
| 37 | 3 | R49, R50, R51 | 475K | RES. SMD 0805 1% |
| 38 | 13 | R56, R59, R60, R61, R85, R92, R93, R98, R100, R102, R115, R117, R119 | 4K75 | RES. SMD 0805 1% |
| 39 | 3 | R57, R89, R91 | 1K0 | RES. SMD 0805 5% |
| 40 | 6 | R58, R75, R94, R99, R111, R116 | 10KTRIM4 | TRIM.4X4mm SMD 10K |
| 41 | 1 | R62 | 5KTRIM4 | TRIM.4X4mm SMD 5K |
| 42 | 5 | R63, R64, R65, R66, R86 | 2K21 | RES. SMD 0805 1% |
| 43 | 2 | R71, R72 | 221K | RES. SMD 0805 1% |
| 44 | 1 | R74 | 1M0 | RES. SMD 0805 5% |
| 45 | 1 | R76 | 100K | RES. SMD 0805 5% |
| 46 | 1 | R77 | 825K | RES. SMD 0805 1% |
| 47 | 2 | R82, R78 | 22K1 | RES. SMD 0805 1% |
| 48 | 1 | R79 | 68K | RES. SMD 0805 5% |
| 49 | 1 | R84 | 750K | RES. SMD 0805 1% |
| 50 | 1 | R87 | 2KTRIM4 | TRIM.4X4mm SMD 2K |
| 51 | 2 | R97, R114 | 20KTRIM4 | TRIM.4X4mm SMD 20K |
| 52 | 4 | R103, R104, R120, R121 | 39K | RES. SMD 0805 5% |
| 53 | 6 | R105, R122, R132, R133, R134, R135 | 4K99 | RES. SMD 0805 1% |
| 54 | 1 | R130 | 1K5 | RES. SMD 0805 5% |
| 55 | 2 | R131, R136 | 12K | RES. SMD 0805 5% |
| 56 | 3 | U1, U5, U10 | TL072S | CI LIN. TL072SMD |
| 57 | 1 | U2 | 4094S | CI DIG. 4094SMD |
| 58 | 3 | U3, U14, U16 | 4053S | CI DIG. 4053SMD |
| 59 | 1 | U4 | LM78L05S | CI LIN.78L05SMD SO8 |
| 60 | 4 | U8, U9, U13, U15 | TL074S | CI LIN. TL074SMD |
| 61 | 1 | U11 | LM358S | CI LIN. LM358SMD |
| 62 | 1 | U12 | TDA1592T | CI LIN.TDA1592T SO20 |
| 63 | 1 | X1 | Q456K | RIS. CER. 456KHz |

Pagina lasciata intenzionalmente in bianco
This page was intentionally left blank

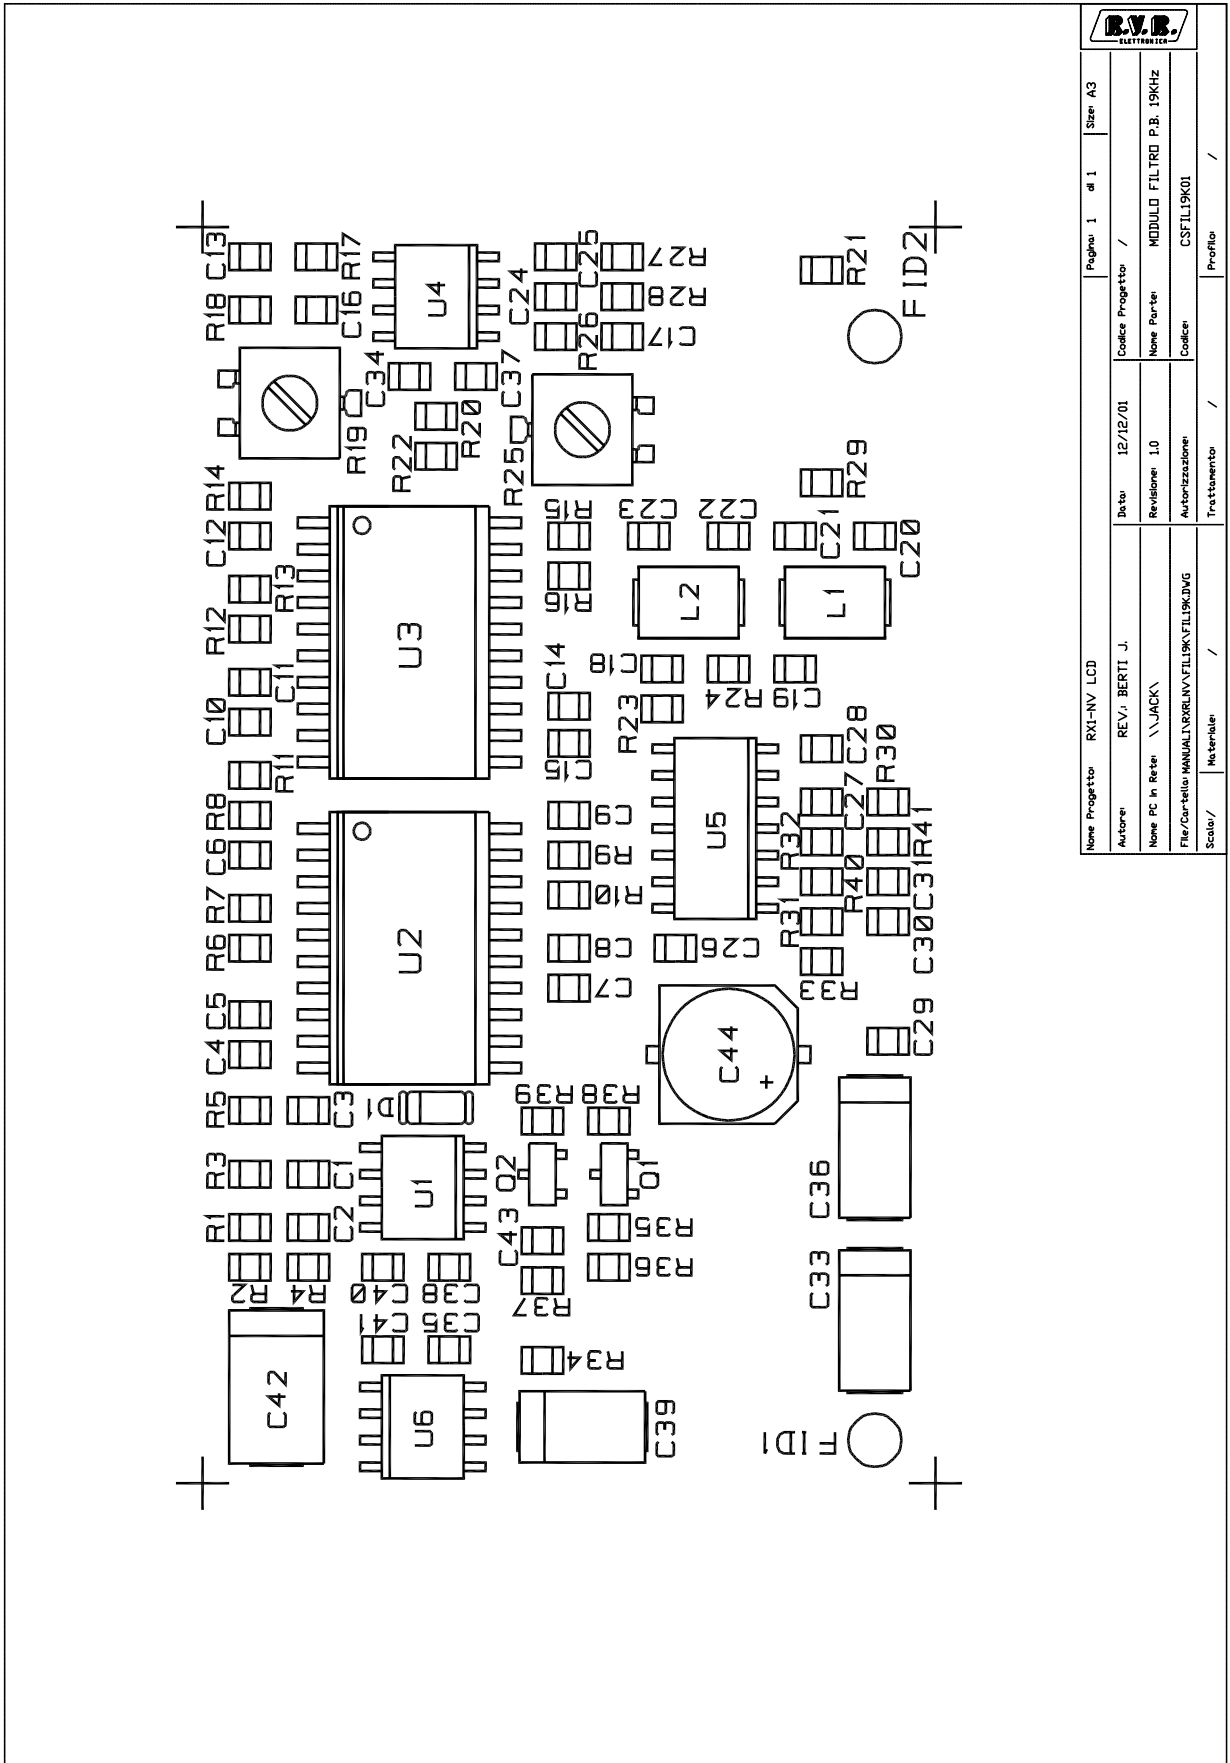


| | | | | | |
|---|--|-------------------|--|--------------------------------------|--|
| Nome Progetto: RX1-NV LCD | | Pagina: 1 di 1 | | Size: A3 | |
| Autore: REV. BERTI J. | | Data: 12/12/01 | | Codice Progetto: / | |
| Nome PC in Rete: \JACK\ | | Revisione: 1.0 | | Nome Parte: MODULO FILTRO P.B. 19KHz | |
| File/Cartella MANUALE\RX1\NV\FILTR\FIL19K.DWG | | Autore/Revisione: | | Codice: CSFIL19K01 | |
| Scala: / | | Note: | | Trattamento: / | |
| Disegnato: / | | Verificato: / | | Profilo: / | |

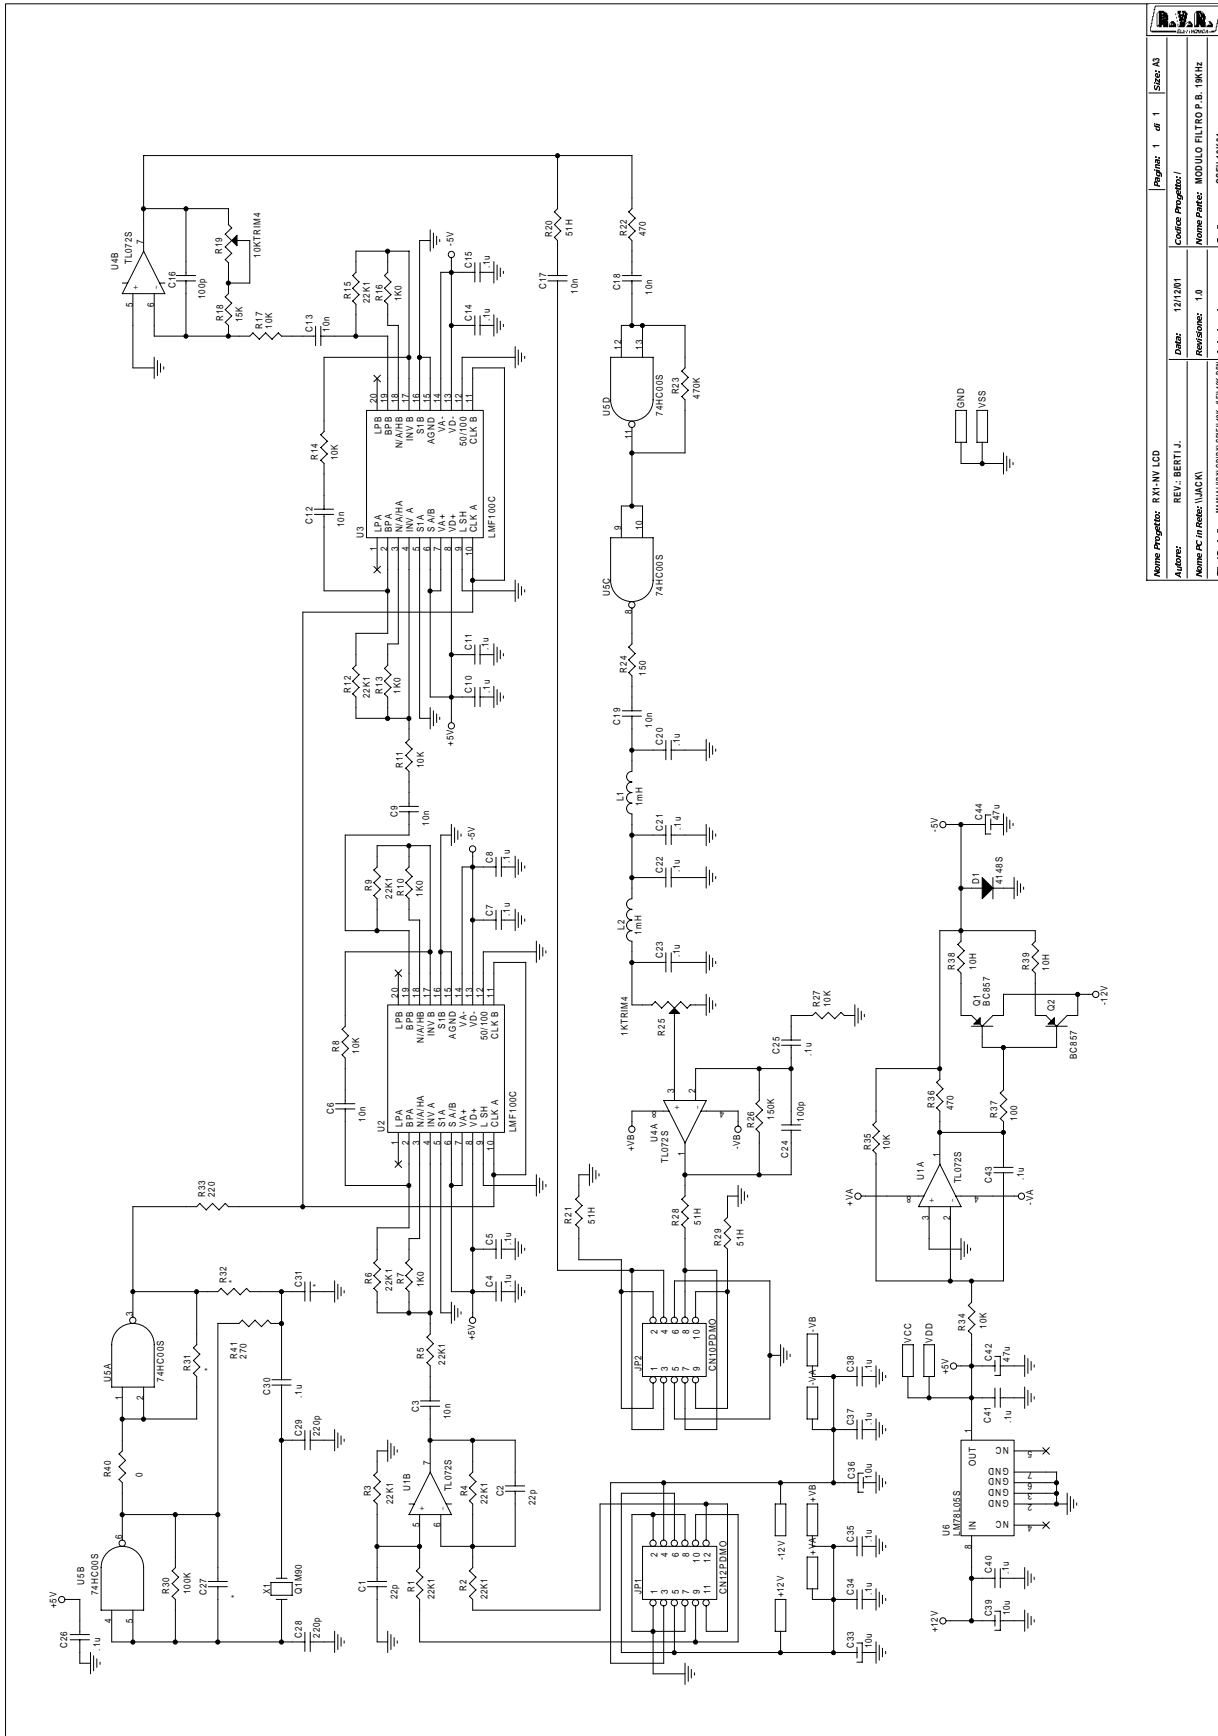


| | |
|-------------------|------------------------------------|
| | |
| Nome Progettista: | RX1-NV LCD |
| Autore: | REV. BERT J. |
| Nome PC in Rete: | UJAC K |
| File/Caricab: | MANUALI/CD/ALICDFIL19K.FIL (K.DIN) |
| Program: | 1 di 1 |
| Stato: | A3 |
| Data: | 12/12/01 |
| Nome File: | MODULO FILTRO P.B. 19K.HZ |
| Revisione: | 1.0 |
| Autofunzione: | CSFIL19K01 |

| CSFIL19K01 | | Bill Of Materials | | | Page |
|------------|--------|---|----------|-------------------------|------|
| Item | Quant. | Reference | Part | Description | 1 |
| 1 | 2 | C1,C2 | 22p | COND. CHIP 0805 | |
| 2 | 8 | C3,C6,C9,C12, C13,C17,C18,C19 | 10n | COND. CHIP 0805 | |
| 3 | 22 | C4,C5,C7,C8,C10, C11,C14,C15,C20, C21,C22,C23,C25, C26,C30,C34,C35, C37,C38,C40,C41, C43 | .1u | COND. CHIP 0805 | |
| 4 | 2 | C24,C16 | 100p | COND. CHIP 0805 | |
| 5 | 4 | C27,R31,C31,R32 | * | | |
| 6 | 2 | C28,C29 | 220p | COND. CHIP 0805 | |
| 7 | 3 | C33,C36,C39 | 10u | COND. EL. SMD16V | |
| 8 | 2 | C42,C44 | 47u | COND. EL. SMD16V | |
| 9 | 1 | D1 | 4148S | DIODO SIL. MINIMELF | |
| 10 | 1 | JP1 | CN12PDMO | STRIP M 2X2.54 12 PIN90 | |
| 11 | 1 | JP2 | CN10PDMO | STRIP M 2X2.54 10 PIN90 | |
| 12 | 2 | L1,L2 | 1mH | IMPEDENZA SMD 1812 | |
| 13 | 2 | Q1,Q2 | BC857 | TRANSISTOR SOT23 | |
| 14 | 9 | R1,R2,R3,R4,R5, R6,R9,R12,R15 | 22K1 | RES. SMD 0805 1% | |
| 15 | 4 | R7,R10,R13,R16 | 1K0 | RES. SMD 0805 5% | |
| 16 | 7 | R8,R11,R14,R17, R27,R34,R35 | 10K | RES. SMD 0805 5% | |
| 17 | 1 | R19 | 10KTRIM4 | TRIM.4X4mm SMD 10K | |
| 18 | 4 | R20,R21,R28,R29 | 51H | RES. SMD 0805 5% | |
| 19 | 2 | R22,R36 | 470 | RES. SMD 0805 5% | |
| 20 | 1 | R23 | 470K | RES. SMD 0805 5% | |
| 21 | 1 | R24 | 150 | RES. SMD 0805 5% | |
| 22 | 1 | R25 | 1KTRIM4 | TRIM.4X4mm SMD 1K | |
| 23 | 1 | R26 | 150K | RES. SMD 0805 5% | |
| 24 | 1 | R30 | 100K | RES. SMD 0805 5% | |
| 25 | 1 | R33 | 220 | RES. SMD 0805 5% | |
| 26 | 1 | R37 | 100 | RES. SMD 0805 5% | |
| 27 | 2 | R39,R38 | 10H | RES. SMD 0805 5% | |
| 28 | 1 | R40 | 0 | RES. SMD 0 OHM | |
| 29 | 1 | R41 | 270 | RES. SMD 0805 5% | |
| 30 | 2 | U1,U4 | TL072S | CI LIN. TL072SMD | |
| 31 | 2 | U2,U3 | LMF100C | CI LIN.LMF100C SO20W | |

| | | | | |
|----|---|-----|----------|---------------------|
| 32 | 1 | U5 | 74HC00S | CI DIG. 74HC00SMD |
| 33 | 1 | U6 | LM78L05S | CI LIN.78L05SMD SO8 |
| 34 | 1 | X1 | Q1M90 | QUARZO 1.90MHz HC33 |
| 35 | 1 | R18 | 15K | RES. SMD 0805 5% |

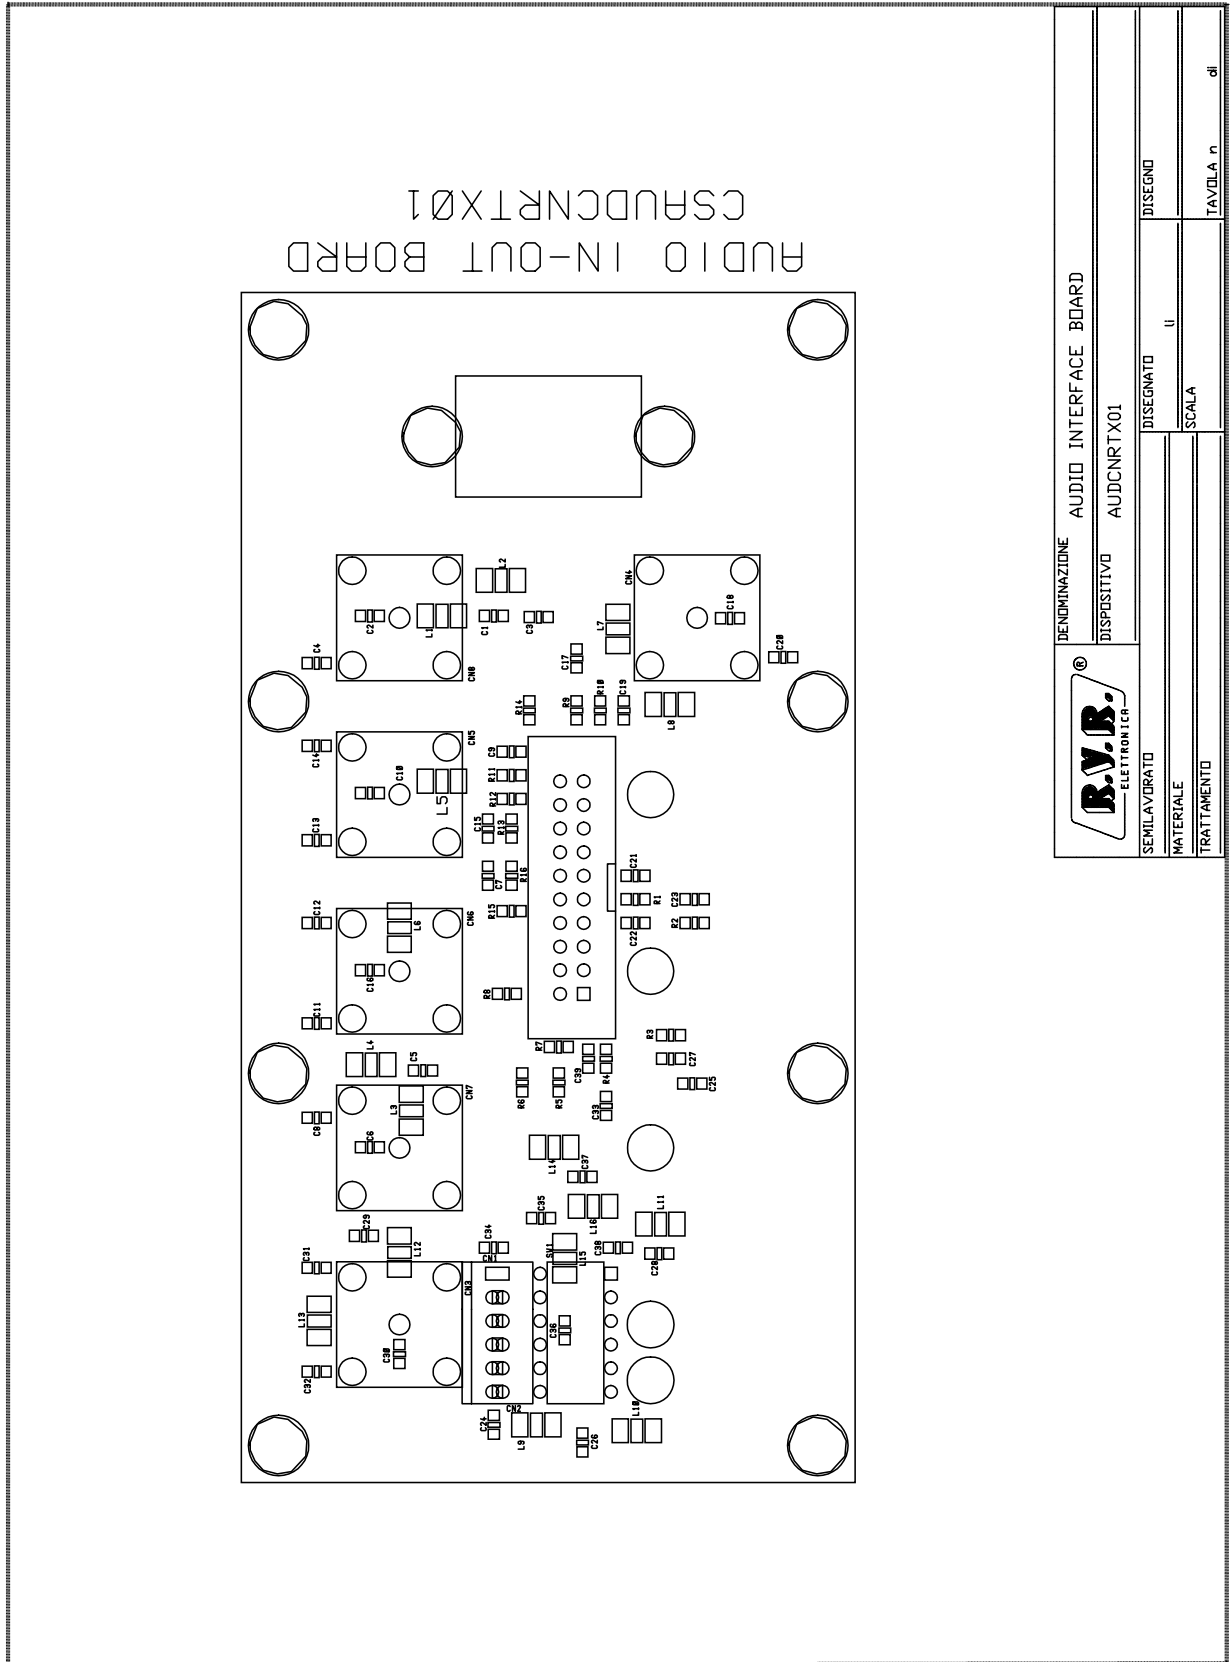

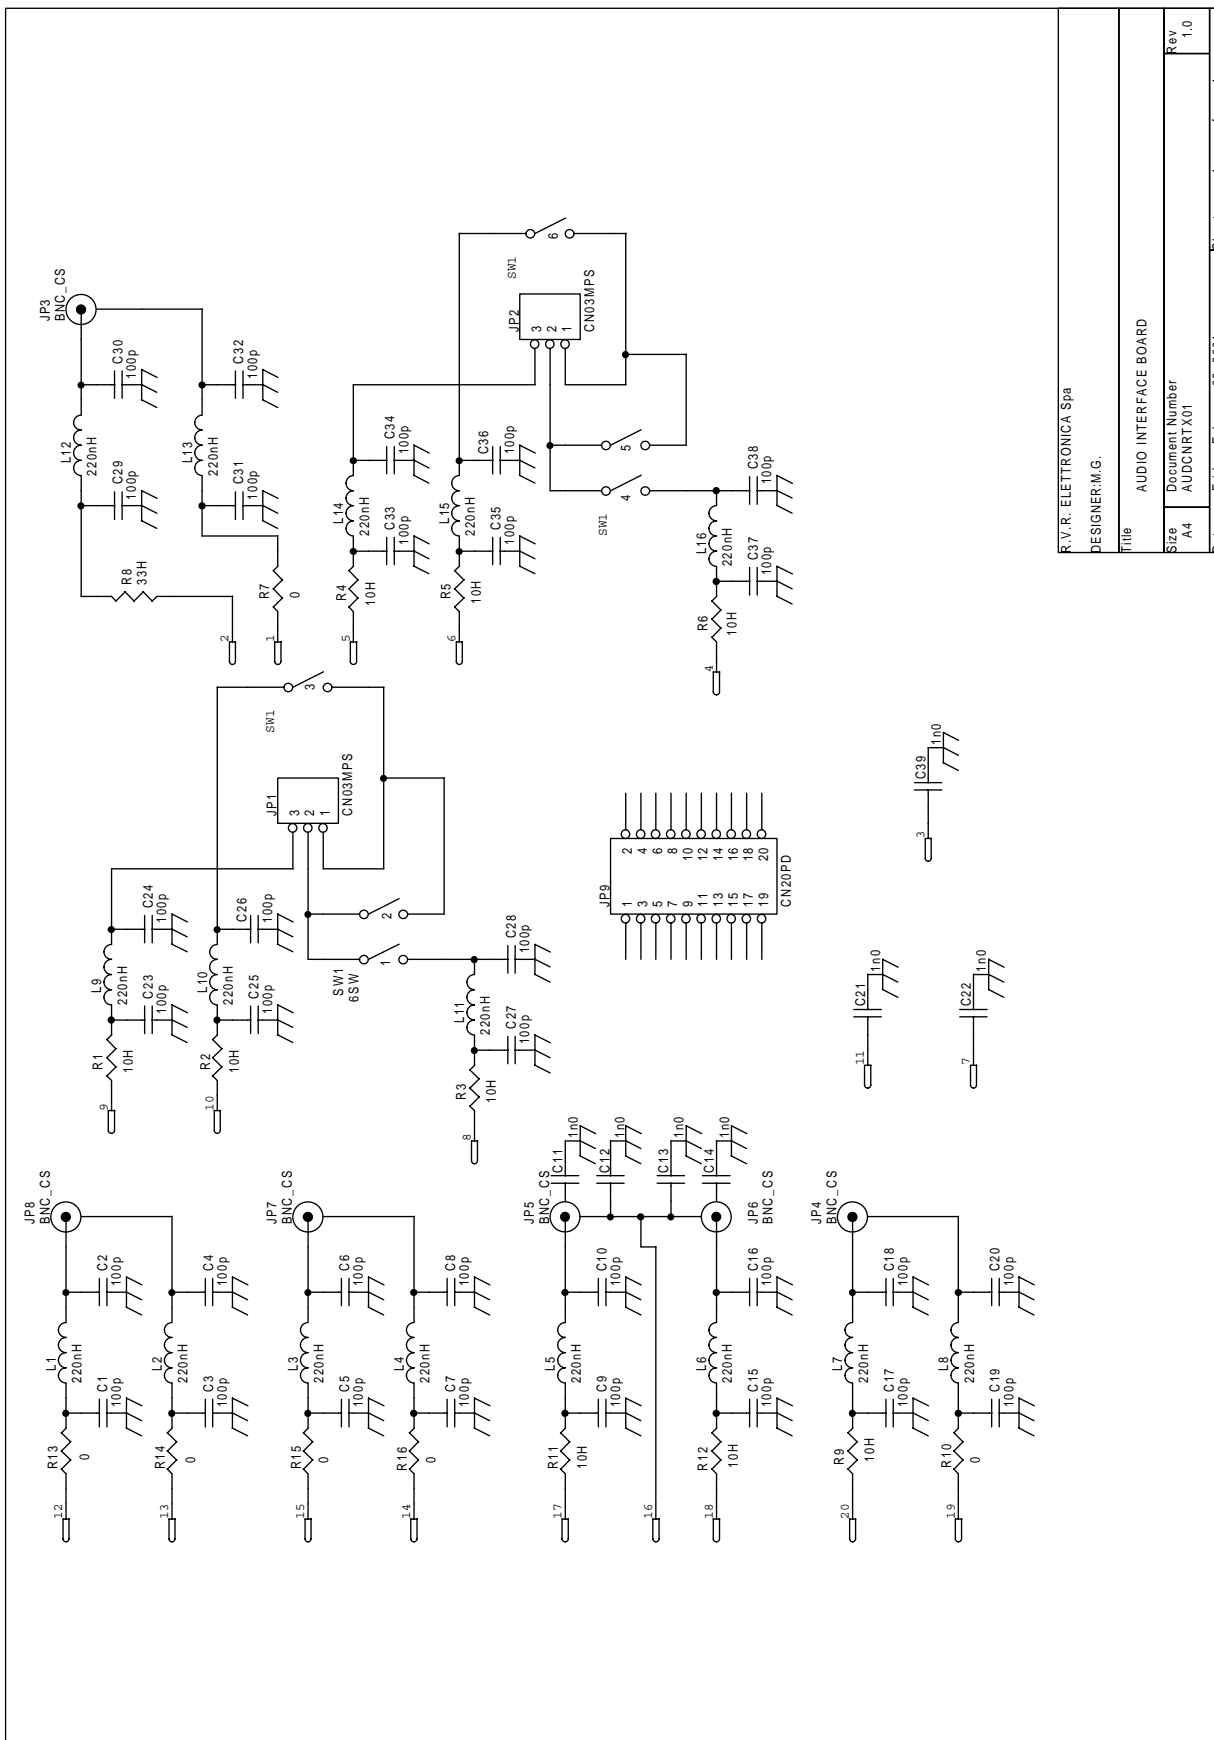

R.V.R. ELETTRONICA Spa
DESIGNER: M.G.

Title: AUDIO INTERFACE BOARD


| | | |
|-------|---------------------------|--------------|
| Size | Document Number | Rev |
| A4 | AUDCNRTX01 | 1.0 |
| Date: | Friday, February 02, 2001 | Sheet 1 of 1 |

| AUDIO INTERFACE BOARD RTX AUDCNRTX01 | | | Bill Of Materials | Page | 1 |
|--------------------------------------|--------|--|-------------------|----------------------|------|
| Item | Quant. | Reference | Part | Description | Code |
| 1 | 32 | C1,C2,C3,C4,C5, C6,C7,C8,C9,C10, C15,C16,C17,C18, C19,C20,C23,C24, C25,C26,C27,C28, C29,C30,C31,C32, C33,C34,C35,C36, C37,C38 | 100p | COND. CHIP 0805 | |
| 2 | 7 | C11,C12,C13,C14, C21,C22,C39 | 1n0 | COND. CHIP 0805 | |
| 3 | 2 | JP1,JP2 | CN03MPS | CONN. MOLEX 2.54 03P | |
| 4 | 6 | JP3,JP4,JP5,JP6, JP7,JP8 | BNC_CS | CONN. BNC CS | |
| 5 | 1 | JP9 | CN20PD | CONN. M 2X2.54 20PIN | |
| 6 | 16 | L1,L2,L3,L4,L5, L6,L7,L8,L9,L10, L11,L12,L13,L14, L15,L16 | 220nH | IMPEDEENZA SMD 1210 | |
| 7 | 9 | R1,R2,R3,R4,R5, R6,R9,R11,R12 | 10H | RES. SMD 0805 5% | |
| 8 | 6 | R7,R10,R13,R14, R15,R16 | 0 | RES. SMD 0 OHM | |
| 9 | 1 | R8 | 33H | RES. SMD 0805 5% | |
| 10 | 1 | SW1 | 6SW | DIP SWITCH 6 VIE | |


Pagina lasciata intenzionalmente in bianco


This page was intentionally left blank

PIANO MONTAGGIO PSSWRLNEW

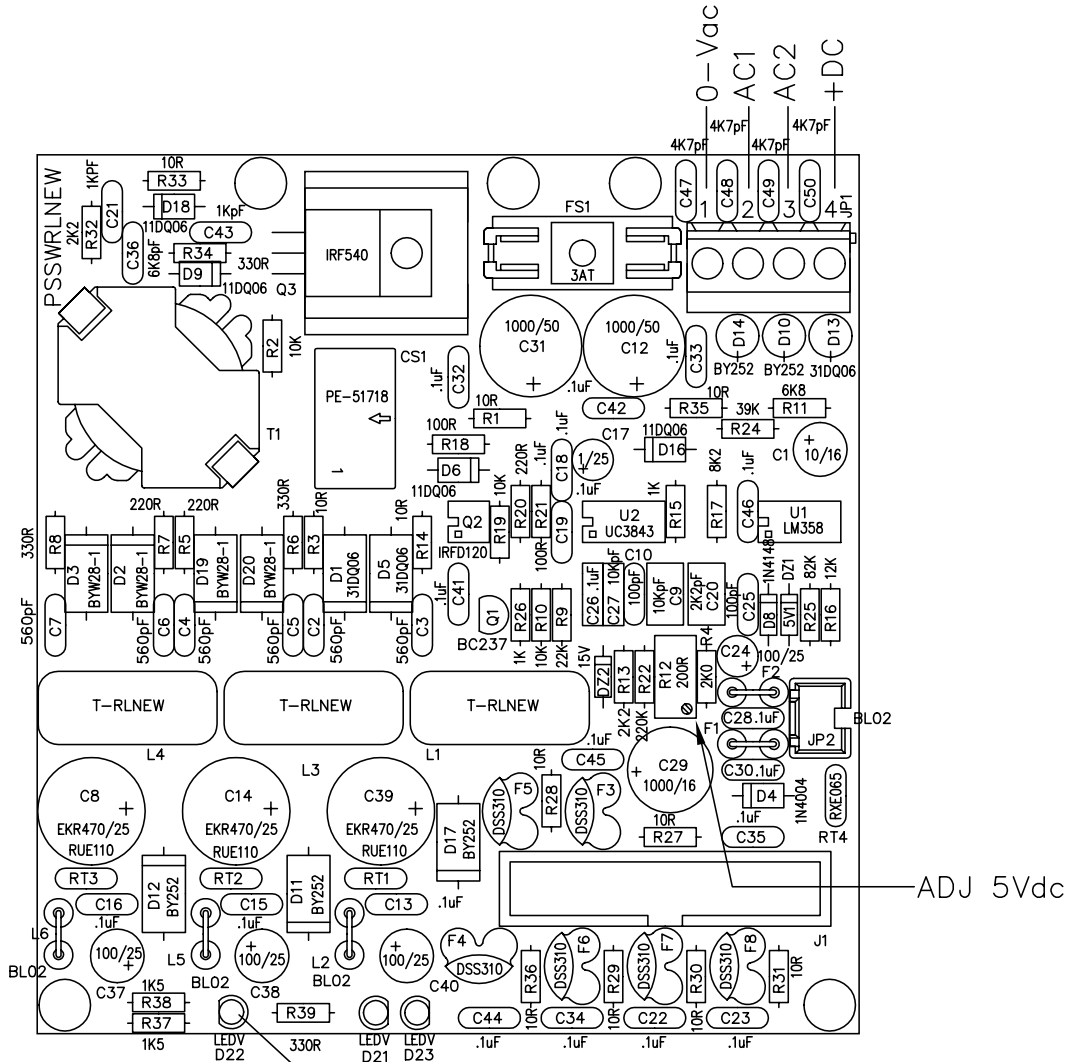


NON SEGUIRE SERIGRAFIA
DELLO STAMPATO

| | | |
|---|--|-------------|
|  | DENOMINAZIONE POWER SUPPLY +5V +13V -13V | |
| | DISPOSITIVO PSSWRLNEW | |
| SEMILAVORATO | DISEGNATO | DISEGNO |
| MATERIALE | li | |
| TRATTAMENTO | SCALA | TAVOLA n di |

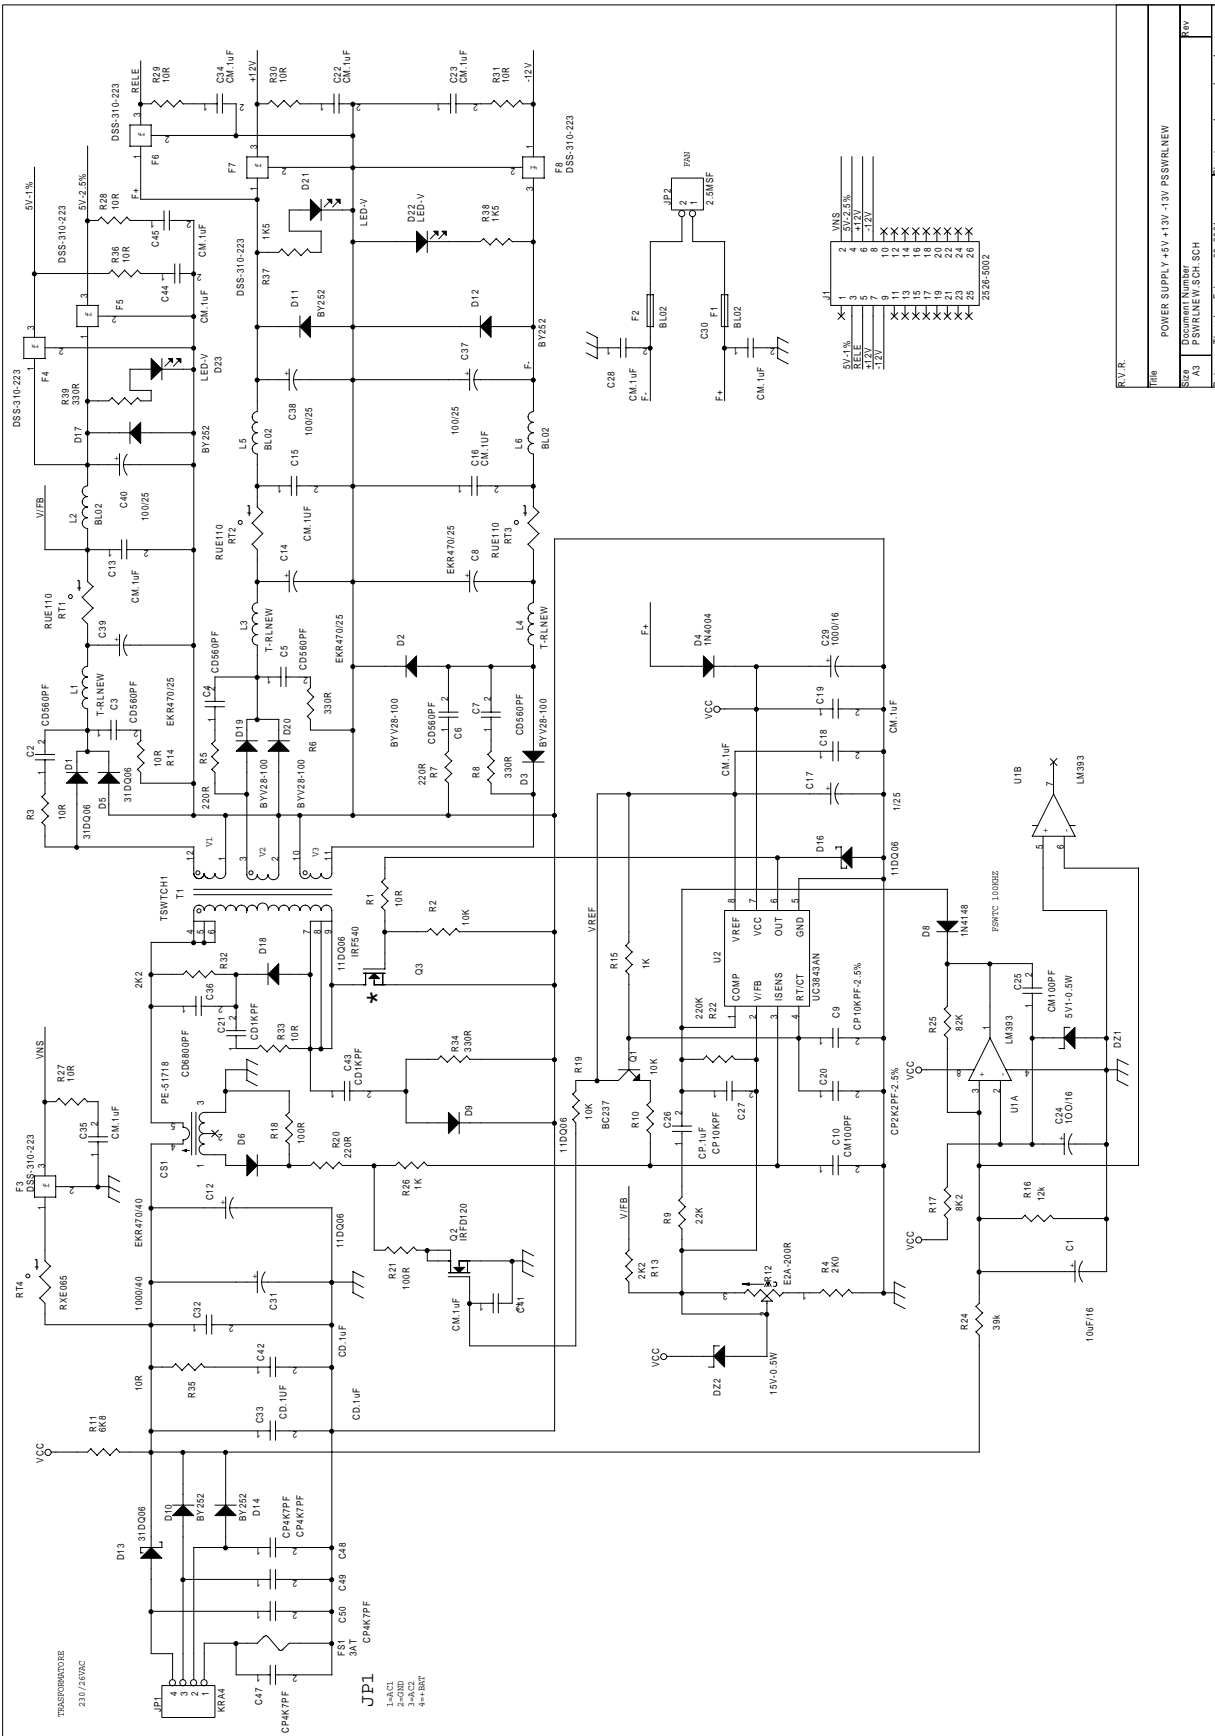


| Item | Quantity | Reference | Part |
|------|----------|--|--------------|
| 1 | 1 | CS1 | PE-51718 |
| 2 | 1 | C1 | 10uF/16 |
| 3 | 6 | C2, C3, C4, C5, C6, C7 | CD560PF |
| 4 | 3 | C8, C14, C39 | EKR470/25 |
| 5 | 1 | C9 | CP10KPF-2.5% |
| 6 | 2 | C10, C25 | CM100PF |
| 7 | 1 | C12 | EKR470/40 |
| 8 | 14 | C13, C15, C16, C18, C19, C22, C23, C28, C30, C34, C35, C41, C44, C45 | CM. 1uF |
| 9 | 1 | C17 | 1/25 |
| 10 | 1 | C20 | CP2K2PF-2.5% |
| 11 | 2 | C21, C43 | CD1KPF |
| 12 | 1 | C24 | 100/16 |
| 13 | 1 | C26 | CP. 1uF |
| 14 | 1 | C27 | CP10KPF |
| 15 | 1 | C29 | 1000/16 |
| 16 | 1 | C31 | 1000/40 |
| 17 | 3 | C32, C33, C42 | CD. 1uF |
| 18 | 1 | C36 | CD6800PF |
| 19 | 3 | C37, C38, C40 | 100/25 |
| 20 | 4 | C47, C48, C49, C50 | CP4K7PF |
| 21 | 1 | DZ1 | 5V1-0.5W |
| 22 | 1 | DZ2 | 15V-0.5W |
| 23 | 3 | D1, D5, D13 | 31DQ06 |
| 24 | 4 | D2, D3, D19, D20 | BYV28-100 |
| 25 | 1 | D4 | 1N4004 |
| 26 | 4 | D6, D9, D16, D18 | 11DQ06 |
| 27 | 1 | D8 | 1N4148 |
| 28 | 5 | D10, D11, D12, D14, D17 | BY252 |
| 29 | 3 | D21, D22, D23 | LED-V |
| 30 | 1 | FS1 | 3AT |
| 31 | 5 | F1, L2, F2, L5, L6 | BL02 |
| 32 | 6 | F3, F4, F5, F6, F7, F8 | DSS-310-223 |
| 33 | 1 | JP1 | KRA4 |
| 34 | 1 | JP2 | 2.5MSF |
| 35 | 1 | J1 | 2526-5002 |

| | | | |
|----|----|--|----------|
| 36 | 3 | L1, L3, L4 | T-RLNEW |
| 37 | 1 | Q1 | BC237 |
| 38 | 1 | Q2 | IRFD120 |
| 39 | 1 | Q3 | IRF540 |
| 40 | 3 | RT1, RT2, RT3 | RUE110 |
| 41 | 1 | RT4 | RXE065 |
| 42 | 11 | R1, R3, R14, R27, R28, R29, R30, R31, R33, R35, R36 | 10R |
| 43 | 3 | R2, R10, R19 | 10K |
| 44 | 1 | R4 | 2K0 |
| 45 | 3 | R5, R7, R20 | 220R |
| 46 | 4 | R6, R8, R34, R39 | 330R |
| 47 | 1 | R9 | 22K |
| 48 | 1 | R11 | 6K8 |
| 49 | 1 | R12 | E2A-200R |
| 50 | 2 | R13, R32 | 2K2 |
| 51 | 2 | R15, R26 | 1K |
| 52 | 1 | R16 | 12k |
| 53 | 1 | R17 | 8K2 |
| 54 | 2 | R21, R18 | 100R |
| 55 | 1 | R22 | 220K |
| 56 | 1 | R24 | 39k |
| 57 | 1 | R25 | 82K |
| 58 | 2 | R38, R37 | 1K5 |
| 59 | 1 | T1 | TSWTCH1 |
| 60 | 1 | U1 | LM393 |
| 61 | 1 | U2 | UC3843AN |

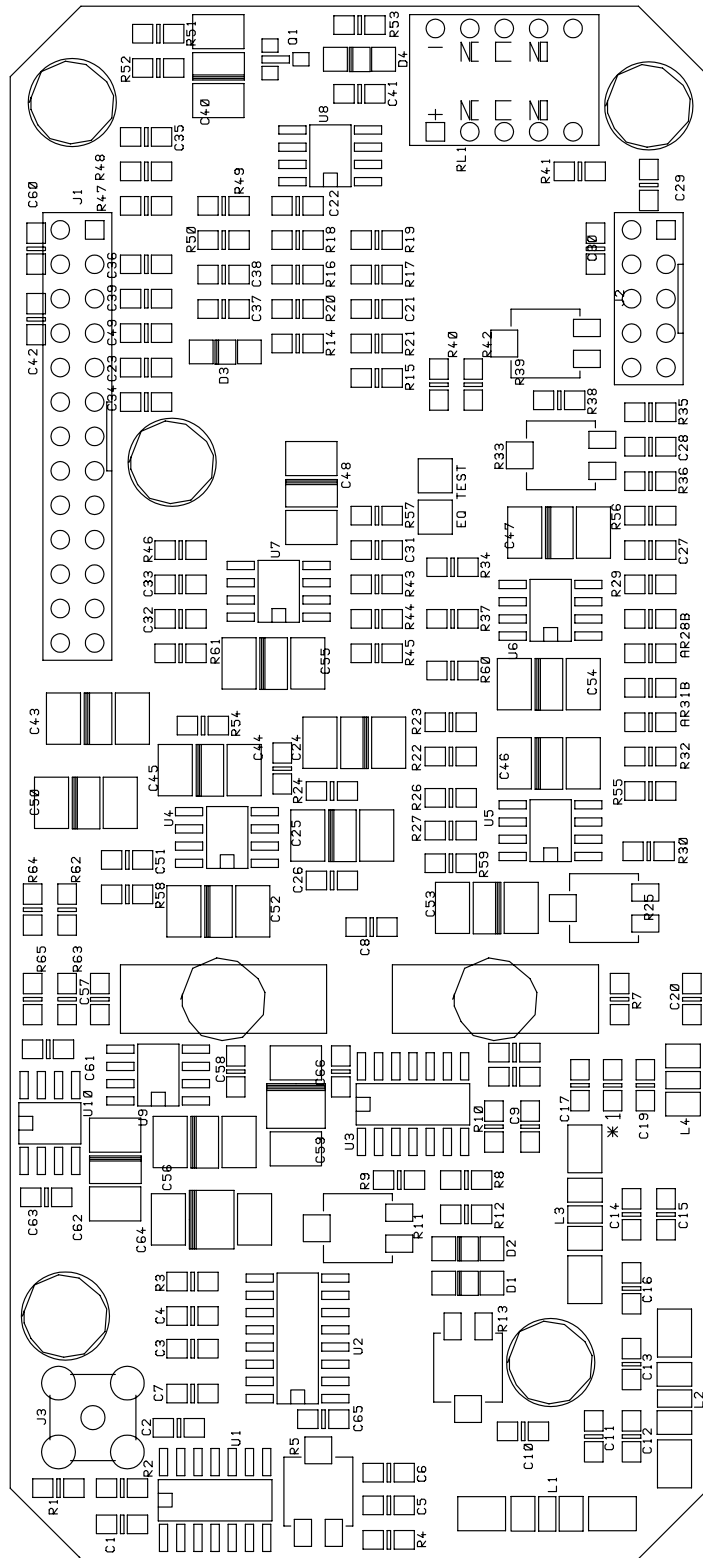

| | | | | |
|--|---|--|---|--|
| | NOME PARTE: RX1-NV LCD M.G. AUTORE: M.G. ARCHIVIAZIONE ELETTRONICA: "CARTELLA PROGETTI SU 'VUSPW'" MATERIALE: "VUSPW" | NOME PARTE: 7805MHz PWBREGULATOR DATA: 22/12/2005 CODICE PROGETTO: / TRATTAMENTO: / | REVISIONE: 1.3 CODICE DISGNO: SLFMD0001RXH STATO: / | SCALE: 1:1 SIZE: A3 PAGINA: 1 DI 1 |
|--|---|--|---|--|

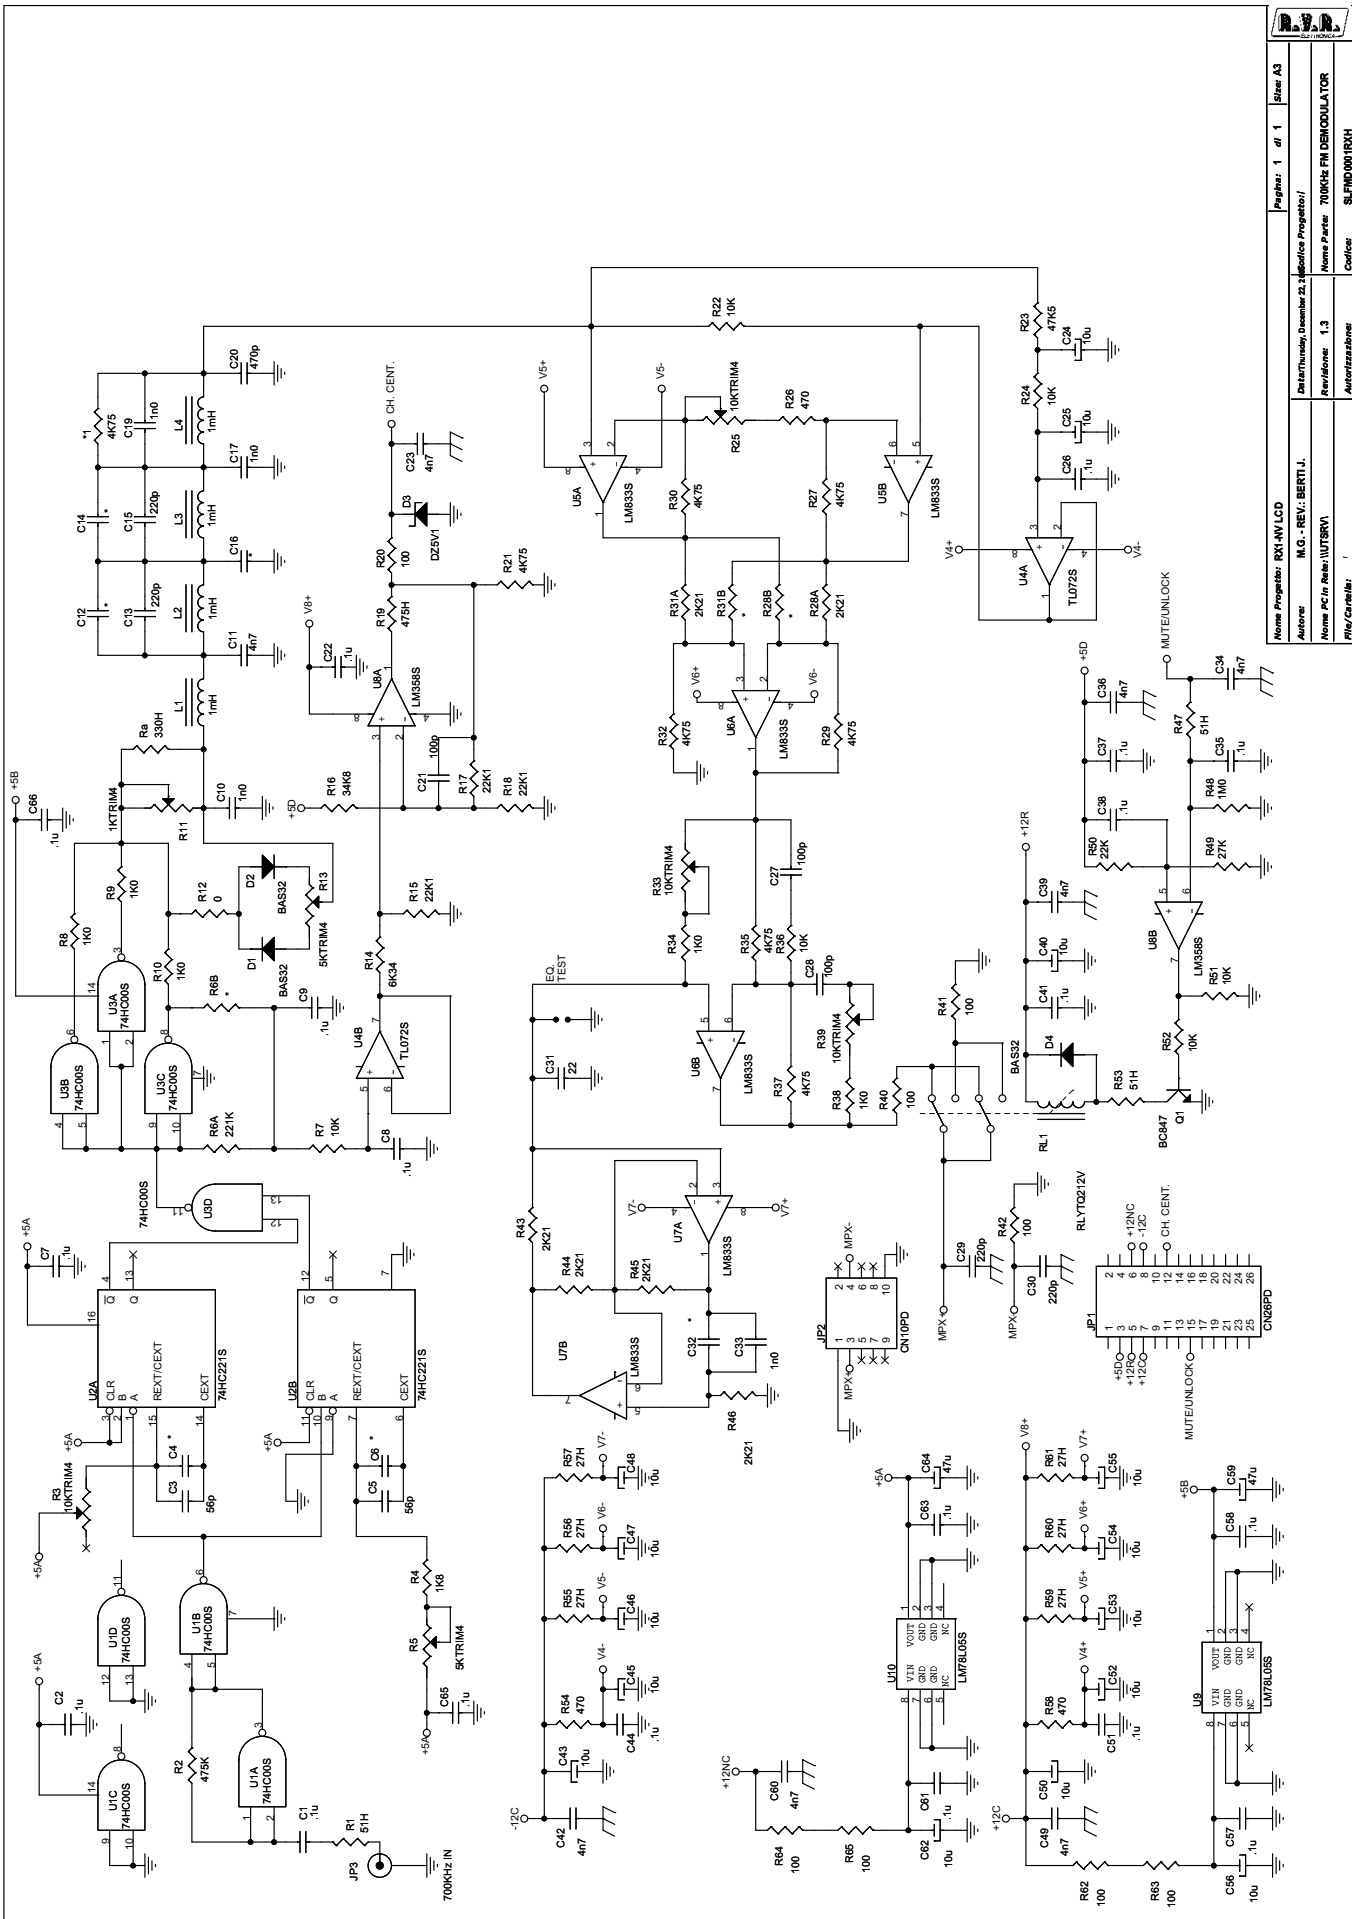

| | | | | |
|-------------------------------|--|---|--|---------------------------------|
| Nome Progetto: RX1-NV LCD | | Pagina: 1 di 1 | | Stato: K3 |
| Autore: M.G. - REV.: BERTI J. | | Data/Thursday, December 22, 2011 16:56:56 | | Nome File: 70MHz FM DEMODULATOR |
| Nome PC in Rete: NUTSRV1 | | Revisione: 1.3 | | Autore/autore: |
| Pila/Carica/bat: | | | | Config: SLFMD0001RXH |

700KHz FM DEMODULATOR Revised: Thursday, December 22, 2005

SLFMD0001RXH Revision: 1.3


/

M.G. - REV.: BERTI J.


| | | | |
|----|----|---|-----------|
| 5 | 4 | C10, C17, C19, C33 | 1n0 |
| 7 | 4 | C13, C15, C29, C30 | 220p |
| 8 | 1 | C20 | 470p |
| 9 | 3 | C21, C27, C28 | 100p |
| 10 | 15 | C24, C25, C40, C43, C45, C46, C47, C48, C50, C52, C53, C54, C55, C56, C62 | 10u |
| 11 | 1 | C31 | 22 |
| 12 | 2 | C59, C64 | 47u |
| 13 | 3 | D1, D2, D4 | BAS32 |
| 14 | 1 | D3 | DZ5V1 |
| 15 | 1 | JP1 | CN26PD |
| 16 | 1 | JP2 | CN10PD |
| 17 | 1 | JP3 | SMB_CS |
| 18 | 4 | L1, L2, L3, L4 | 1mH |
| 19 | 1 | Q1 | BC847 |
| 20 | 1 | RL1 | RLYTQ212V |
| 21 | 1 | Ra | 330H |
| 22 | 3 | R1, R47, R53 | 51H |
| 23 | 1 | R2 | 475K |
| 24 | 4 | R3, R25, R33, R39 | 10KTRIM4 |
| 25 | 1 | R4 | 1K8 |
| 26 | 2 | R5, R13 | 5KTRIM4 |
| 27 | 1 | R6A | 221K |
| 28 | 6 | R7, R22, R24, R36, R51, R52 | 10K |
| 29 | 5 | R8, R9, R10, R34, R38 | 1K0 |
| 30 | 1 | R11 | 1KTRIM4 |
| 31 | 1 | R12 | 0 |
| 32 | 1 | R14 | 6K34 |
| 33 | 3 | R15, R17, R18 | 22K1 |
| 34 | 1 | R16 | 34K8 |
| 35 | 1 | R19 | 475H |
| 36 | 8 | R20, R40, R41, R42, R62, R63, R64, R65 | 100 |
| 37 | 1 | R23 | 47K5 |
| 38 | 3 | R26, R54, R58 | 470 |
| 39 | 6 | R28A, R31A, R43, R44, R45, R46 | 2K21 |
| 40 | 1 | R48 | 1M0 |
| 41 | 1 | R49 | 27K |
| 42 | 1 | R50 | 22K |
| 43 | 6 | R55, R56, R57, R59, R60, R61 | 27H |
| 44 | 2 | U1, U3 | 74HC00S |
| 45 | 1 | U2 | 74HC221S |
| 46 | 1 | U4 | TL072S |
| 47 | 3 | U5, U6, U7 | LM833S |
| 48 | 1 | U8 | LM358S |
| 49 | 2 | U9, U10 | LM78L05S |

Pagina lasciata intenzionalmente in bianco
This page was intentionally left blank

CSINTRXLCD01

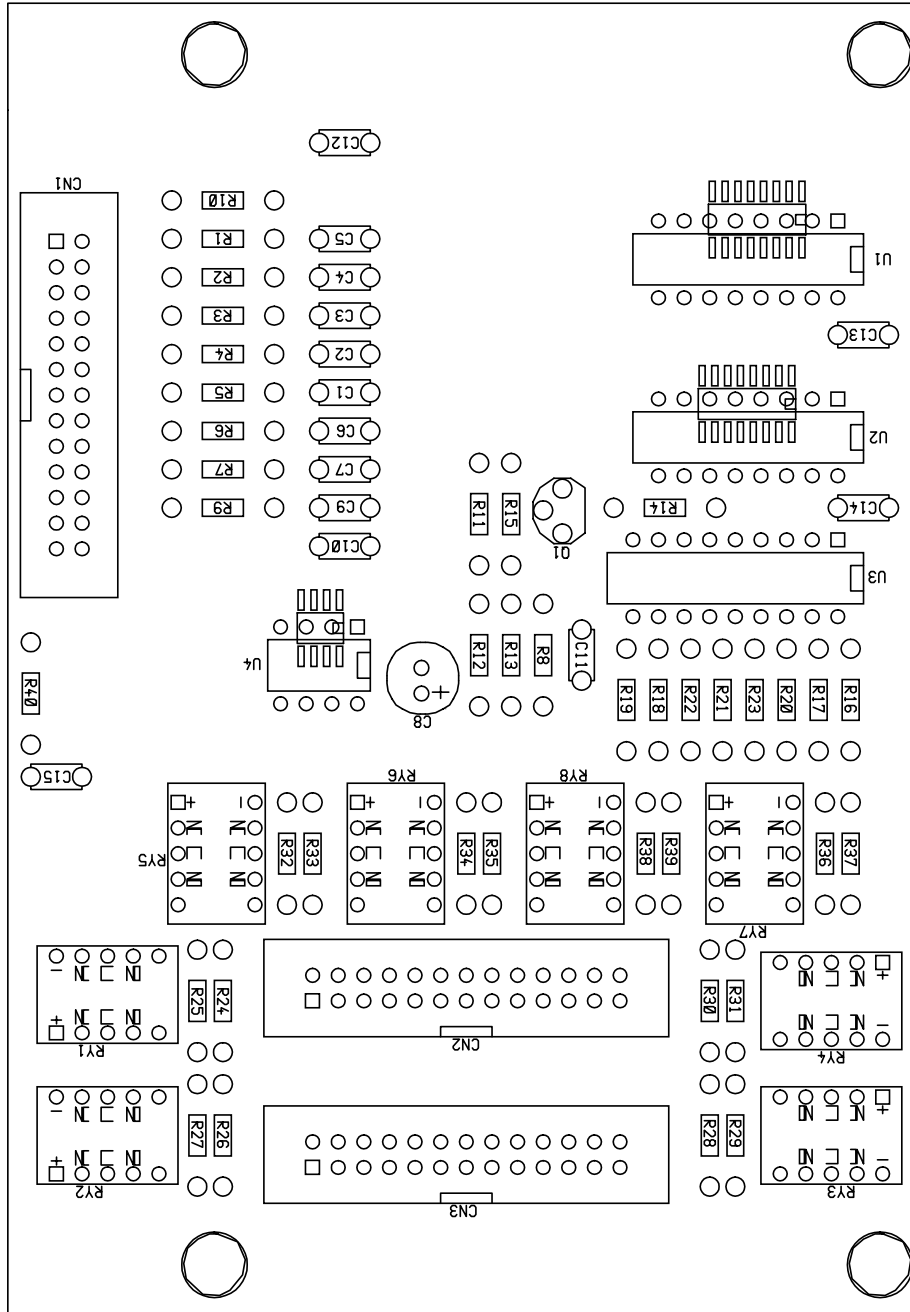

| | | | |
|---------------|-----------|------------------------|----------|
| DENOMINAZIONE | | RELAY INTERFACE OUTPUT | |
| DISPOSITIVO | | CSINTRXLCD01 | |
| SEMILAVORATO | DISEGNATO | II | TAVOLA n |
| MATERIALE | SCALA | | di |
| TRATTAMENTO | | | |

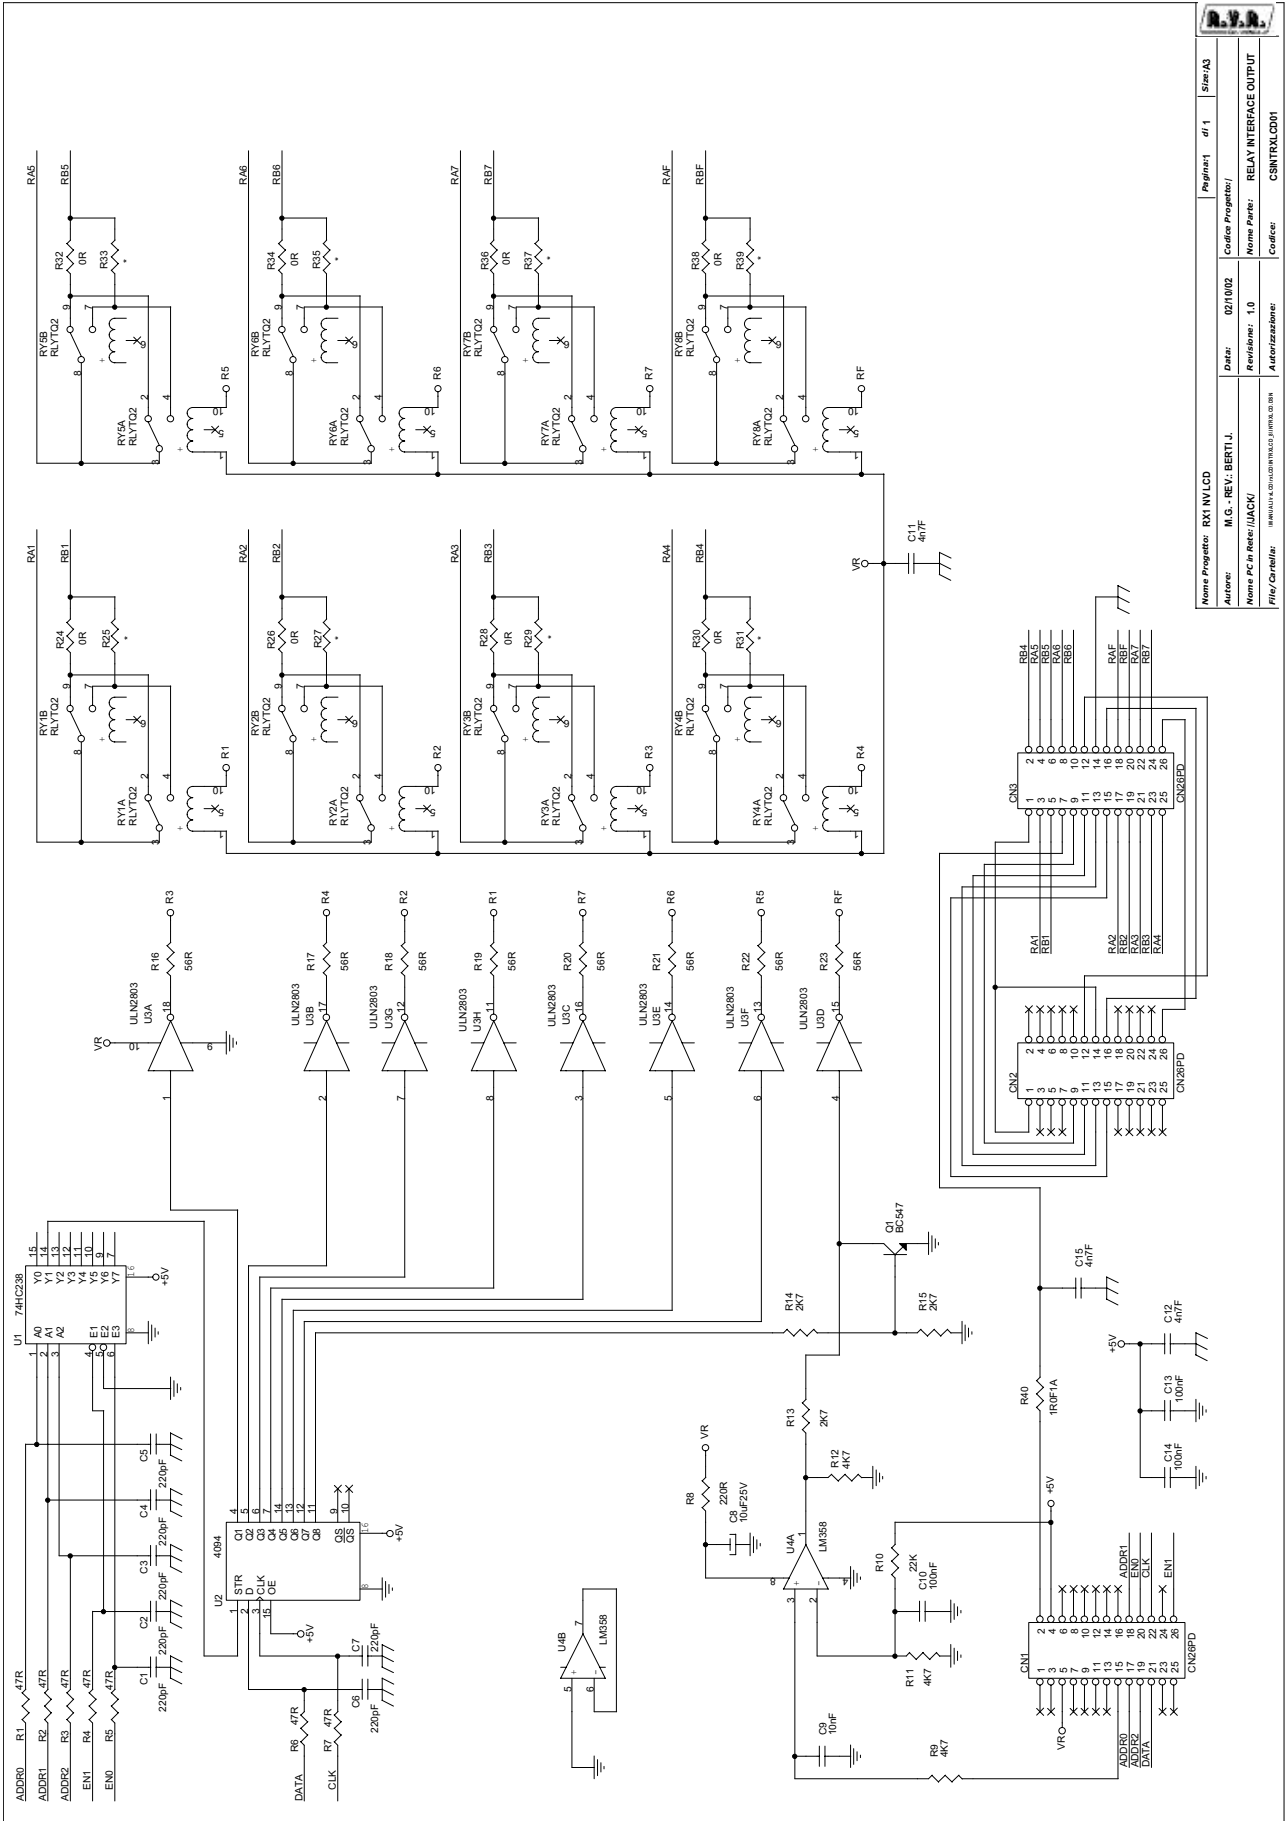


| | | | |
|---|--|------------------------------|---------------------------------------|
| R.V.A. | | Revisione: 1.0 | Nome Prodotto: RELAY INTERFACE OUTPUT |
| Nome Progetto: RX1 NV LCD | | Autore: M.G. - REV. BERTI J. | Nome File: CSINTRXLCD01 |
| Data: 02/10/02 | | Revisione: 1.0 | Autore: M.G. - REV. BERTI J. |
| Nome PC in Rete: /JACKI | | Autore: M.G. - REV. BERTI J. | Nome File: CSINTRXLCD01 |
| File/Caratteri: /R.V.A. - ELETTRONICA - S.P.A. - G. 08A | | Autore: M.G. - REV. BERTI J. | Nome File: CSINTRXLCD01 |


| Item | Quantity | Reference | Part |
|------|----------|-------------------------------------|---------------------|
| 1 | 3 | CN1,CN2,CN3 | CN26PD |
| 2 | 7 | C1,C2,C3,C4,C5,C6,C7 | 220pF P.5 |
| 3 | 1 | C8 | 10uF25V P.2.54 |
| 4 | 1 | C9 | 10nF P.5 |
| 5 | 3 | C10,C13,C14 | 100nF P.5 |
| 6 | 3 | C11,C12,C15 | 4n7F P.5 |
| 7 | 1 | Q1 | BC547 |
| 8 | 8 | RY1,RY2,RY3,RY4,RY5,RY6, RY7,RY8 | RLYTQ212V |
| 9 | 7 | R1,R2,R3,R4,R5,R6,R7 | 47R 1/4W |
| 10 | 1 | R8 | 220R 1/4W |
| 11 | 3 | R9,R11,R12 | 4K7 1/4W |
| 12 | 1 | R10 | 22K 1/4W |
| 13 | 3 | R13,R14,R15 | 2K7 1/4W |
| 14 | 8 | R16,R17,R18,R19,R20,R21, R22,R23 | 56R 1/4W |
| 15 | 8 | R24,R26,R28,R30,R32,R34, R36,R38 | 0R |
| 16 | 8 | R25,R27,R29,R31,R33,R35, R37,R39 | * |
| 17 | 1 | R40 | 1R0F1A RES. FUS. 1A |
| 18 | 1 | U1 | 74HC238 |
| 19 | 1 | U2 | 4094 |
| 20 | 1 | U3 | ULN2803 |
| 21 | 1 | U4 | LM358 |

Pagina lasciata intenzionalmente in bianco
This page was intentionally left blank

CS107MONLCD

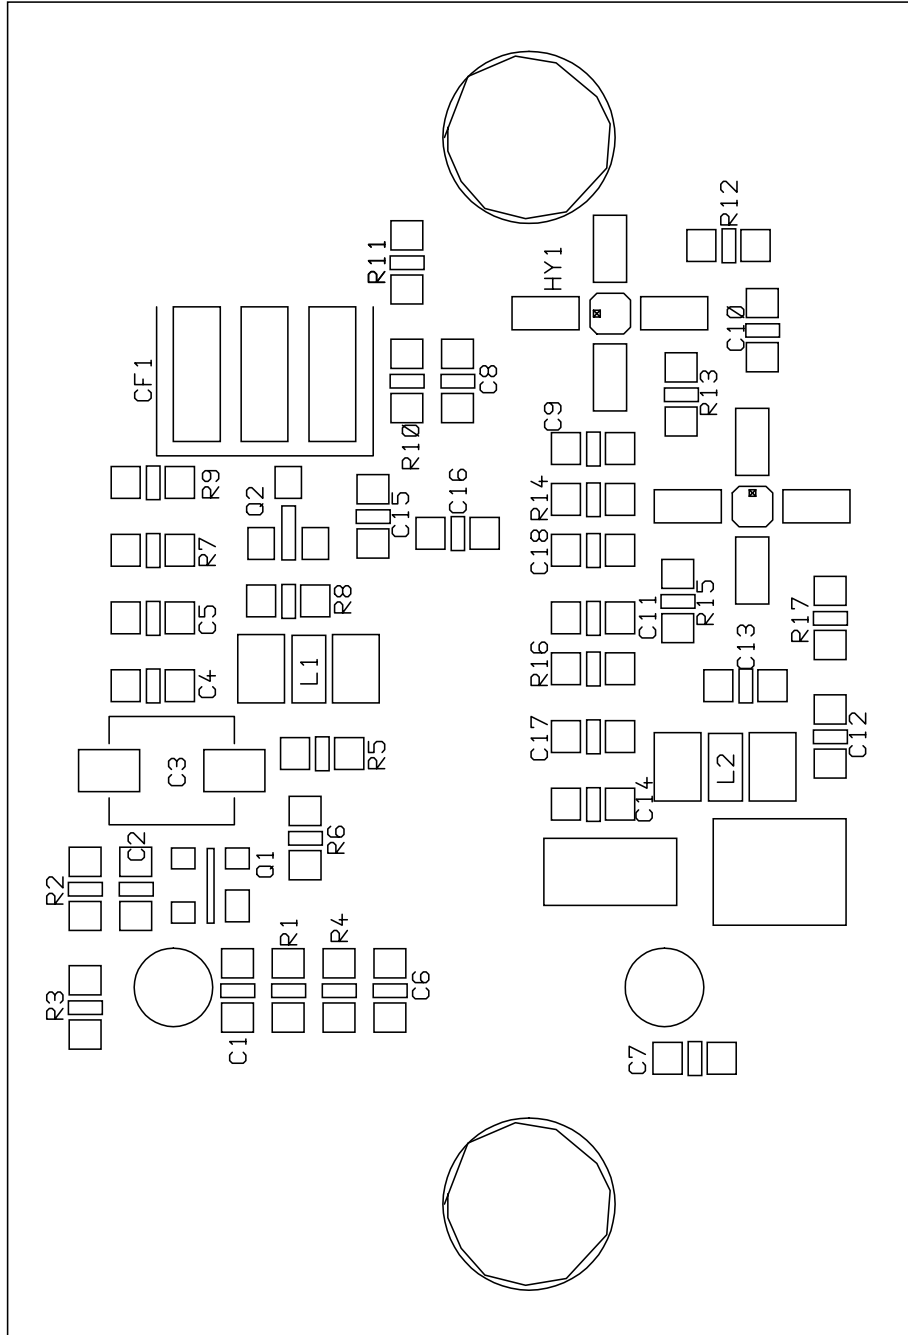

| | | | |
|---------------|-----------|------------------------|--------------|
| DENOMINAZIONE | | SCHEDA MONITOR 10.7Mhz | |
| DISPOSITIVO | | CS107MONLCD | |
| SEMILAVORATO | DISEGNATO | U | TAVOLA n. di |
| MATERIALE | SCALE | | |
| TRATTAMENTO | | | |

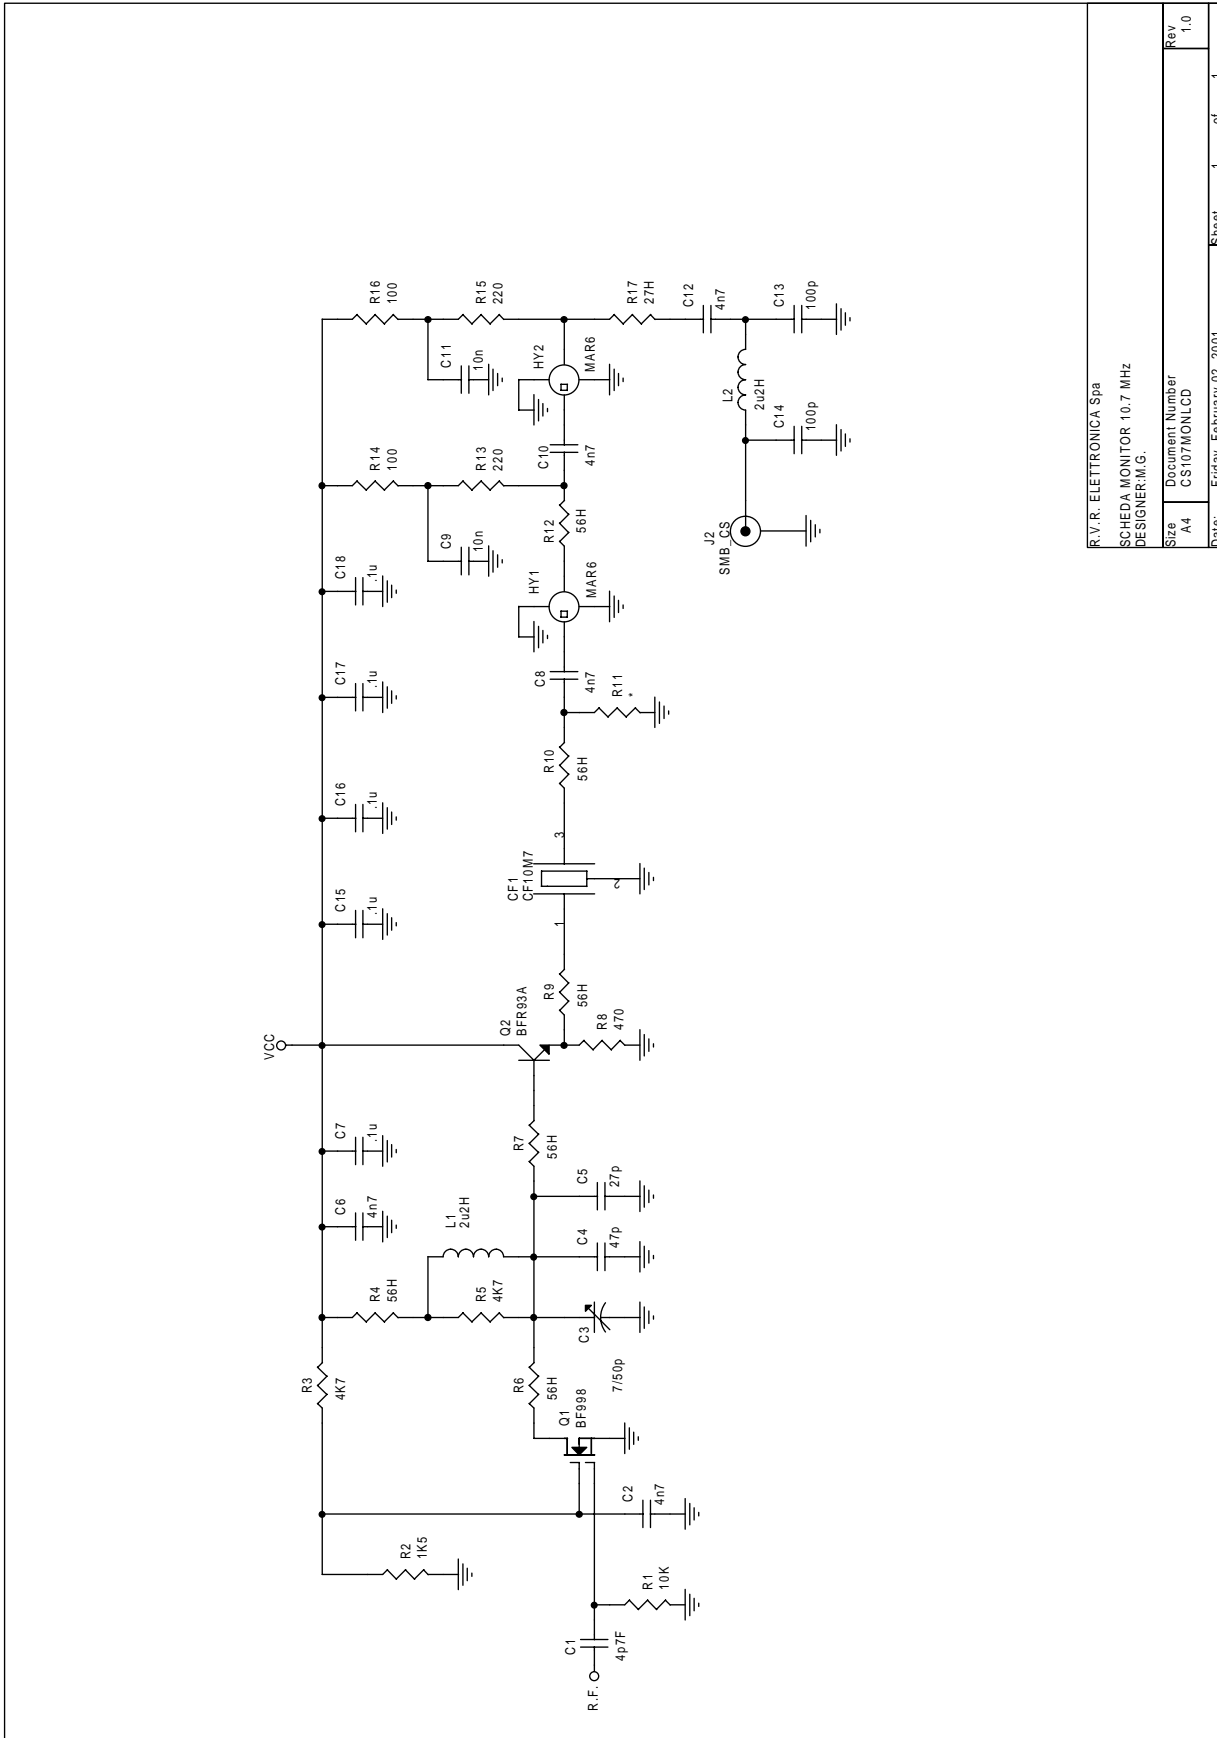


R.V.R. ELETTRONICA Spa
 SCHEDA MONITOR 10.7 MHZ
 DESIGNER:M.G.

| | | |
|-------|---------------------------|--------|
| Size | Document Number | Rev |
| A4 | CS107MONLCD | 1.0 |
| Date: | Friday, February 02, 2001 | Sheet |
| | | 1 of 1 |


| R.V.R. ELETTRONICA Spa | | | Bill Of Materials | | Page |
|------------------------|--------|------------------------|-------------------|---------------------|------|
| Item | Quant. | Reference | Part | Description | Code |
| 1 | 1 | CF1 | CF10M7 | FILTRO CER. 10.7MHz | 1 |
| 2 | 1 | C1 | 4p7 | COND. CHIP 0805 | |
| 3 | 3 | C2,C6,C12 | 4n7 | COND. CHIP 0805 | |
| 4 | 1 | C3 | 7/50p | | |
| 5 | 1 | C4 | 47p | COND. CHIP 0805 | |
| 6 | 1 | C5 | 27p | COND. CHIP 0805 | |
| 7 | 5 | C7,C15,C16,C17, C18 | .1u | COND. CHIP 0805 | |
| 8 | 2 | C8,C10 | 270p | COND. CHIP 0805 | |
| 9 | 2 | C9,C11 | 10n | COND. CHIP 0805 | |
| 10 | 2 | C13,C14 | 100p | COND. CHIP 0805 | |
| 11 | 2 | HY1,HY2 | MAR6 | MODULO IBR. MAR6 | |
| 12 | 1 | J2 | SMB_CS | CONN.SMB A STAMPATO | |
| 13 | 2 | L1,L2 | 2u2H | IMPEDENZA SMD 1210 | |
| 14 | 1 | Q1 | BF998 | DG MOSFET SOT143 | |
| 15 | 1 | Q2 | BFR93A | TRANSISTOR SOT23 | |
| 16 | 1 | R1 | 1K0 | RES. SMD 0805 5% | |
| 17 | 1 | R2 | 1K5 | RES. SMD 0805 5% | |
| 18 | 2 | R3,R5 | 4K7 | RES. SMD 0805 5% | |
| 19 | 4 | R4,R6,R7,R12 | 56H | RES. SMD 0805 5% | |
| 20 | 3 | R8,R13,R15 | 470 | RES. SMD 0805 5% | |
| 21 | 2 | R9,R10 | 150 | RES. SMD 0805 5% | |
| 22 | 1 | R11 | * | | |
| 23 | 2 | R14,R16 | 100 | RES. SMD 0805 5% | |
| 24 | 1 | R17 | 27H | RES. SMD 0805 5% | |

Pagina lasciata intenzionalmente in bianco

This page was intentionally left blank

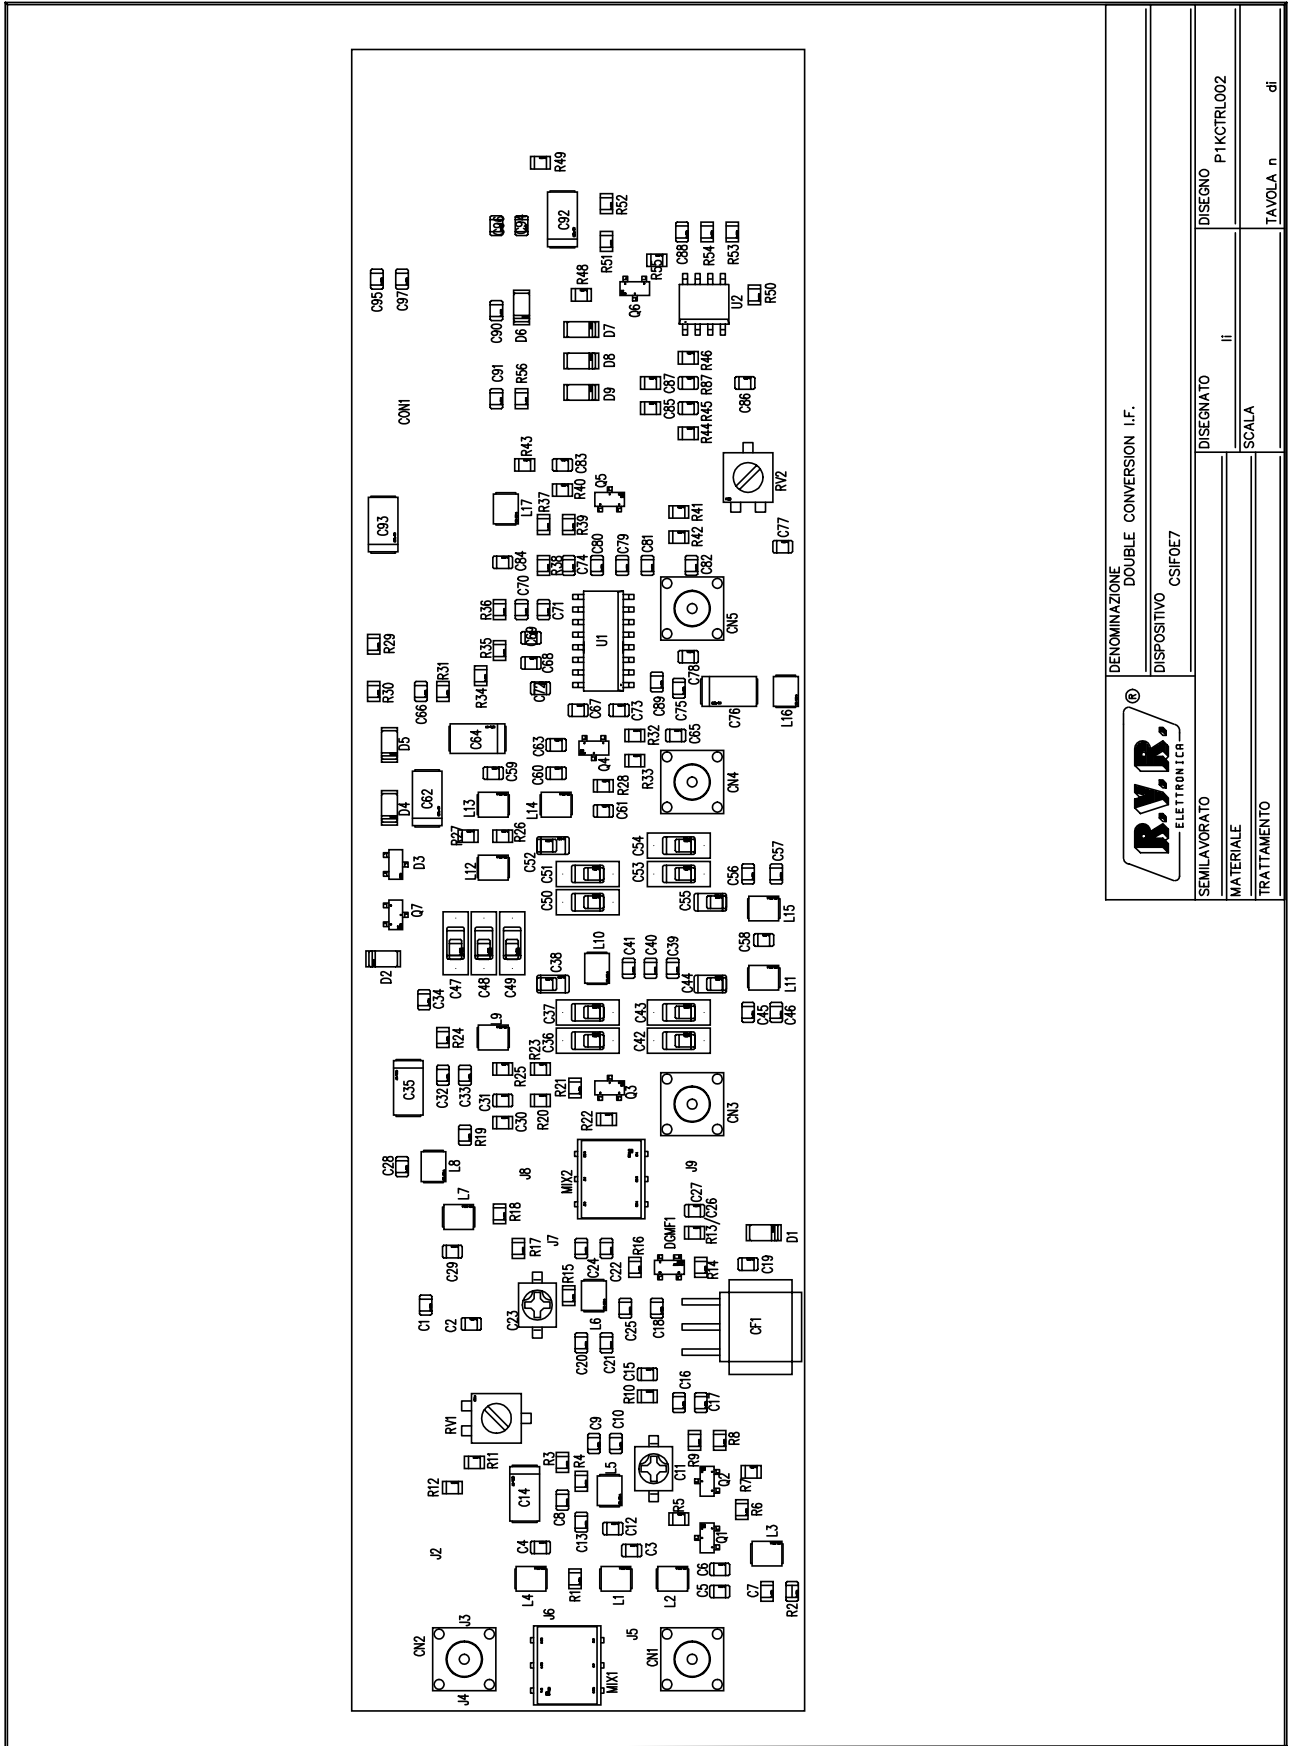


| | | | |
|--------------|--|---|--|
| | | DENOMINAZIONE DOUBLE CONVERSION I.F. | |
| SEMILAVORATO | | DISPOSITIVO CS10E7 | |
| MATERIALE | | DISEGNO II | |
| TRATTAMENTO | | SCALE | |
| | | P1KCTRL002 | |
| | | TAVOLA n. di | |

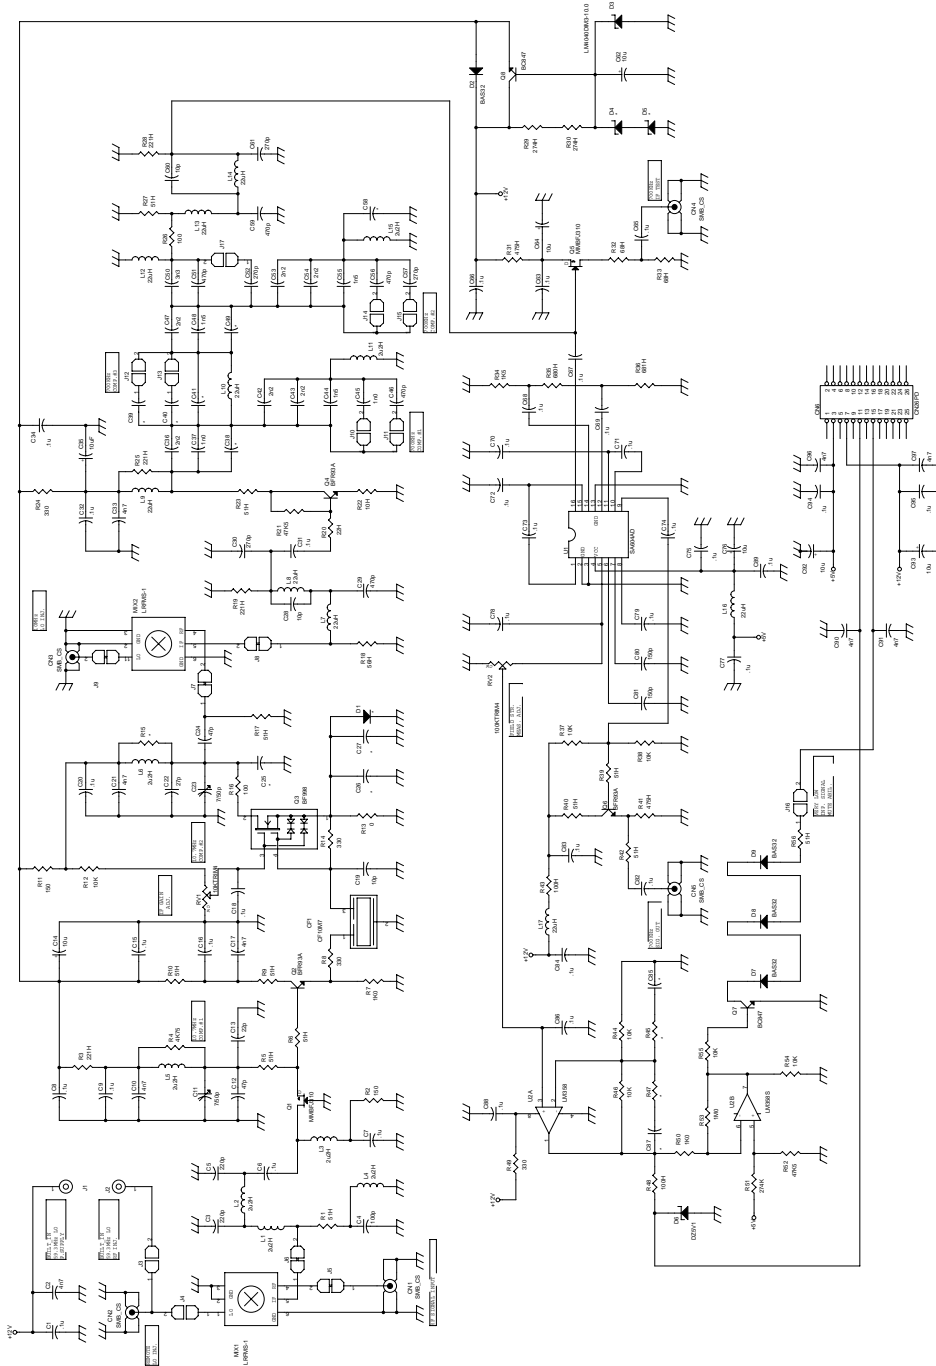

| | | | | |
|--|--|----------------|------------------------------------|-----------------|
| Nome Progetto: e-Project N.º | | Page: 1 | d. 1 | Size: A4 |
| Autore: M.G. - REV.: BERTI J. | | Data: 10/12/02 | Codice Progetto: | |
| Nome PC in Rete: (LACK) | | Revisione: 1.1 | Nome Parte: DOUBLE CONVERSION I.F. | |
| File: C:\rvt\manual\RX1\CONVERSION.LCD | | Autore: | | Codice: CSIF007 |


| Item | Quant. | Reference | Part | Description | Code |
|------|--------|--|-----------|----------------------|------|
| 1 | 1 | CF1 | CF10M7 | FILTRO CER. 10.7MHz | |
| 2 | 5 | CN1, CN2, CN3, CN4, CN5 | SMB_CS | CONN.SMB A STAMPATO | |
| 3 | 1 | CN6 | CN26PD | CONN. M 2X2.54 26PIN | |
| 4 | 35 | C1, C6, C7, C8, C9, C15, C16, C18, C20, C31, C32, C34, C63, C65, C66, C67, C68, C69, C70, C71, C72, C73, C74, C75, C77, C78, C79, C82, C83, C84, C86, C88, C89, C94, C95 | .1u | COND. CHIP 0805 | |
| 5 | 9 | C2, C10, C17, C21, C33, C90, C91, C96, C97 | 4n7 | COND. CHIP 0805 | |
| 6 | 2 | C3, C5 | 220p | COND. CHIP 0805 | |
| 7 | 1 | C4 | 100p | COND. CHIP 0805 | |
| 8 | 2 | C11, C23 | 7/50p | COMP. SMD 4X4 7/50p | |
| 9 | 2 | C12, C24 | 47p | COND. CHIP 0805 | |
| 10 | 1 | C13 | 22p | COND. CHIP 0805 | |
| 11 | 7 | C14, C35, C62, C64, C76, C92, C93 | 10u | COND. EL. SMD16V | |
| 12 | 3 | C19, C28, C60 | 10p | COND. CHIP 0805 | |
| 13 | 1 | C22 | 27p | COND. CHIP 0805 | |
| 14 | 34 | J1, D1, J2, J3, J4, D4, J5, D5, J6, J7, J8, J9, J10, J11, J12, J13, J14, R15, J15, J16, J17, C25, C26, C27, C38, C39, C40, C41, R45, R47, C49, C58, C85, C87 | * | | |
| 15 | 5 | C29, C46, C51, C56, C59 | 470p | COND. CHIP 0805 | |
| 16 | 4 | C30, C52, C57, C61 | 270p | COND. CHIP 0805 | |
| 18 | 6 | C36, C42, C43, C47, C53, C54 | 2n2 | COND. CHIP 0805 | |
| 19 | 2 | C45, C37 | 1n0 | COND. CHIP 0805 | |
| 20 | 3 | C44, C48, C55 | 1n5 | COND. CHIP 0805 | |
| 21 | 1 | C50 | 3n3 | COND. CHIP 0805 | |
| 22 | 2 | C80, C81 | 150p | COND. CHIP 0805 | |
| 23 | 4 | D2, D7, D8, D9 | BAS32 | DIODO SIL. MIMIMELF | |
| 24 | 1 | D3 | LM4040-10 | D. ZENER PREC. 10V | |
| 25 | 1 | D6 | DZ5V1 | DIODO ZENER SMD 5V1 | |
| 26 | 8 | L1, L2, L3, L4, L5, L5, L6, L11, L15 | 2u2H | IMPEDENZA SMD 1210 | |

| | | | | |
|----|----|--|-----------|---------------------|
| 27 | 9 | L7, L8, L9, L10, L12, L13, L14, L16, L17 | 22uH | IMPEDEENZA SMD 1210 |
| 28 | 2 | MIX1, MIX2 | LRFMS-1 | MIXER SMD 1-500MHz |
| 29 | 2 | Q1, Q5 | MMBFJ310 | FET SMD SOT23 |
| 30 | 3 | Q2, Q4, Q6 | BFR93A | TRANSISTOR SOT23 |
| 31 | 1 | Q3 | BF998 | DG MOSFET SOT143 |
| 32 | 2 | Q7, Q8 | BC847 | TRANSISTOR SOT23 |
| 33 | 1 | RV1 | 10KTRIM4 | TRIM.4X4mm SMD 10K |
| 34 | 1 | RV2 | 100KTRIM4 | TRIM.4X4mm SMD 100K |
| 35 | 12 | R1, R5, R6, R9, R10, R17, R23, R27, R39, R40, R42, R56 | 51H | RES. SMD 0805 5% |
| 36 | 2 | R2, R11 | 150 | RES. SMD 0805 5% |
| 37 | 4 | R3, R19, R25, R28 | 221H | RES. SMD 0805 1% |
| 38 | 1 | R4 | 4K75 | RES. SMD 0805 1% |
| 39 | 2 | R7, R50 | 1K0 | RES. SMD 0805 5% |
| 40 | 4 | R8, R14, R24, R49 | 330 | RES. SMD 0805 5% |
| 41 | 7 | R12, R37, R38, R44, R46, R54, R55 | 10K | RES. SMD 0805 5% |
| 42 | 1 | R13 | 0 | RES. SMD 0 OHM |
| 43 | 2 | R16, R26, R43, R48 | 100 | RES. SMD 0805 5% |
| 44 | 1 | R18 | 56H | RES. SMD 0805 5% |
| 45 | 1 | R20 | 22H | RES. SMD 0805 5% |
| 46 | 2 | R21, R52 | 47K5 | RES. SMD 0805 1% |
| 47 | 1 | R22 | 10H | RES. SMD 0805 5% |
| 48 | 2 | R29, R30 | 274H | RES. SMD 0805 1% |
| 49 | 2 | R31, R41 | 475H | RES. SMD 0805 1% |
| 50 | 2 | R32, R33 | 68H | RES. SMD 0805 5% |
| 51 | 1 | R34 | 1K5 | RES. SMD 0805 5% |
| 52 | 1 | R35 | 680H | RES. SMD 0805 1% |
| 53 | 1 | R36 | 681H | RES. SMD 0805 1% |
| 55 | 1 | R51 | 274K | RES. SMD 0805 1% |
| 56 | 1 | R53 | 1M0 | RES. SMD 0805 5% |
| 57 | 1 | U1 | SA604AD | CI LIN. SA604SADMD |
| 58 | 1 | U2 | LM358S | CI LIN. LM358SMD |

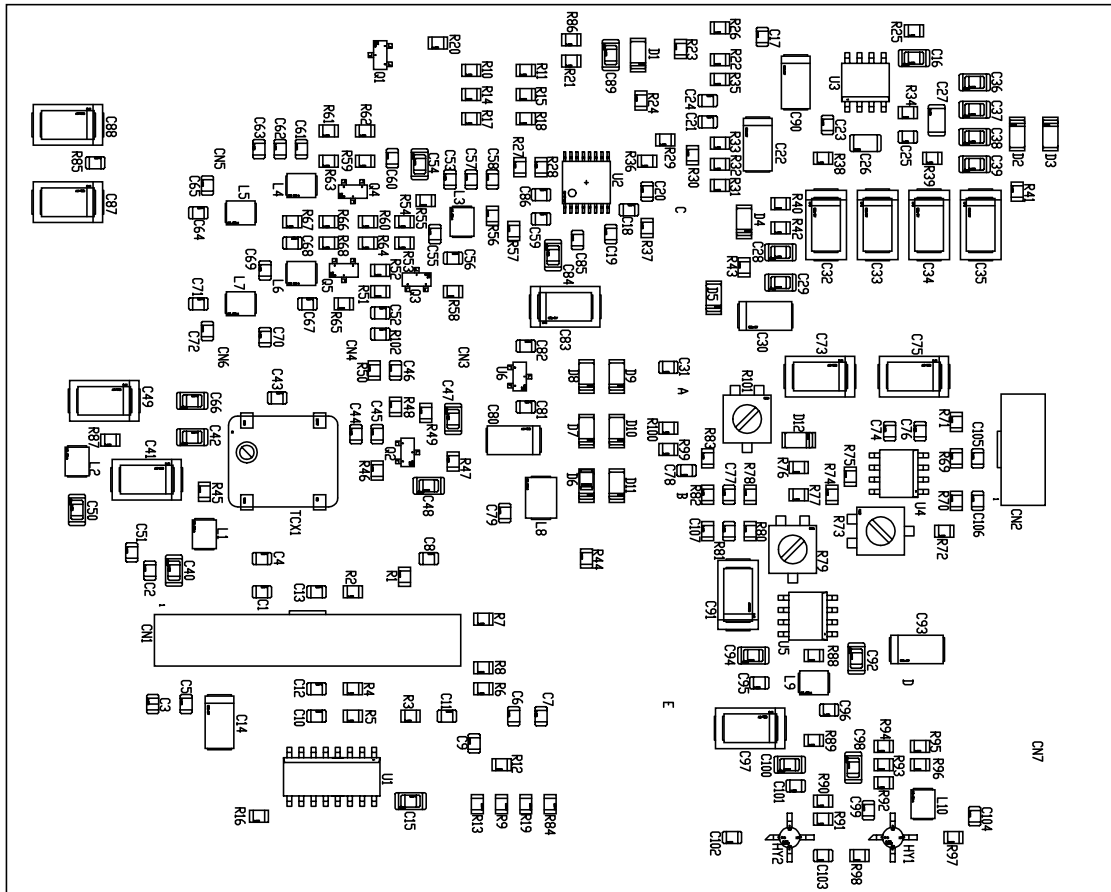

LAYOUT PLL <1.6GHz


| | | |
|---|--|-------------|
|  | DENOMINAZIONE PLL CON MODULATORE PTRLNV/RXRLNV-LCD | |
| | DISPOSITIVO CSPLLRTX01 | |
| SEMILAVORATO | DISEGNATO li | DISEGNO |
| MATERIALE | SCALA | TAVOLA n di |
| TRATTAMENTO | | |

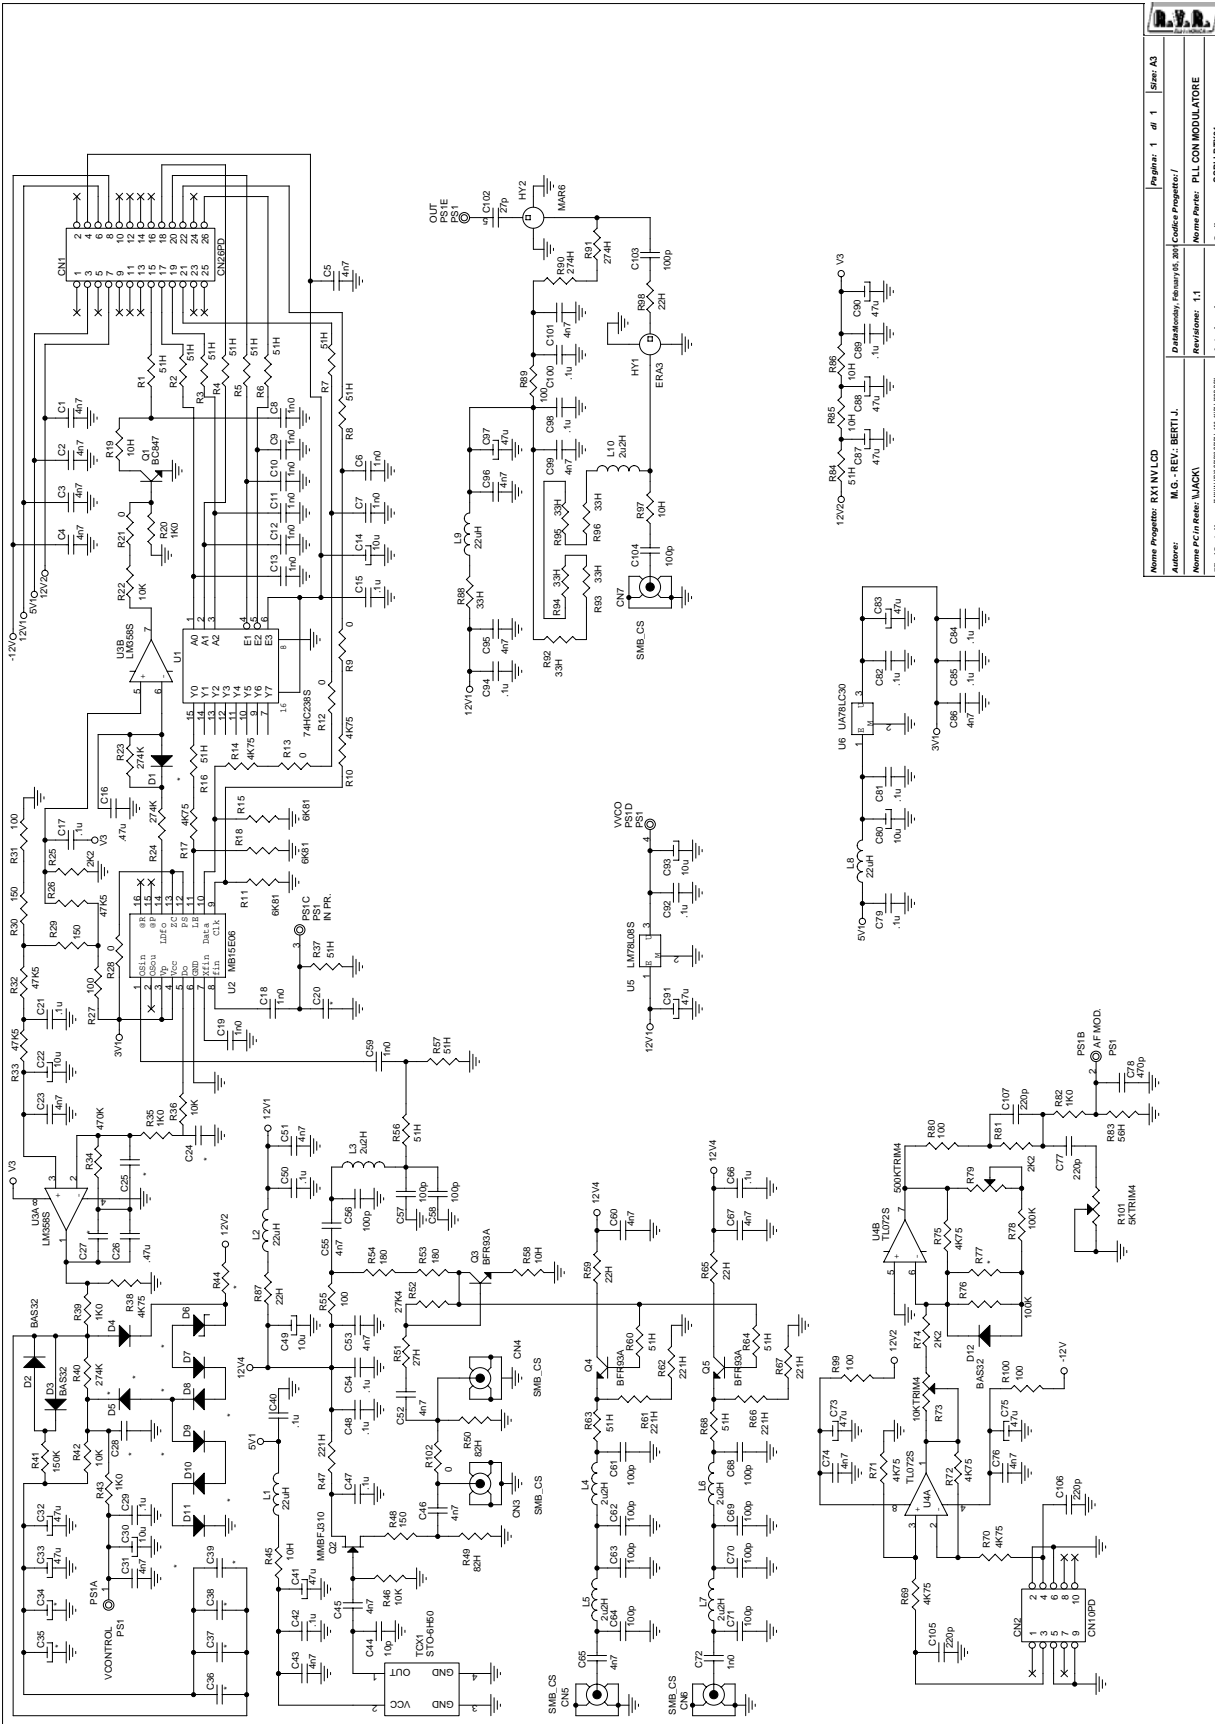


| | | | |
|---|-------------------------|--------------------------------------|----------|
| Nome Progetto: RX1 NV LCD | Preparato: 1 | di: 1 | Size: A3 |
| Autore: M.G. REV: BERTI J. | Database: Rev. 15. 2001 | Codice Progetto: / | |
| Nome PC in Rete: \LACK\ | Revisione: 1.1 | Nome Pannello: P.L.L. CON MODULATORE | |
| File/Controllo: \BANK\PC\RX1 NV LCD.DWG | Autore: M.G. | Codice: CSPLLRX01 | |

| R.V.R. ELETTRONICA Spa | | Bill Of Materials | | | Page | 1 |
|------------------------|--------|--|--------|----------------------|-------------|---|
| Item | Quant. | Reference | Part | Description | Code | |
| 1 | 1 | CN1 | CN26PD | CONN. M 2X2.54 26PIN | CNTM08PC26P | |
| 2 | 38 | CN2, U4, D12, C20, C27, C30, C33, C34, C35, C36, C37, C38, C39, R69, R70, R71, R72, R73, C73, R74, C74, R75, C75, R76, C76, R77, C77, R78, R79, R80, R81, R82, R99, R100, R101, C105, C106, C107 | * | | | |
| 3 | 5 | CN3, CN4, CN5, CN6, CN7 | SMB_CS | CONN.SMB A STAMPATO | | |
| 4 | 22 | C1, C2, C3, C4, C5, C23, C31, C43, C45, C46, C51, C52, C53, C55, C60, C65, C67, C86, C95, C96, C99, C101 | 4n7 | COND. CHIP 0805 | | 0 |
| 5 | 12 | C6, C7, C8, C9, C10, C11, C12, C13, C18, C19, C59, C72 | 1n0 | COND. CHIP 0805 | | 0 |
| 6 | 7 | C14, C22, C32, C49, C80, C90, C93 | 10u | COND. EL. SMD16V | | 0 |
| 7 | 23 | C15, C17, C21, C24, C28, C29, C40, C42, C47, C48, C50, C54, C66, C79, C81, C82, C84, C85, C89, C92, C94, C98, C100 | .1u | COND. CHIP 0805 | | 0 |
| 8 | 2 | C16, C26 | .47u | COND. CHIP 1206 | | 0 |
| 9 | 1 | C25 | 22n | COND. CHIP 0805 | | 0 |
| 10 | 6 | C41, C83, C87, C88, C91, C97 | 47u | COND. EL. SMD16V | | 0 |
| 11 | 1 | C44 | 10p | COND. CHIP 0805 | | 0 |
| 12 | 13 | C56, C57, C58, C61, C62, C63, C64, C68, C69, C70, C71, C103, C104 | 100p | COND. CHIP 0805 | | 0 |
| 13 | 1 | C78 | 470p | COND. CHIP 0805 | | 0 |
| 14 | 1 | C102 | 27p | COND. CHIP 0805 | | 0 |
| 15 | 10 | D1, D2, D3, D4, D5, D7, D8, D9, D10, D11 | BAS32 | DIODO SIL. MIMIMELF | | |
| 16 | 1 | D6 | DZ5V1 | DIODO ZENER SMD 5V1 | | |
| 17 | 1 | HY1 | SNA186 | MODULO IBR. SNA186 | | |
| 18 | 1 | HY2 | MAR6 | MODULO IBR. MAR6 | | |
| 19 | 4 | L1, L2, L8, L9 | 22uH | IMPEDENZA SMD 1210 | | |
| 20 | 6 | L3, L4, L5, L6, L7, L10 | 2u2H | IMPEDENZA SMD 1210 | | |
| 21 | 1 | Q1 | BC847 | TRANSISTOR SOT23 | | |

| | | | | |
|----|----|--|----------|--------------------------|
| 22 | 1 | Q2 | MMBFJ310 | FET SMD SOT23 |
| 23 | 3 | Q3, Q4, Q5 | BFR93A | TRANSISTOR SOT23 |
| 24 | 17 | R1, R2, R3, R4, R5, R6, R7, R8, R16, R37, R56, R57, R60, R63, R64, R68, R84 | 51H | RES. SMD 0805 5% |
| 25 | 6 | R9, R12, R13, R21, R28, R83 | 0 | RES. SMD 0 OHM |
| 26 | 5 | R10, R14, R17, R38, R42 | 4K75 | RES. SMD 0805 1% |
| 27 | 3 | R11, R15, R18 | 6K81 | RES. SMD 0805 1% |
| 28 | 6 | R19, R45, R58, R85, R86, R97 | 10H | RES. SMD 0805 5% |
| 29 | 5 | R20, R33, R39, R43, R44 | 1K0 | RES. SMD 0805 5% |
| 30 | 5 | R22, R25, R32, R36, R46 | 10K | RES. SMD 0805 5% |
| 31 | 2 | R23, R24 | 274K | RES. SMD 0805 1% |
| 32 | 1 | R26 | 22K | RES. SMD 0805 5% |
| 33 | 4 | R27, R31, R55, R89 | 100 | RES. SMD 0805 5% |
| 34 | 3 | R29, R30, R48 | 150 | RES. SMD 0805 5% |
| 35 | 1 | R34 | 100K | RES. SMD 0805 5% |
| 36 | 1 | R35 | 47K5 | RES. SMD 0805 1% |
| 37 | 1 | R40 | 475K | RES. SMD 0805 1% |
| 38 | 1 | R41 | 150K | RES. SMD 0805 5% |
| 39 | 5 | R47, R61, R62, R66, | 221H | RES. SMD 0805 1% |
| 40 | 2 | R49, R50 | 82H | RES. SMD 0805 5% |
| 41 | 1 | R51 | 27H | RES. SMD 0805 5% |
| 42 | 1 | R52 | 27K4 | RES. SMD 0805 1% |
| 43 | 2 | R54, R53 | 180 | RES. SMD 0805 5% |
| 44 | 4 | R59, R65, R87, R98 | 22H | RES. SMD 0805 5% |
| 45 | 6 | R88, R92, R93, R94, R95, R96 | 33H | RES. SMD 0805 5% |
| 46 | 2 | R91, R90 | 274H | RES. SMD 0805 1% |
| 47 | 1 | TCX1 | STO-6H50 | TCXO SMD STO-6H50 10MHz |
| 48 | 1 | U1 | 74HC238S | CI DIG. 74HC238SMD |
| 49 | 1 | U2 | MB15E06 | CI DIG. MB15E06 SSOP16 |
| 50 | 1 | U3 | LM358S | CI LIN. LM358SMD |
| 51 | 1 | U5 | LM78L08S | CI LIN. 78L08SMD SO8 |
| 52 | 1 | U6 | UA78LC30 | CI LIN. 78LC30NTRSOT23-5 |

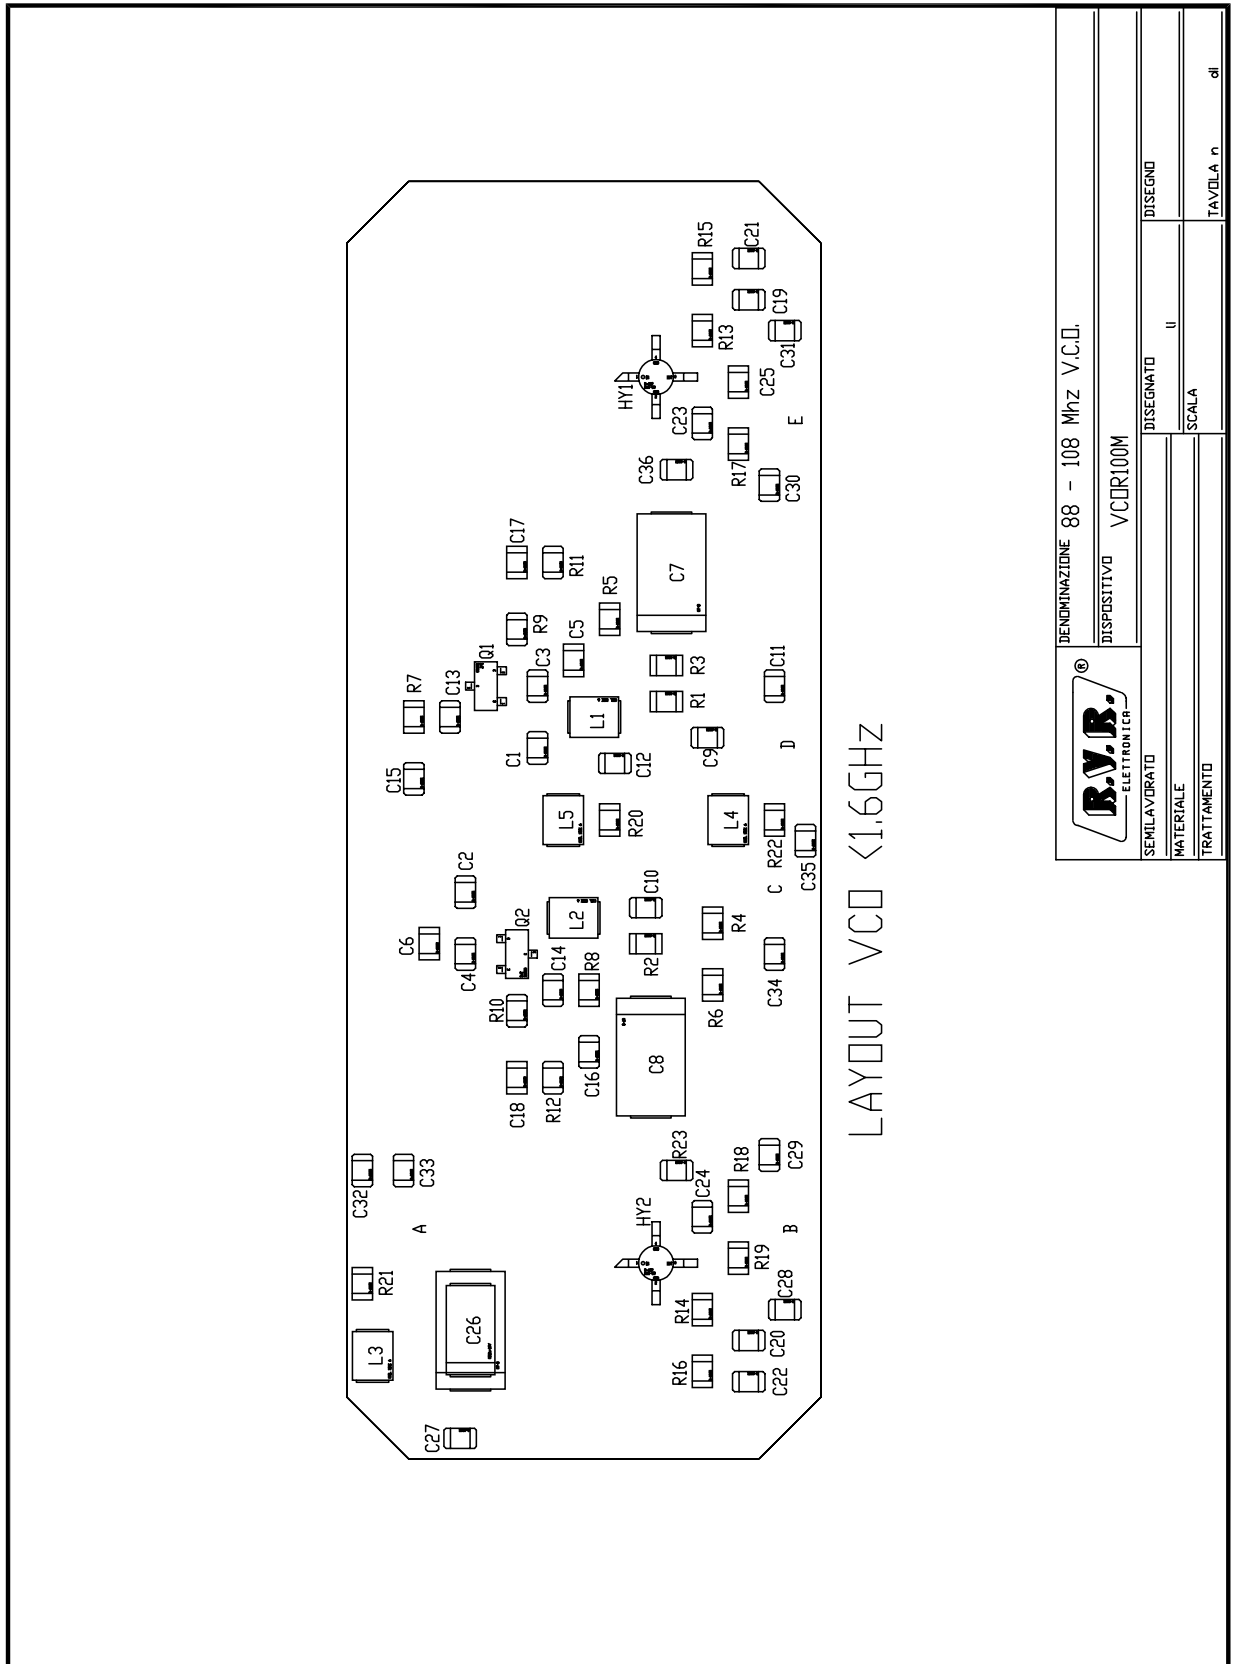

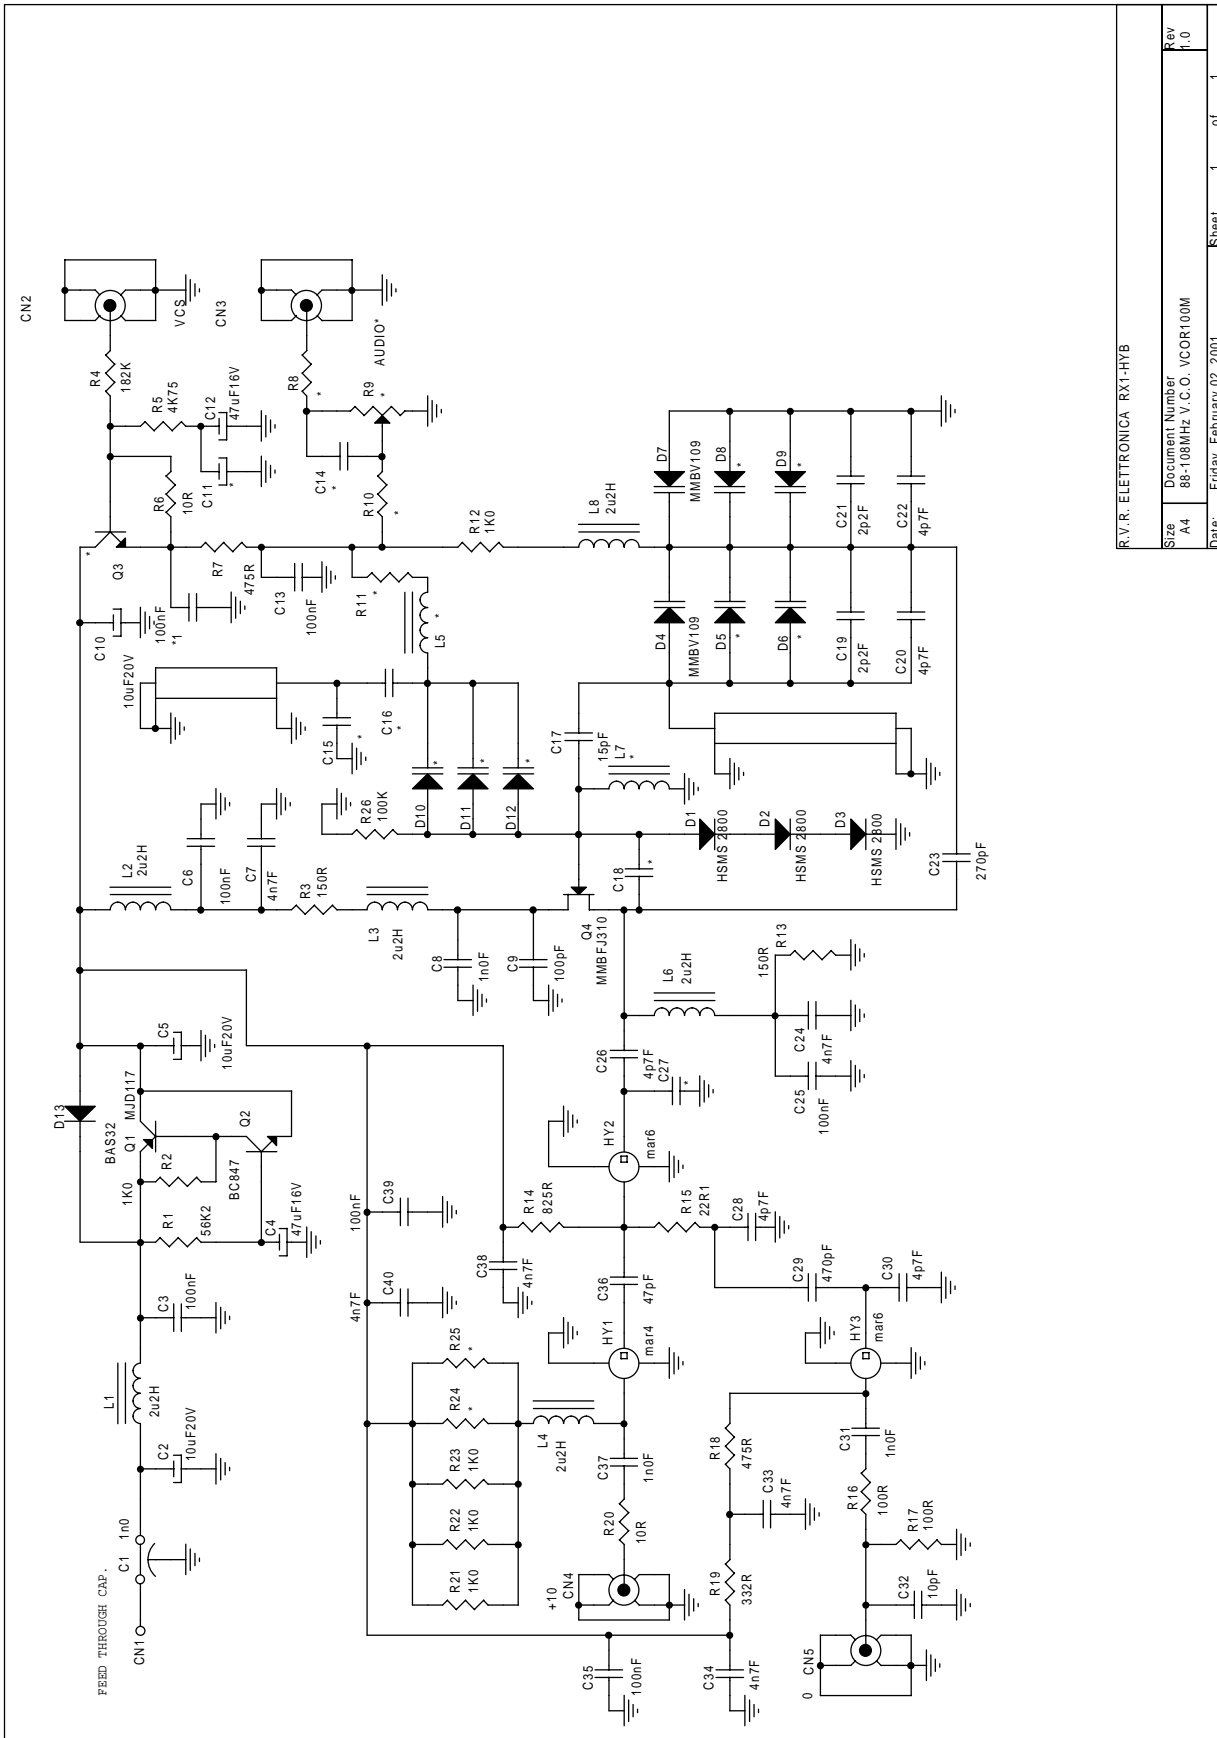


R.V.R. ELETTRONICA RX1-HYB


| | | | |
|------|-----|-----------------|---------------------------|
| Size | A4 | Document Number | 88-108MHz V.C.O. VCOR100M |
| Rev | 1.0 | Date: | Fri 09. February 02. 2001 |
| | | Sheet | 1 of 1 |


| Item | Quant. | Reference | Part | Bill Of Materials Description | Page Code |
|------|--------|---|---------|-------------------------------|-----------|
| 1 | 3 | C1, C3, C7 | 47u | COND. EL. SMD16V | 1 |
| 2 | 2 | C2, C31 | .1u | COND. CHIP 0805 | |
| 3 | 13 | C4, C8, C14, C18, C19, C26, C29, C30, C32, C34, C35, C36, C37 | 4n7 | COND. CHIP 0805 | |
| 4 | 4 | C5, C6, C22, C33 | 470p | COND. CHIP 0805 | |
| 5 | 2 | C20, C9 | 10p | COND. CHIP 0805 | |
| 6 | 6 | C10, C11, C15, C21, C23, C27 | 47p | COND. CHIP 0805 | |
| 7 | 2 | C12, C24 | 220p | COND. CHIP 0805 | |
| 8 | 4 | C13, C16, C25, C28 | 1n0 | COND. CHIP 0805 | |
| 9 | 4 | D1, D2, D3, D4 | MMBV109 | DIODO VARICAP SOT23 | |
| 10 | 2 | HY1, HY2 | MAR6 | MODULO IBR. MAR6 | |
| 11 | 2 | L1, L4 | 2u2H | IMPEDENZA SMD 1210 | |
| 12 | 3 | L2, L3, L5 | 22uH | IMPEDENZA SMD 1210 | |
| 13 | 2 | Q1, Q2 | BFR540 | TRANSISTOR SOT23 | |
| 14 | 2 | R5, R1 | 10K | RES. SMD 0805 5% | |
| 15 | 2 | R2, R6 | 4K75 | RES. SMD 0805 1% | |
| 16 | 3 | R3, R7, R23 | 0 | RES. SMD 0 OHM | |
| 17 | 2 | R4, R15 | 150 | RES. SMD 0805 5% | |
| 18 | 2 | R8, R16 | 220 | RES. SMD 0805 5% | |
| 19 | 2 | R9, R17 | 22H | RES. SMD 0805 5% | |
| 20 | 2 | R10, R18 | 10H | RES. SMD 0805 5% | |
| 21 | 2 | R11, R22 | 51H | RES. SMD 0805 5% | |
| 22 | 1 | R12 | 22p | COND. CHIP 0805 | |
| 23 | 2 | R13, R19 | 270 | RES. SMD 0805 5% | |
| 24 | 2 | R20, R14 | 100 | RES. SMD 0805 5% | |
| 25 | 1 | R21 | 180 | RES. SMD 0805 5% | |

Pagina lasciata intenzionalmente in bianco

This page was intentionally left blank

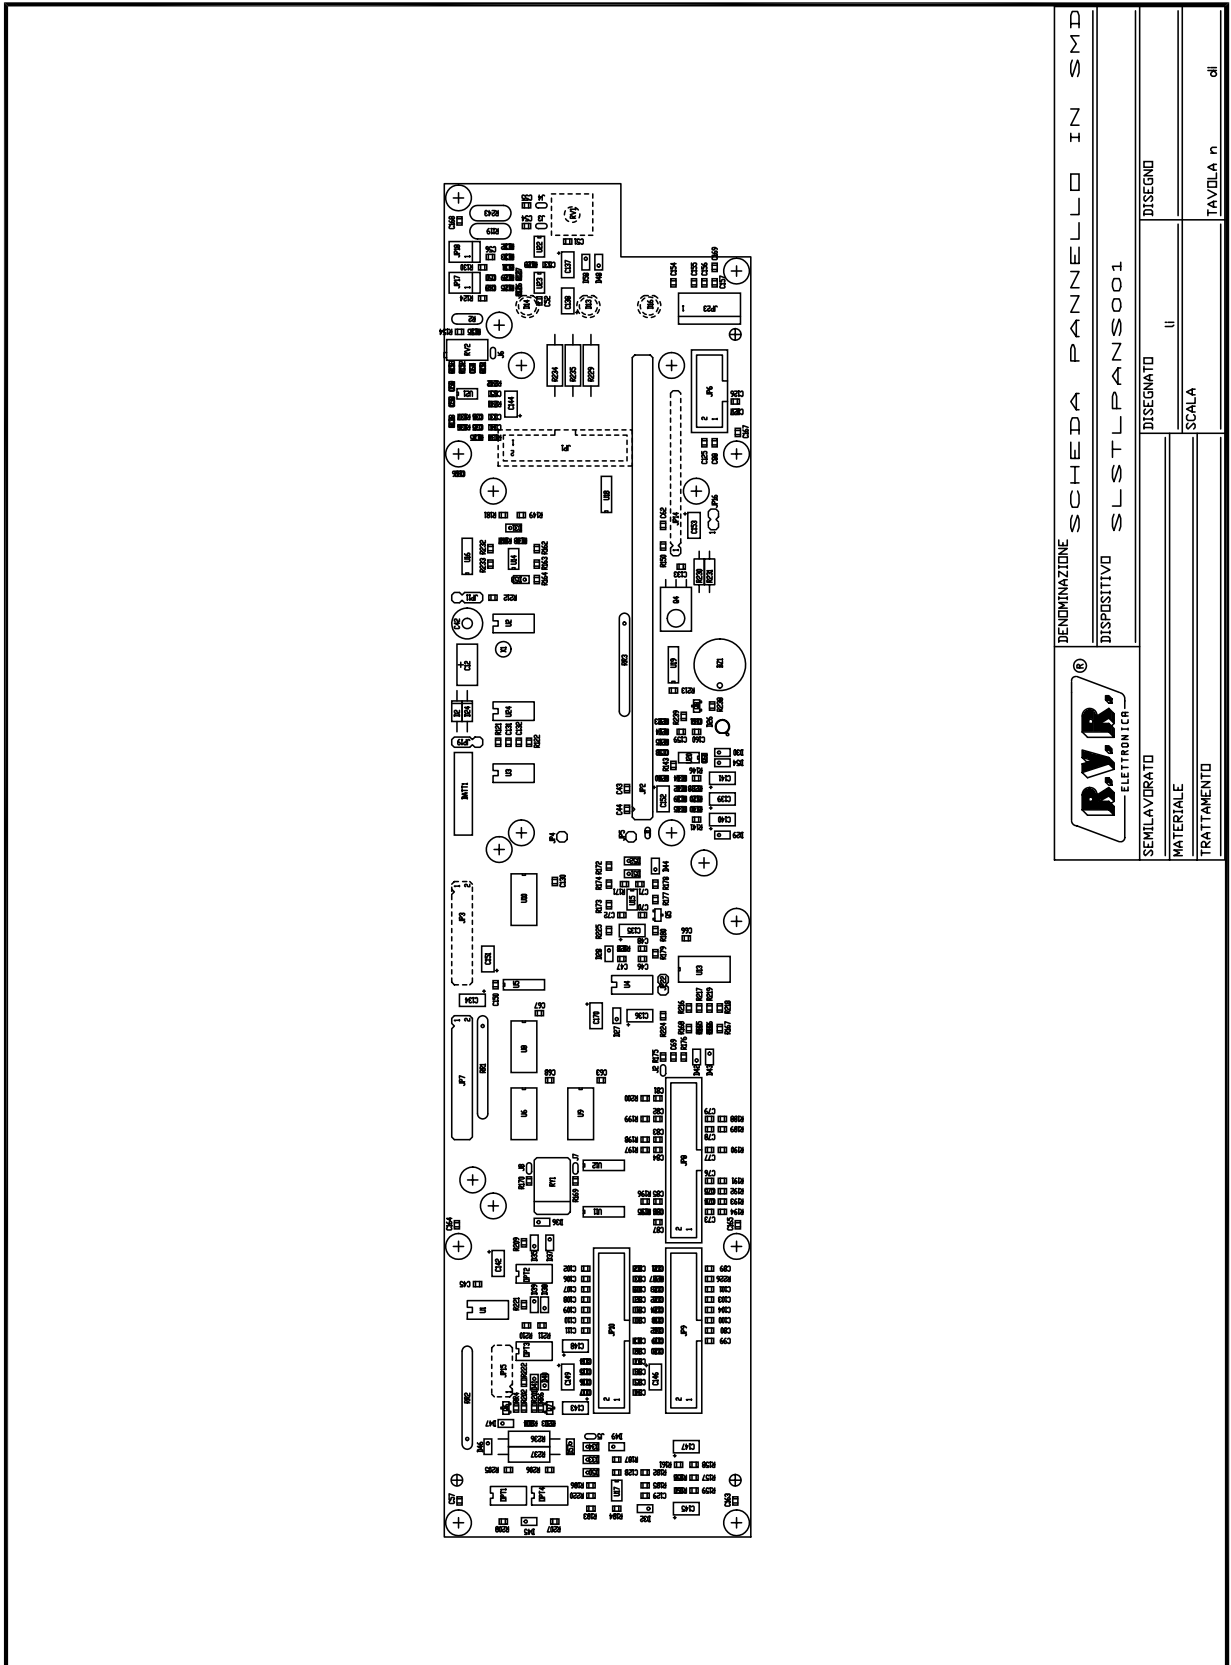

| | | | |
|--|--|--------------------------------------|--|
|  | | DENOMINAZIONE SCHEDA PANNELLO IN SMD | |
| SEMILAVORATO | | DISPOSITIVO SLSTLPANS001 | |
| MATERIALE | | DISEGNATO II | |
| TRATTAMENTO | | SCALA | |
| | | TAVOLA n. di | |

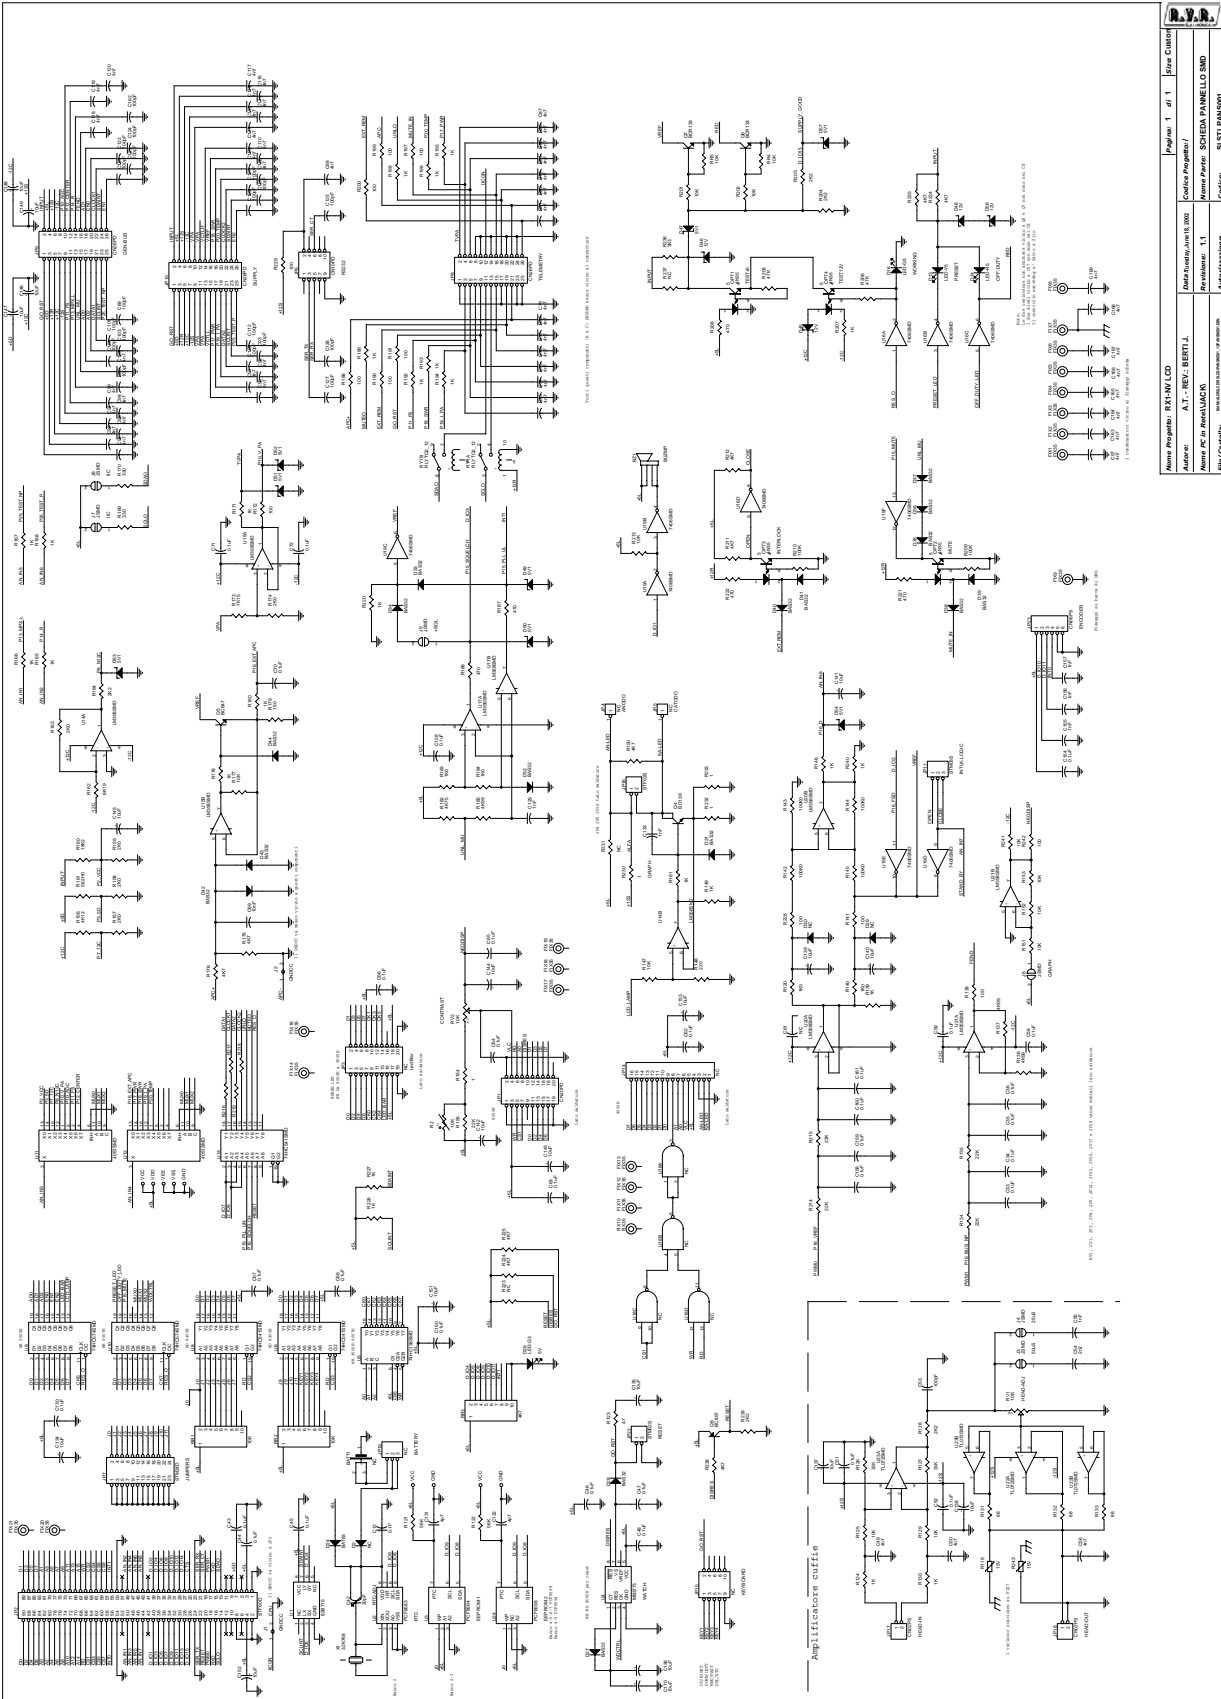

| | | | |
|-----------------------------|--------------------------------|-------------------|----------------|
| Nome Progetto: RX1-NV LCD | Nome Cliente: / | Scale: 1 of 1 | Stato: Clienti |
| Autore: A.T. - REV. LIBERTI | Disegnato da: / | Controllato da: / | |
| Nome PC in Rete: / | Nome File: SCHEMA PANNELLO BMD | Revisione: 1.1 | |
| File: / | Nome: SCHEMA PANNELLO BMD | | |


| Scheda pannello in SMD | | | Bill Of Materials | Page | 1 |
|------------------------|----------|--|-------------------|------|---|
| Item | Quantity | Reference | Part | | |
| 1 | 15 | BATT1, D2, JP3, JP4, JP5, JP14, JP15, U18, JP19, D29, D30, C61, R223, R231, R237 | NC | | |
| 2 | 1 | BZ1 | BUZMP | | |
| 3 | 1 | C12 | 0.1F | | |
| 4 | 32 | C33, C34, C35, C36, C43, C44, C45, C46, C47, C48, C51, C52, C58, C59, C62, C63, C64, C65, C66, C67, C68, C70, C71, C72, C128, C130, C150, C154, C158, C159, C160, C161 | 0.1uF | | |
| 5 | 1 | C42 | 30pF | | |
| 6 | 48 | C49, C50, C56, C57, C73, C74, C75, C76, C77, C78, C79, C81, C82, C83, C84, C85, C86, C87, C88, C90, C91, C92, C94, C95, C96, C97, C98, C99, C100, C108, C109, C110, C111, C113, C114, C115, C116, C117, C118, C119, C120, C163, C164, C165, C166, C167, C168, C169 | 4n7 | | |
| 7 | 20 | C53, C80, C89, C93, C101, C102, C103, C104, C105, C106, C107, C112, C121, C122, C123, C124, C125, C126, C127, C162 | 100pF | | |
| 8 | 1 | C54 | 2n2 | | |
| 9 | 6 | C55, C129, C133, C155, C156, C157 | 1nF | | |
| 10 | 1 | C69 | 10nF | | |
| 11 | 2 | C131, C132 | 4p7 | | |
| 12 | 20 | C134, C135, C136, C137, C138, C139, C140, C141, C142, C143, C144, C145, C146, C147, C148, C149, C151, C152, C153, C170 | 10uF | | |
| 13 | 1 | D13 | LED-Y5 | | |
| 14 | 1 | D14 | LED-R5 | | |
| 15 | 1 | D16 | LED-G5 | | |
| 16 | 1 | D24 | BAT83 | | |
| 17 | 1 | D26 | LED-G3 | | |
| 18 | 16 | D27, D28, D31, D32, D33, D34, D35, D36, D37, D38, D39, D40, D41, D42, D43, D44 | BAS32 | | |
| 19 | 4 | D45, D46, D48, D58 | 12V | | |
| 20 | 8 | D47, D49, D50, D51, D52, D53, D54, D57 | 5V1 | | |
| 21 | 20 | FIX1, FIX2, FIX3, FIX4, FIX5, FIX6, FIX7, FIX8, FIX9, FIX10, FIX11, FIX12, FIX13, FIX14, FIX16, FIX17, FIX18, FIX19, FIX20, FIX21 | FIX35 | | |
| 22 | 1 | JP1 | CN20PD | | |

| | | | |
|----|----|--|-----------|
| 23 | 1 | JP2 | STF90D |
| 24 | 1 | JP6 | CN10PD |
| 25 | 1 | JP7 | STM24D |
| 26 | 3 | JP8, JP9, JP10 | CN26PD |
| 27 | 1 | JP11 | STM03S |
| 28 | 1 | JP16 | STF02S |
| 29 | 2 | JP17, JP18 | CN02PS |
| 30 | 1 | JP22 | STM02S |
| 31 | 1 | JP23 | CN06PS |
| 32 | 2 | J1, J2 | GNDCC |
| 33 | 6 | J3, J4, J5, J6, J7, J8 | JSMD |
| 34 | 4 | OPT1, OPT2, OPT3, OPT4 | 4N35 |
| 35 | 1 | Q4 | BD139 |
| 36 | 1 | Q5 | BC847 |
| 37 | 2 | Q7, Q6 | BCR133 |
| 38 | 1 | Q8 | BC857 |
| 39 | 18 | RV1, RR1, RV2, RR2, R2, R125, R129, R147, R151, R152, R153, R177, R201, R202, R213, R241, RR4, RR5 | 10K |
| 40 | 11 | RR3, R150, R175, R176, R211, R212, R224, R225, R234, R235, R238 | 4K7 |
| 41 | 1 | RY1 | RLYTQ2_12 |
| 42 | 2 | R119, R243 | 15V |
| 43 | 4 | R120, R140, R183, R184 | 1K0 |
| 44 | 2 | R121, R122 | 56K |
| 45 | 5 | R123, R216, R217, R218, R219 | 47 |
| 46 | 25 | R124, R130, R139, R146, R149, R165, R166, R167, R168, R171, R178, R180, R181, R189, R192, R193, R194, R195, R196, R198, R207, R220, R226, R227, R240 | 1K |
| 47 | 2 | R126, R127 | 33K |
| 48 | 5 | R128, R164, R203, R204, R239 | 2K2 |
| 49 | 3 | R131, R132, R133 | 68 |
| 50 | 5 | R134, R135, R155, R214, R215 | 22K |
| 51 | 3 | R136, R137, R185 | 4K99 |
| 52 | 12 | R138, R141, R172, R188, R190, R191, R197, R199, R200, R228, R229, R242 | 100 |
| 53 | 4 | R142, R143, R144, R145 | 100K0 |
| 54 | 1 | R148 | 220 |


| | | | |
|----|---|------------------------------|------------|
| 55 | 4 | R154, R230, R232, R233 | 1 |
| 56 | 1 | R156 | 4K12 |
| 57 | 5 | R157, R158, R159, R163, R174 | 2K0 |
| 58 | 1 | R160 | 18K2 |
| 59 | 1 | R161 | 562H0 |
| 60 | 1 | R162 | 6K19 |
| 61 | 2 | R169, R170 | 330 |
| 62 | 1 | R173 | 7K15 |
| 63 | 1 | R179 | 150 |
| 64 | 1 | R182 | 4K75 |
| 65 | 5 | R186, R187, R208, R221, R222 | 470 |
| 66 | 2 | R209, R210 | 100K |
| 67 | 1 | R236 | 3K3 |
| 68 | 1 | U1 | 82B715 |
| 69 | 1 | U2 | PCF8583 |
| 70 | 1 | U3 | PCF8594 |
| 71 | 1 | U4 | MB3773 |
| 72 | 1 | U5 | 74HC138SMD |
| 73 | 3 | U6, U8, U13 | 74HC541SMD |
| 74 | 2 | U9, U10 | 74HC574SMD |
| 75 | 2 | U11, U12 | 4051SMD |
| 76 | 5 | U14, U15, U17, U20, U21 | LM358SMD |
| 77 | 2 | U16, U19 | 7406SMD |
| 78 | 2 | U23, U22 | TL072SMD |
| 79 | 1 | U24 | PCF8598 |
| 80 | 1 | X1 | 32K768 |
| 81 | 2 | R205, R206 | 47K |

Pagina lasciata intenzionalmente in bianco

This page was intentionally left blank

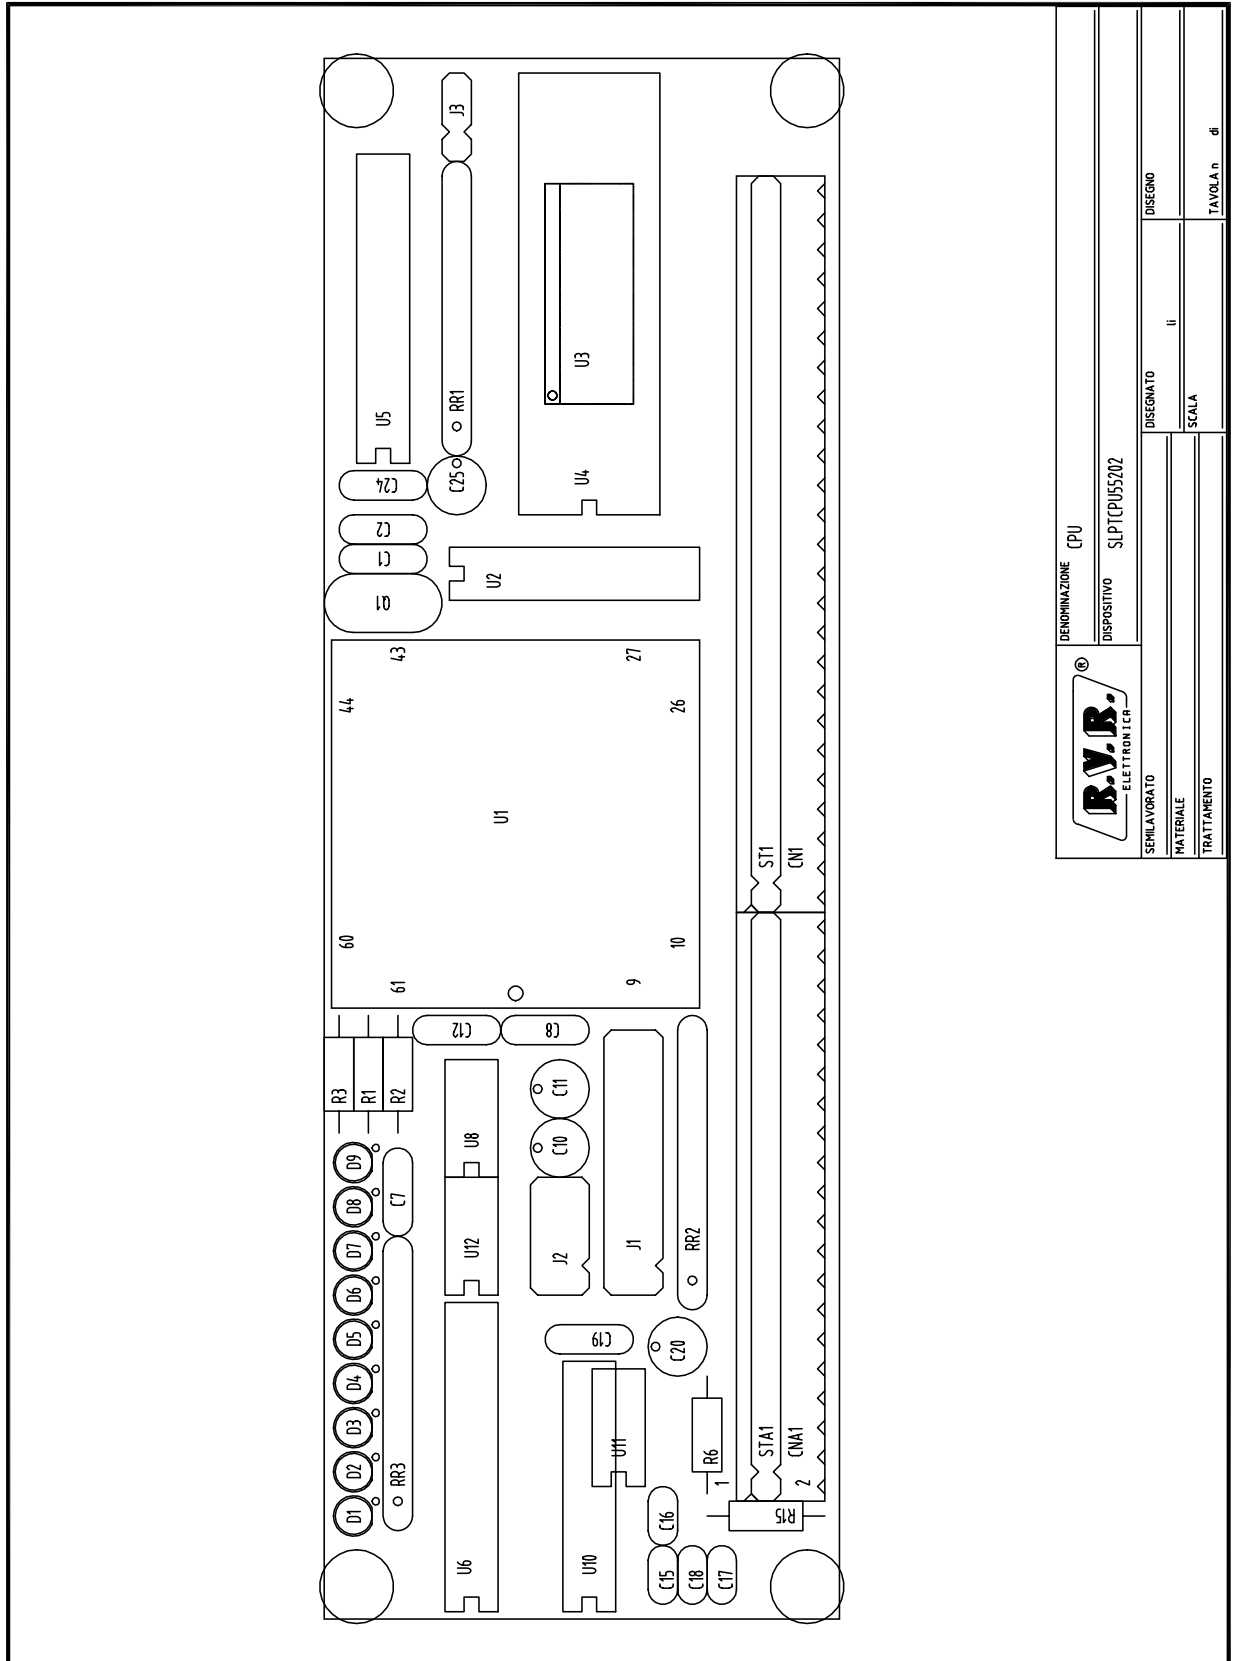

| | | | |
|-------------------------|-------------|---------|--------------|
| DENOMINAZIONE CPU | | DISEGNO | |
| DISPOSITIVO S1PTCPU5202 | | II | |
| SEMILAVORATO | SCALA | | TAVOLA n. di |
| MATERIALE | TRATTAMENTO | | |

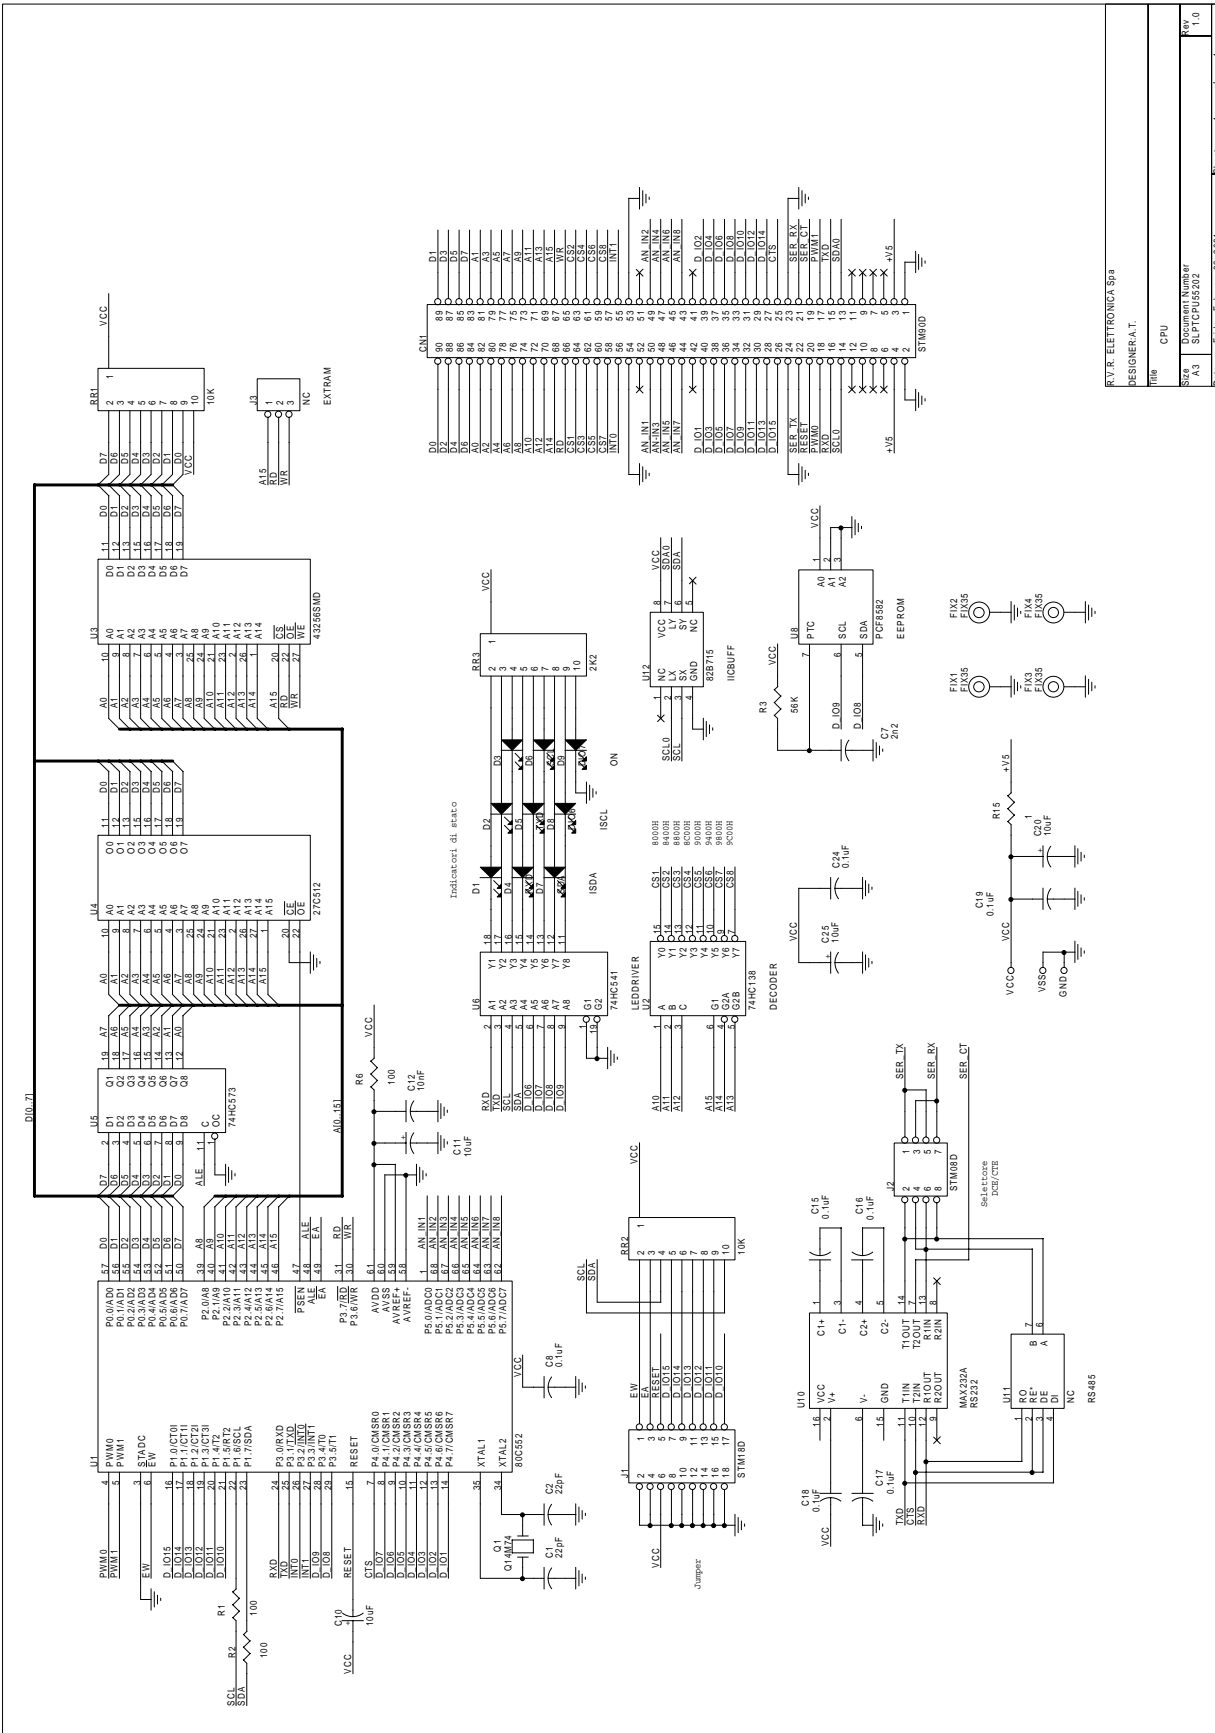

| | |
|------------------------|---------------------------|
| R.V.R. ELETTRONICA Spa | |
| DESIGNER: A.T. | |
| File | CPU |
| Size | Document Number |
| A3 | SLPFCPU55202 |
| Date | Friday, February 02, 2001 |
| Sheet | 1 of 1 |
| Rev. | 1.0 |

CPU552


Bill Of Materials

Page 1

| Item | Quantity | Reference | Part |
|------|----------|------------------------------------|----------|
| 1 | 1 | CN1 | STM90D |
| 2 | 2 | C1, C2 | 22pF |
| 3 | 1 | C7 | 2n2 |
| 4 | 7 | C8, C15, C16, C17, C18, C19, C24 | 0.1uF |
| 5 | 4 | C10, C11, C20, C25 | 10uF |
| 6 | 1 | C12 | 10nF |
| 7 | 9 | D1, D2, D3, D4, D5, D6, D7, D8, D9 | LED-R3 |
| 8 | 4 | FIX1, FIX2, FIX3, FIX4 | FIX35 |
| 9 | 1 | J1 | STM18D |
| 10 | 1 | J2 | STM08D |
| 11 | 2 | J3, U11 | NC |
| 12 | 1 | Q1 | Q14M74 |
| 13 | 2 | RR2, RR1 | 10K |
| 14 | 1 | RR3 | 2K2 |
| 15 | 3 | R1, R2, R6 | 100 |
| 16 | 1 | R3 | 56K |
| 17 | 1 | R15 | 1 |
| 18 | 1 | U1 | 80C552 |
| 19 | 1 | U2 | 74HC138 |
| 20 | 1 | U3 | 43256SMD |
| 21 | 1 | U4 | 27C512 |
| 22 | 1 | U5 | 74HC573 |
| 23 | 1 | U6 | 74HC541 |
| 24 | 1 | U8 | PCF8582 |
| 25 | 1 | U10 | MAX232A |
| 26 | 1 | U12 | 82B715 |


Pagina lasciata intenzionalmente in bianco

This page was intentionally left blank

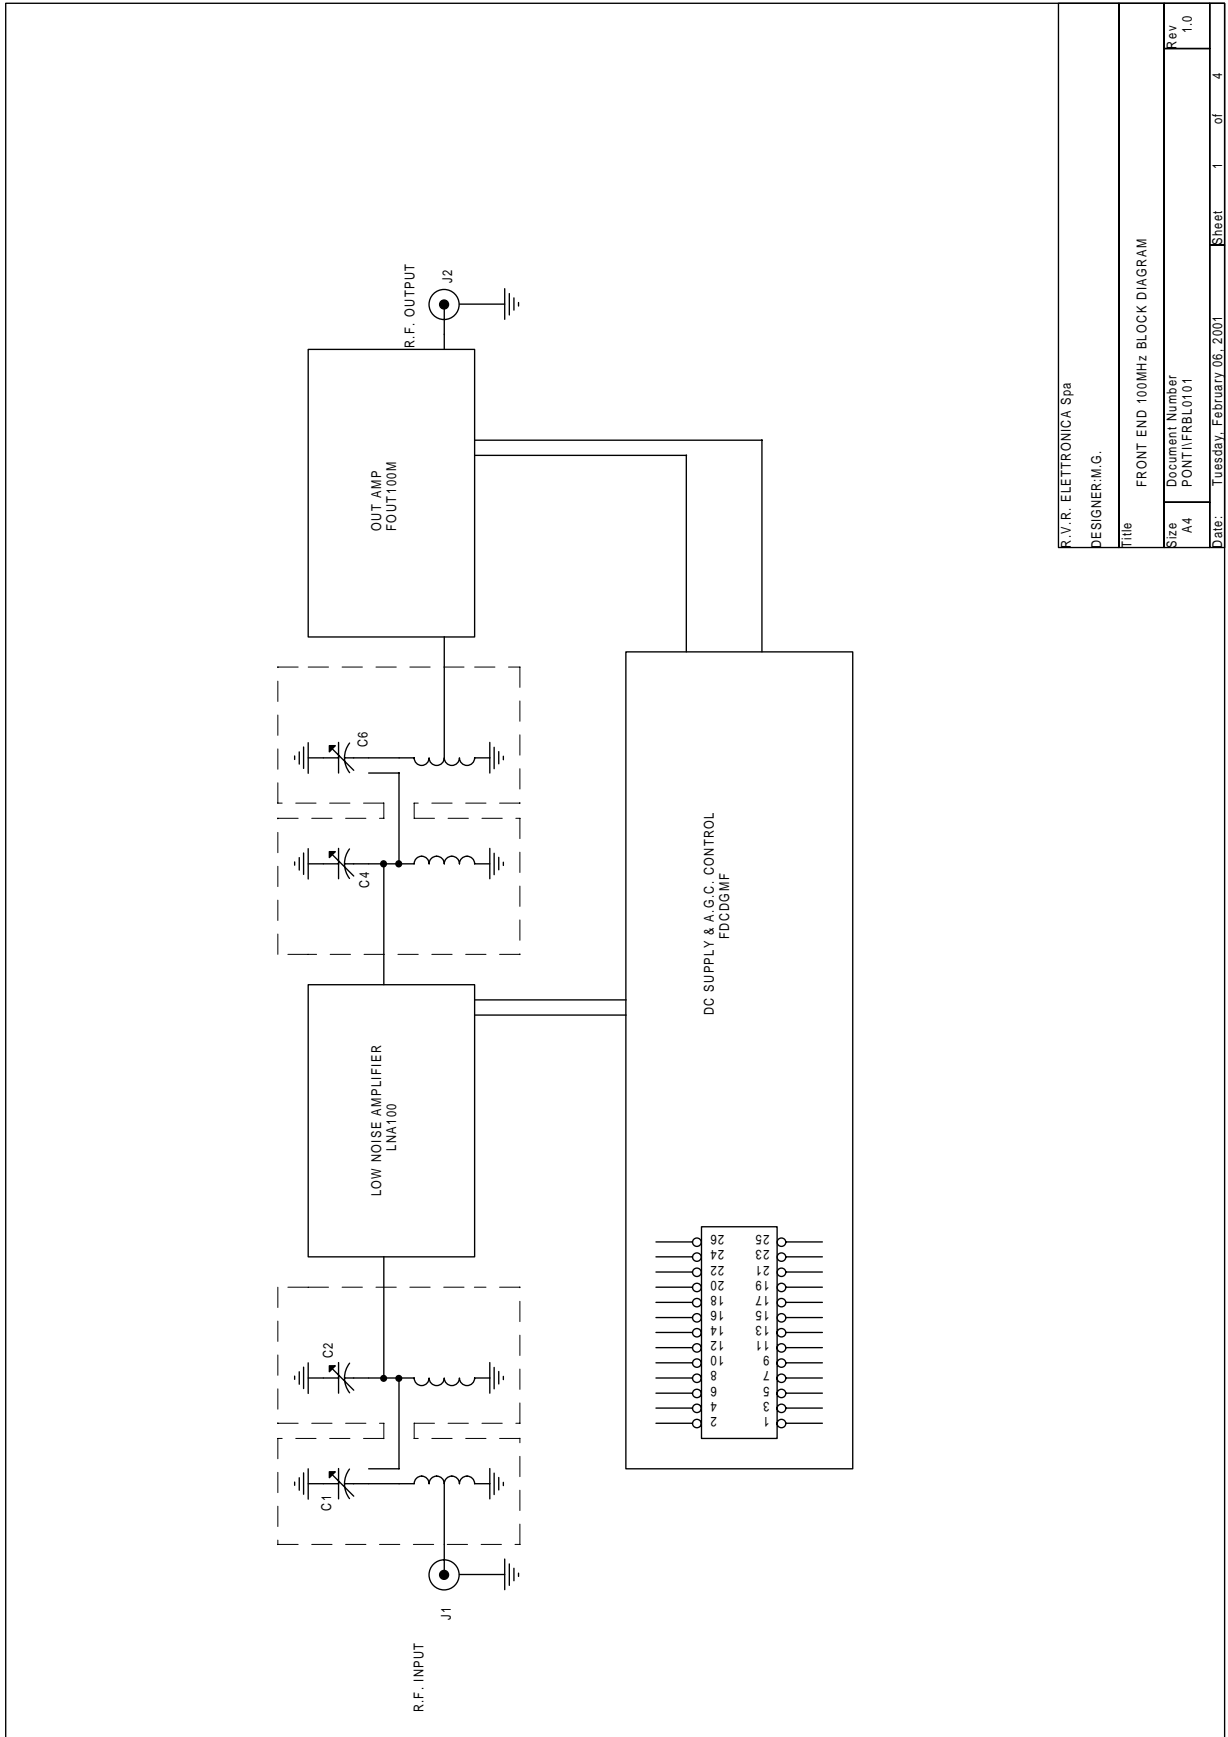


| | |
|--------------------------------|--------|
| R.V.R. ELETTRONICA Spa | |
| DESIGNER: M.G. | |
| Title | |
| FRONT END 100MHz BLOCK DIAGRAM | |
| Size | Rev |
| A4 | 1.0 |
| Date: | Sheet |
| Tuesday, February 06, 2001 | 1 of 4 |

FRONT END SUPPLY & AGC CONTROL

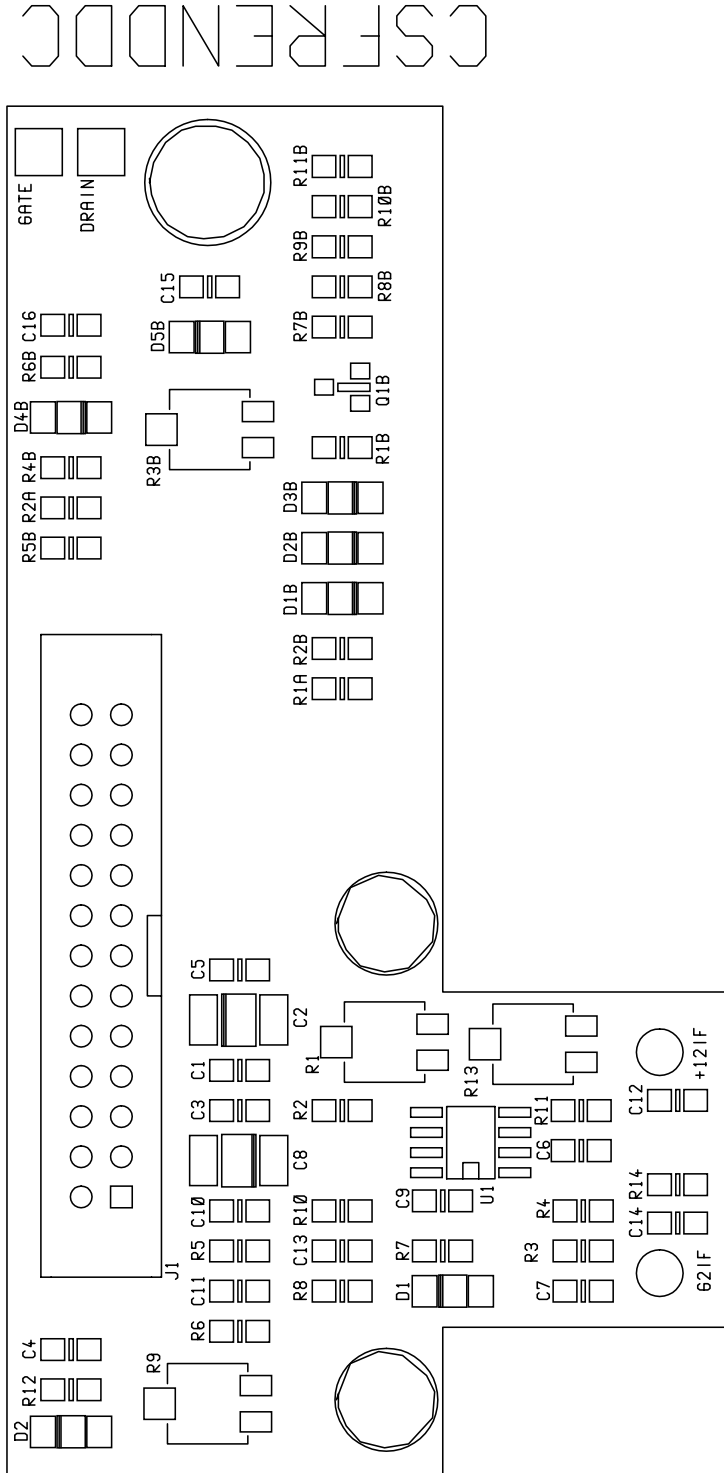


| | | |
|--------------|---------------|----------------------------|
| | BENOMINAZIONE | DG MOSFET FRONT-END SUPPLY |
| | DISPOSITIVO | CSFRENDDC |
| SEMILAVORATO | DISSEGNO | u |
| MATERIALE | SCALA | |
| TRATTAMENTO | TAVOLA n | di |

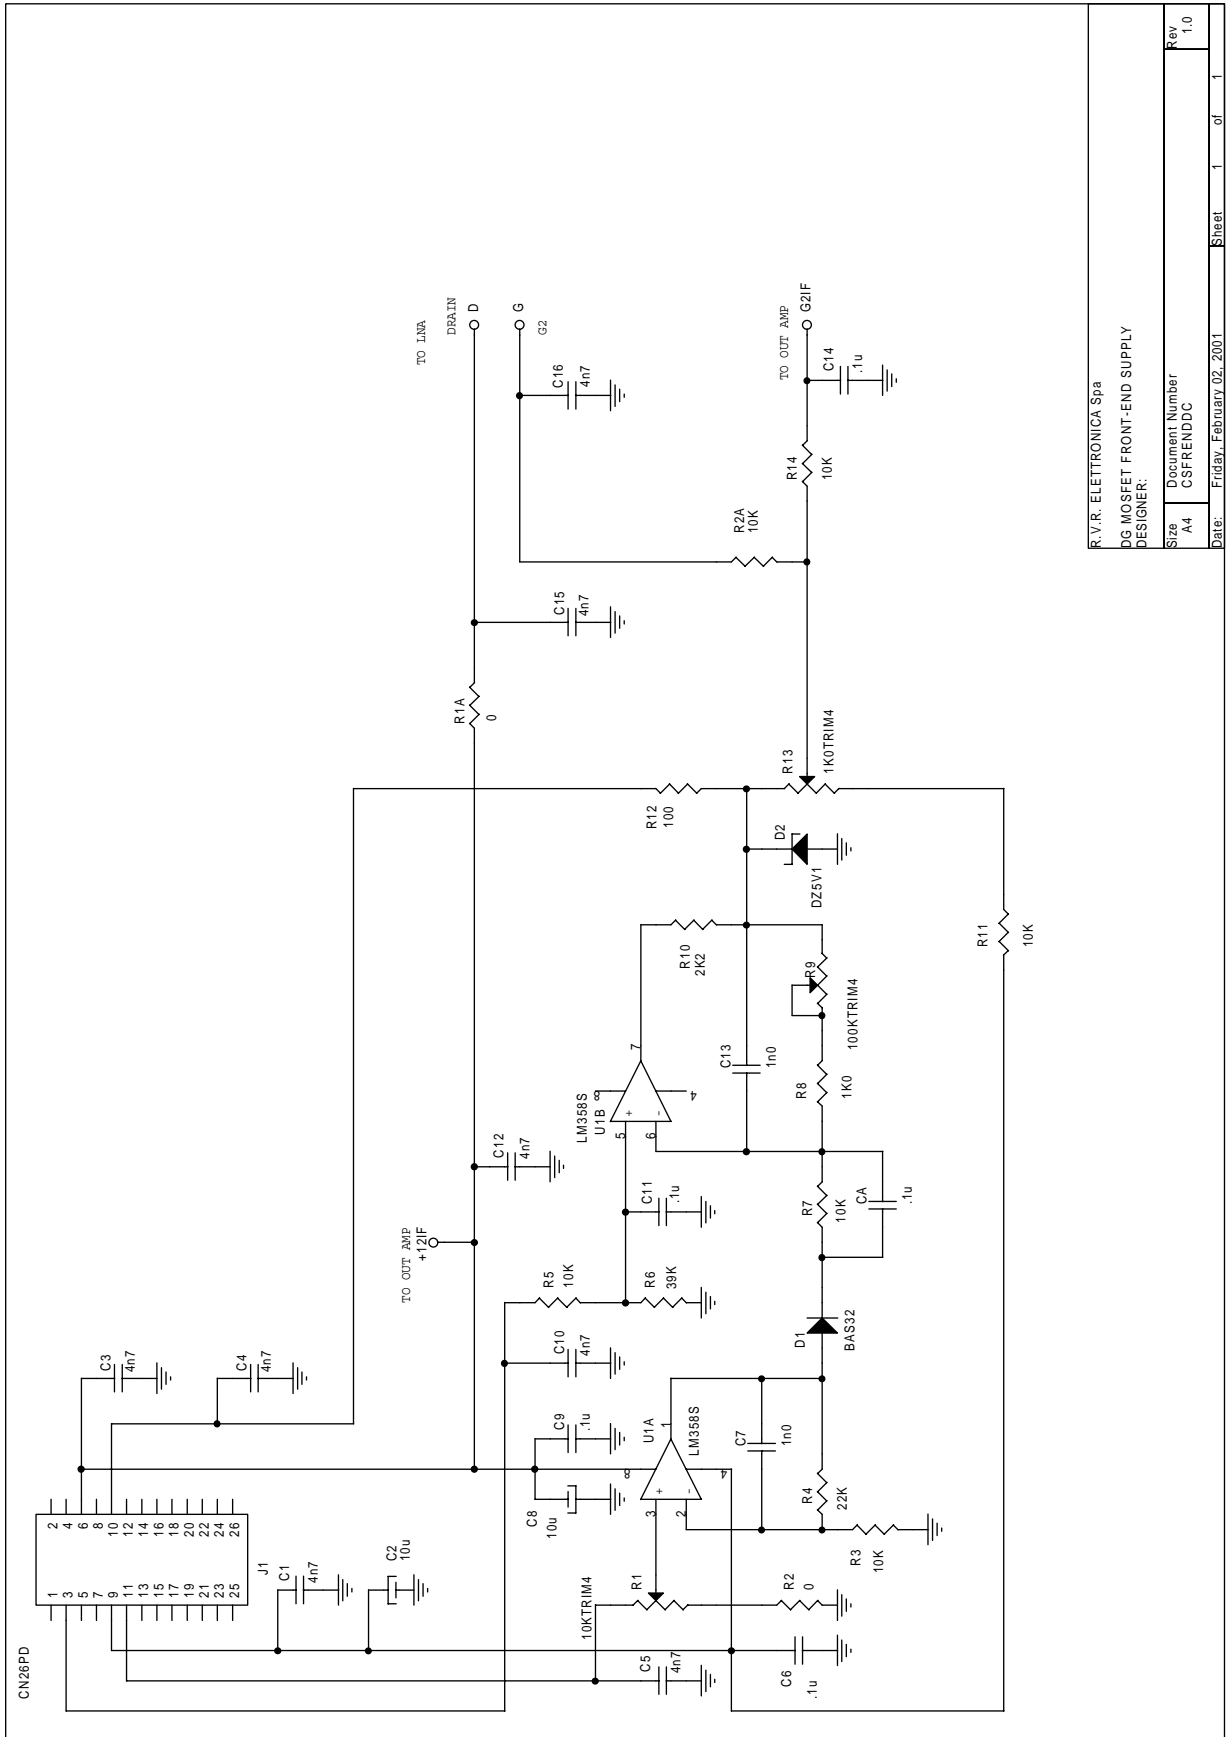


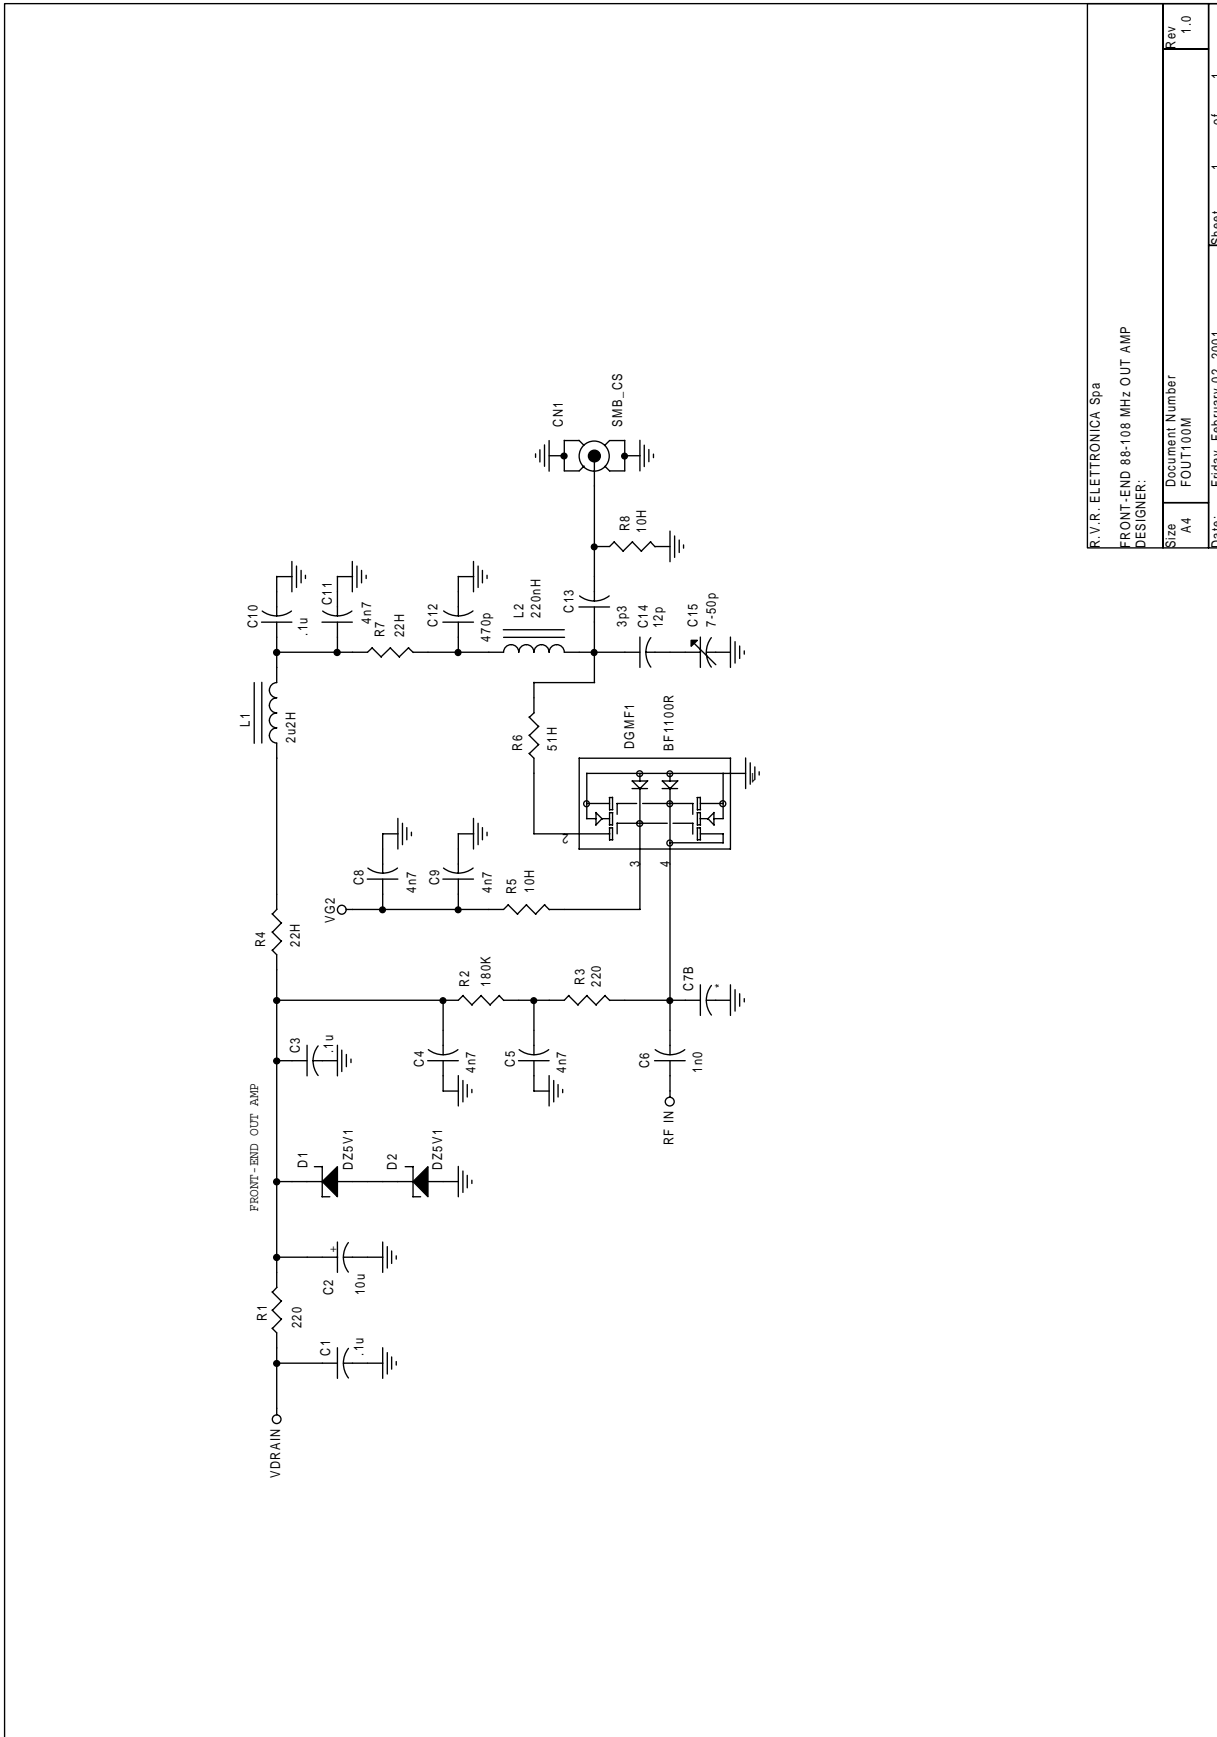
R.V.R. ELETTRONICA Spa
DG MOSFET FRONT-END SUPPLY
DESIGNER:

| | | | | | |
|-------|---------------------------|-----------------|-----------|-----|-----|
| Size | A4 | Document Number | CSFRENDDC | Rev | 1.0 |
| Date: | Friday, February 02, 2001 | Sheet | 1 | of | 1 |

| CSFRENDDC Item | Quant. | DG MOSFET VERSION Reference | Part | Bill Of Materials Description | Page Code | 1 |
|-------------------|--------|---------------------------------|-----------|----------------------------------|--------------|---|
| 1 | 5 | C6,C9,C11,C14,CA | .1u | COND. CHIP 0805 | | |
| 2 | 8 | C1,C3,C4,C5,C10, C12,C15,C16 | 4n7 | COND. CHIP 0805 | | |
| 3 | 2 | C8,C2 | 10u | COND. EL. SMD16V | | |
| 4 | 2 | C7,C13 | 1n0 | COND. CHIP 0805 | | |
| 5 | 1 | D1 | BAS32 | DIODO SIL. MIMIMELF | | |
| 6 | 1 | D2 | DZ5V1 | DIODO ZENER SMD 5V1 | | |
| 7 | 1 | J1 | CN26PD | CONN. M 2X2.54 26PIN | | |
| 8 | 1 | R1 | 10KTRIM4 | TRIM.4X4mm SMD 10K | | |
| 9 | 2 | R1A,R2 | 0 | RES. SMD O OHM | | |
| 10 | 6 | R2A,R3,R5,R7, R11,R14 | 10K | RES. SMD 0805 5% | | |
| 11 | 1 | R4 | 22K | RES. SMD 0805 5% | | |
| 12 | 1 | R6 | 39K | RES. SMD 0805 5% | | |
| 13 | 1 | R8 | 1K0 | RES. SMD 0805 5% | | |
| 14 | 1 | R9 | 100KTRIM4 | TRIM.4X4mm SMD 100K | | |
| 15 | 1 | R10 | 2K2 | RES. SMD 0805 5% | | |
| 16 | 1 | R12 | 100 | RES. SMD 0805 5% | | |
| 17 | 1 | R13 | 1KTRIM4 | TRIM.4X4mm SMD 1K | | |
| 18 | 1 | U1 | LM358S | CI LIN. LM358SMD | | |

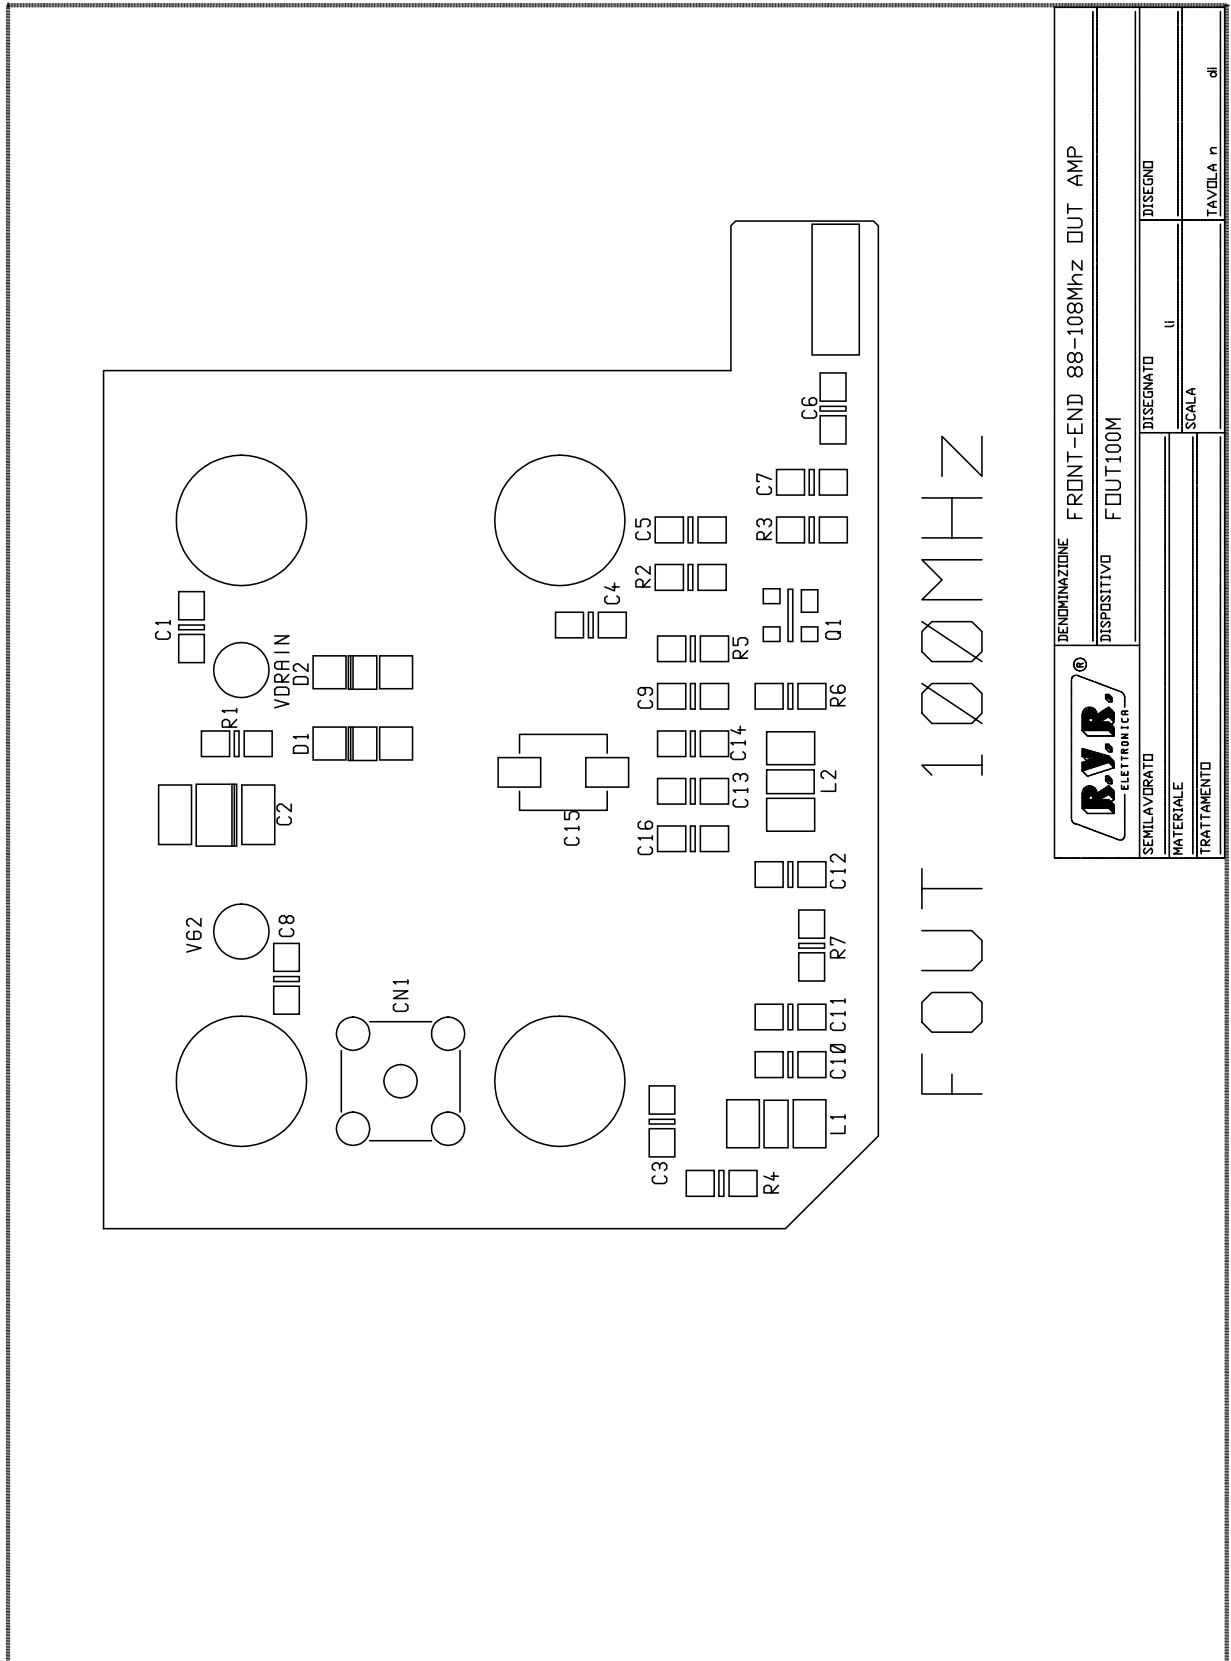


| | | | |
|--|-----------|---|----------|
|  | | DENOMINAZIONE FRONT-END 88-108Mhz OUT AMP DISPOSITIVO FOUT100M | |
| SEMILAVORATO | DISEGNATO | II | DISEGNO |
| MATERIALE | SCALA | | TAVOLA n |
| TRATTAMENTO | | | di |




R.V.R. ELETTRONICA Spa
 FRONT-END 88-108 MHz OUT AMP
 DESIGNER:

| | | |
|-------|---------------------------|--------------|
| Size | Document Number | Rev |
| A4 | FOUJT100M | 1.0 |
| Date: | Friday, February 02, 2001 | Sheet 1 of 1 |

| FOUT100M | | Bill Of Materials | | | Page | 1 |
|----------|--------|-------------------|---------|---------------------|------|---|
| Item | Quant. | Reference | Part | Description | Code | |
| 1 | 1 | CN1 | SMB_CS | CONN.SMB A STAMPATO | | |
| 2 | 3 | C1,C3,C10 | .1u | COND. CHIP 0805 | | |
| 3 | 1 | C2 | 10u | COND. EL. SMD16V | | |
| 4 | 5 | C4,C5,C8,C9,C11 | 4n7 | COND. CHIP 0805 | | |
| 5 | 1 | C6 | 1n0 | COND. CHIP 0805 | | |
| 6 | 1 | C7B | * | | | |
| 7 | 1 | C12 | 470p | COND. CHIP 0805 | | |
| 8 | 1 | C13 | 3p3 | COND. CHIP 0805 | | |
| 9 | 1 | C14 | 12p | COND. CHIP 0805 | | |
| 10 | 1 | C15 | 7-50p | | | |
| 11 | 1 | DGMF1 | BF1100R | DG MOSFET SOT143R | | |
| 12 | 2 | D1,D2 | DZ5V1 | DIODO ZENER SMD 5V1 | | |
| 13 | 1 | L1 | 2u2H | IMPEDENZA SMD 1210 | | |
| 14 | 1 | L2 | 220nH | IMPEDENZA SMD 1210 | | |
| 15 | 2 | R3,R1 | 220 | RES. SMD 0805 5% | | |
| 16 | 1 | R2 | 180K | RES. SMD 0805 5% | | |
| 17 | 2 | R4,R7 | 22H | RES. SMD 0805 5% | | |
| 18 | 2 | R5,R8 | 10H | RES. SMD 0805 5% | | |
| 19 | 1 | R6 | 51H | RES. SMD 0805 5% | | |

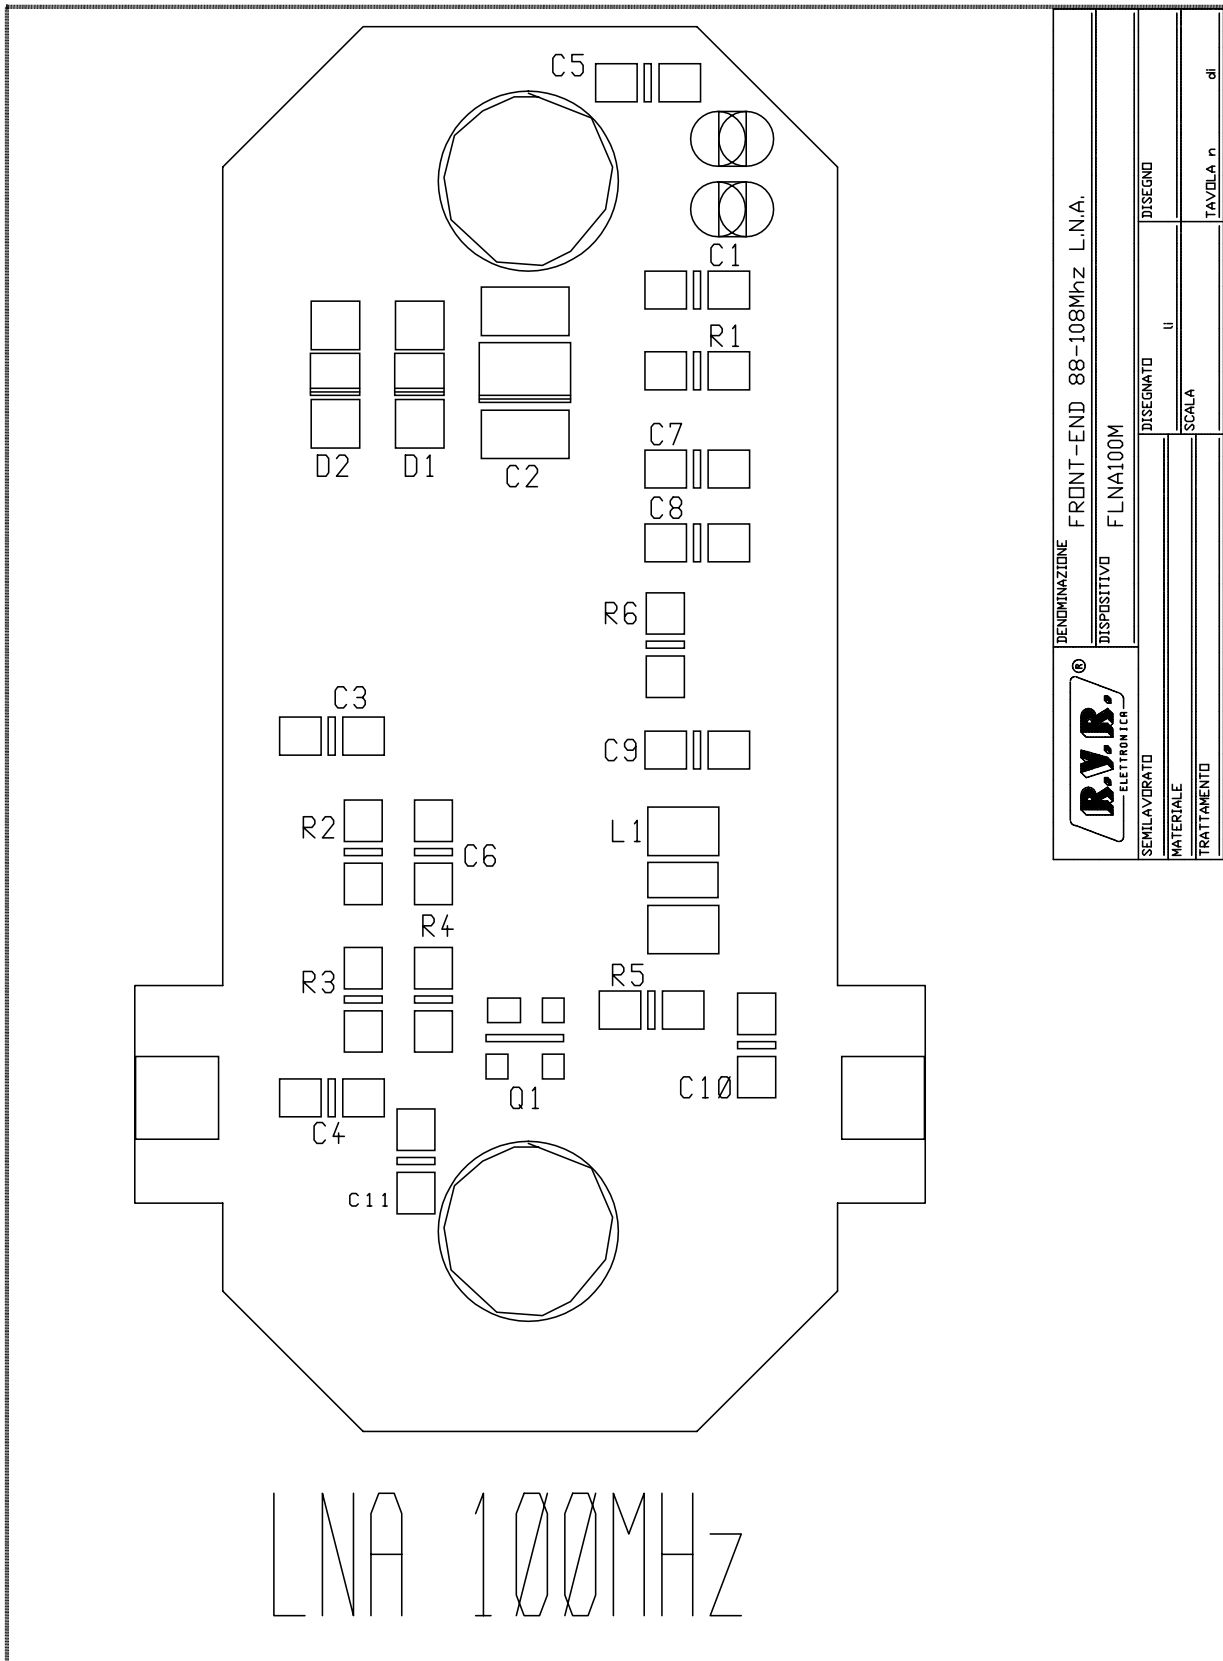


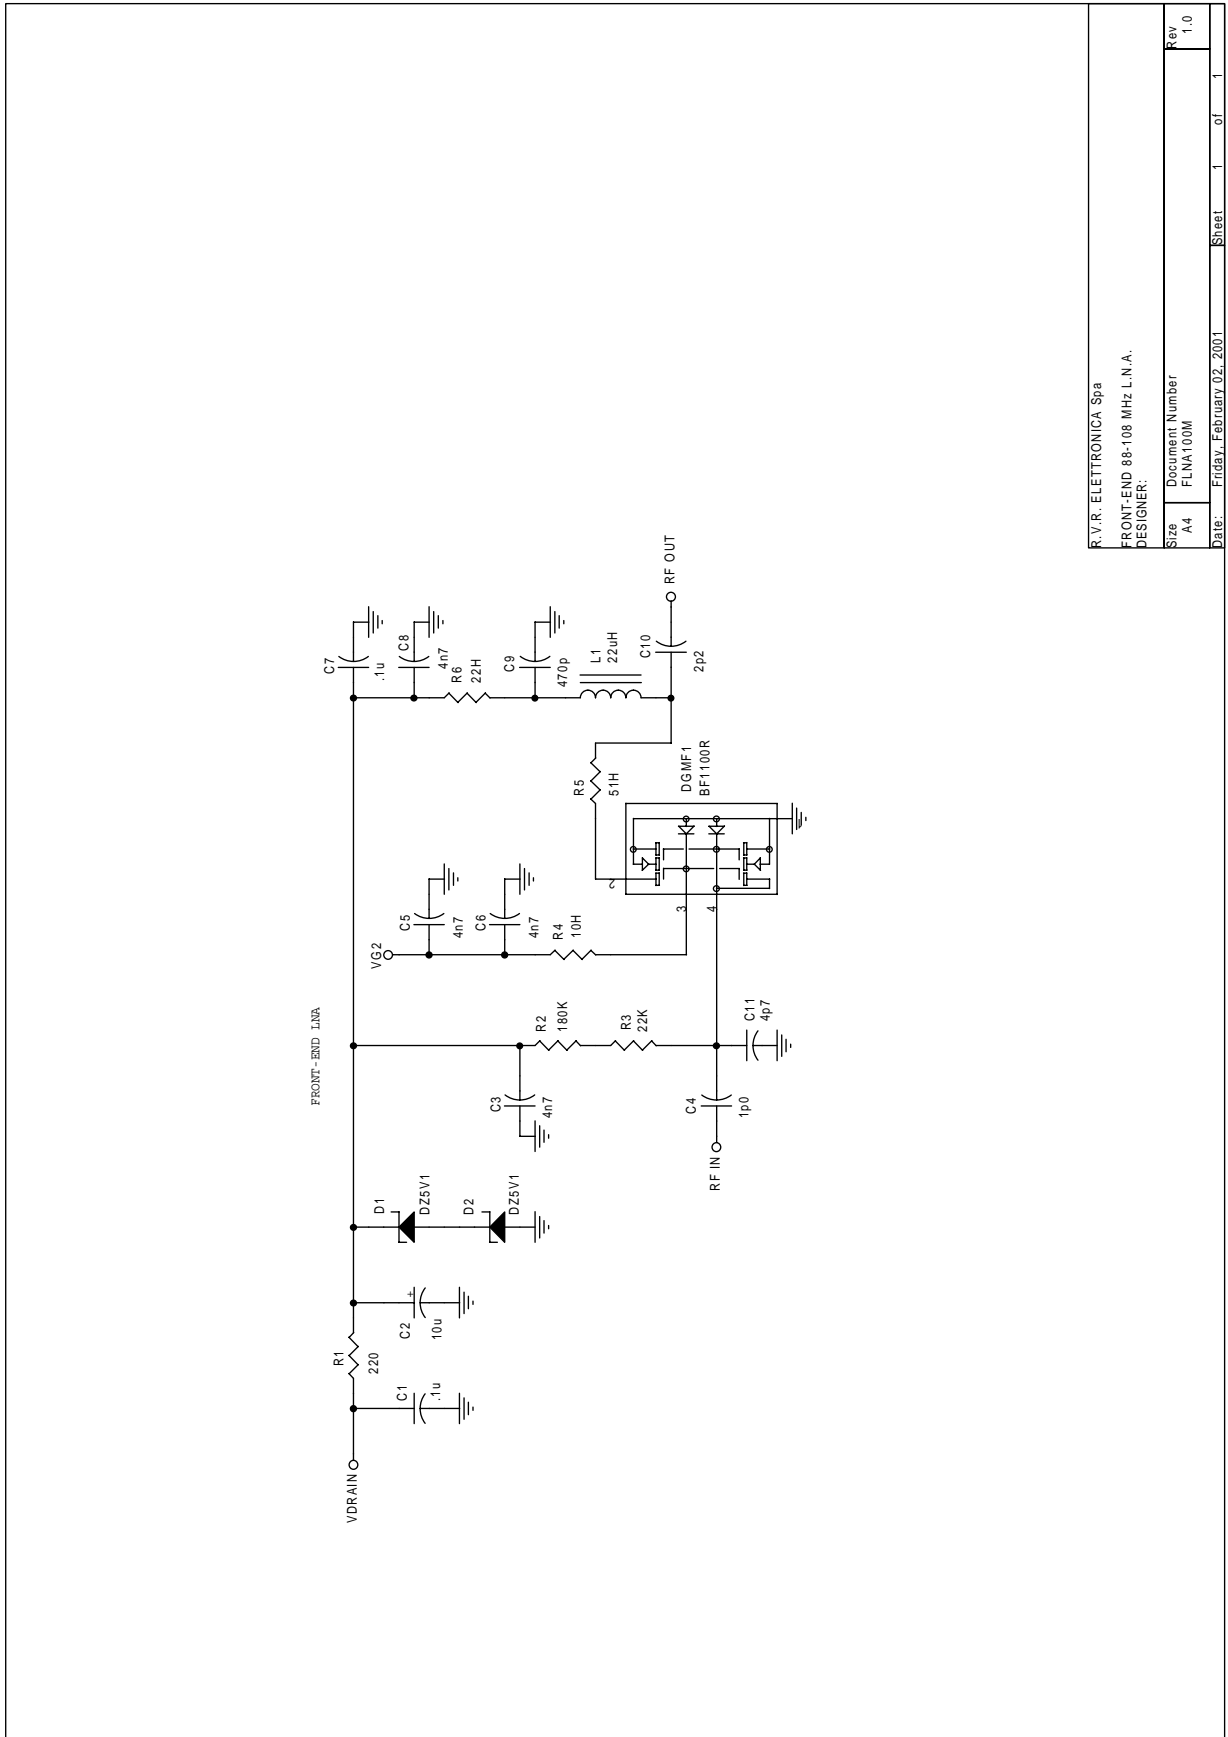


R.V.R. ELETTRONICA Spa
FRONT-END 88-108 MHz L.N.A.
DESIGNER:

| | | | |
|-------|-----|-----------------|---------------------------|
| Size | A4 | Document Number | FLNA100M |
| Rev | 1.0 | Date: | Friday, February 02, 2001 |
| Sheet | | 1 of 1 | |

| FLNA100M | | Bill Of Materials | | | Page |
|----------|--------|-------------------|---------|---------------------|------|
| Item | Quant. | Reference | Part | Description | Code |
| 1 | 2 | C1,C7 | .1u | COND. CHIP 0805 | 1 |
| 2 | 1 | C2 | 10u | COND. EL. SMD16V | |
| 3 | 4 | C3,C5,C6,C8 | 4n7 | COND. CHIP 0805 | |
| 4 | 1 | C4 | 1p0 | COND. CHIP 0805 | |
| 5 | 1 | C9 | 470p | COND. CHIP 0805 | |
| 6 | 1 | C10 | 2p2 | COND. CHIP 0805 | |
| 7 | 1 | C11 | 4p7 | COND. CHIP 0805 | |
| 8 | 1 | DGMF1 | BF1100R | DG MOSFET SOT143R | |
| 9 | 2 | D1,D2 | DZ5V1 | DIODO ZENER SMD 5V1 | |
| 10 | 1 | L1 | 22uH | IMPEDEENZA SMD 1210 | |
| 11 | 1 | R1 | 220 | RES. SMD 0805 5% | |
| 12 | 1 | R2 | 180K | RES. SMD 0805 5% | |
| 13 | 1 | R3 | 22K | RES. SMD 0805 5% | |
| 14 | 1 | R4 | 10H | RES. SMD 0805 5% | |
| 15 | 1 | R5 | 51H | RES. SMD 0805 5% | |
| 16 | 1 | R6 | 22H | RES. SMD 0805 5% | |

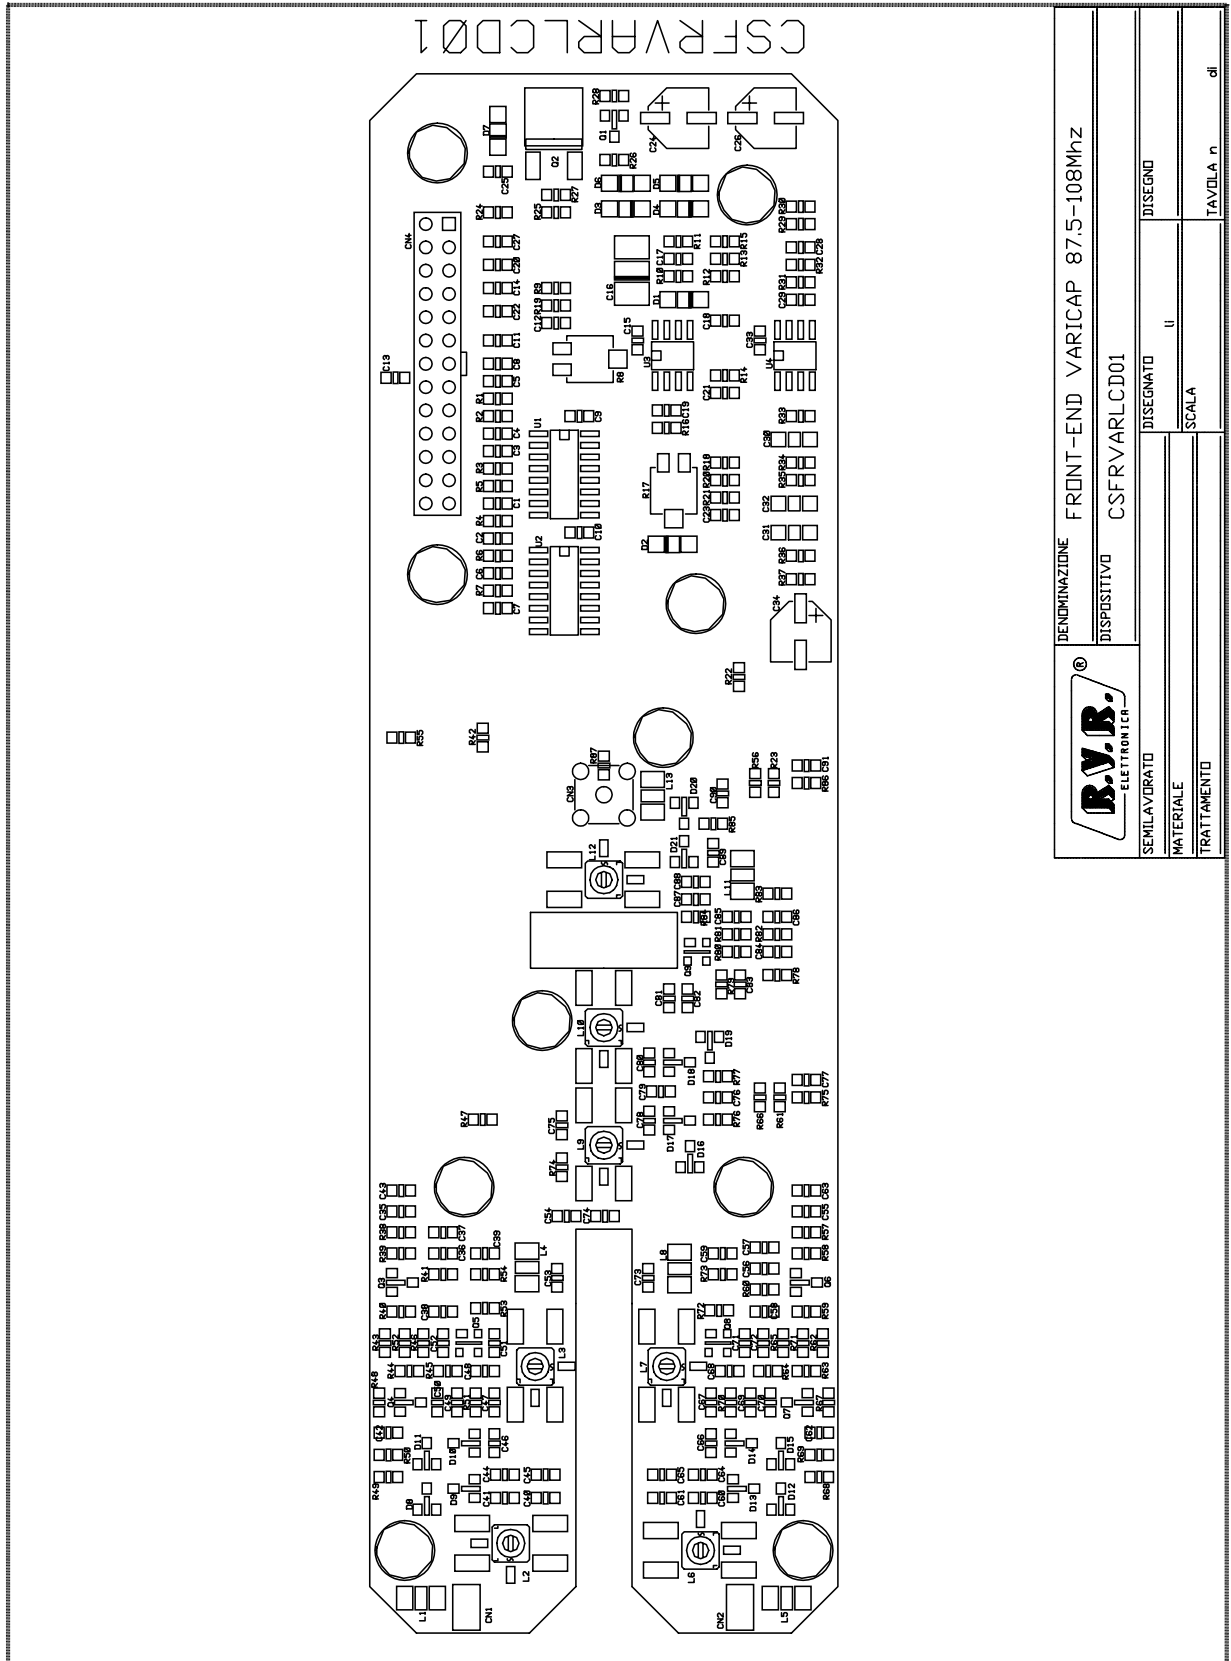

| | | |
|--------------|---|----|
| | DENOMINAZIONE FRONT-END VARICAP 87.5-108Mhz | |
| | DISPOSITIVO CSFRVARLCD01 | |
| SEMILAVORATO | DISEGNATO | II |
| MATERIALE | SCALA | |
| TRATTAMENTO | TAVOLA n. di | |

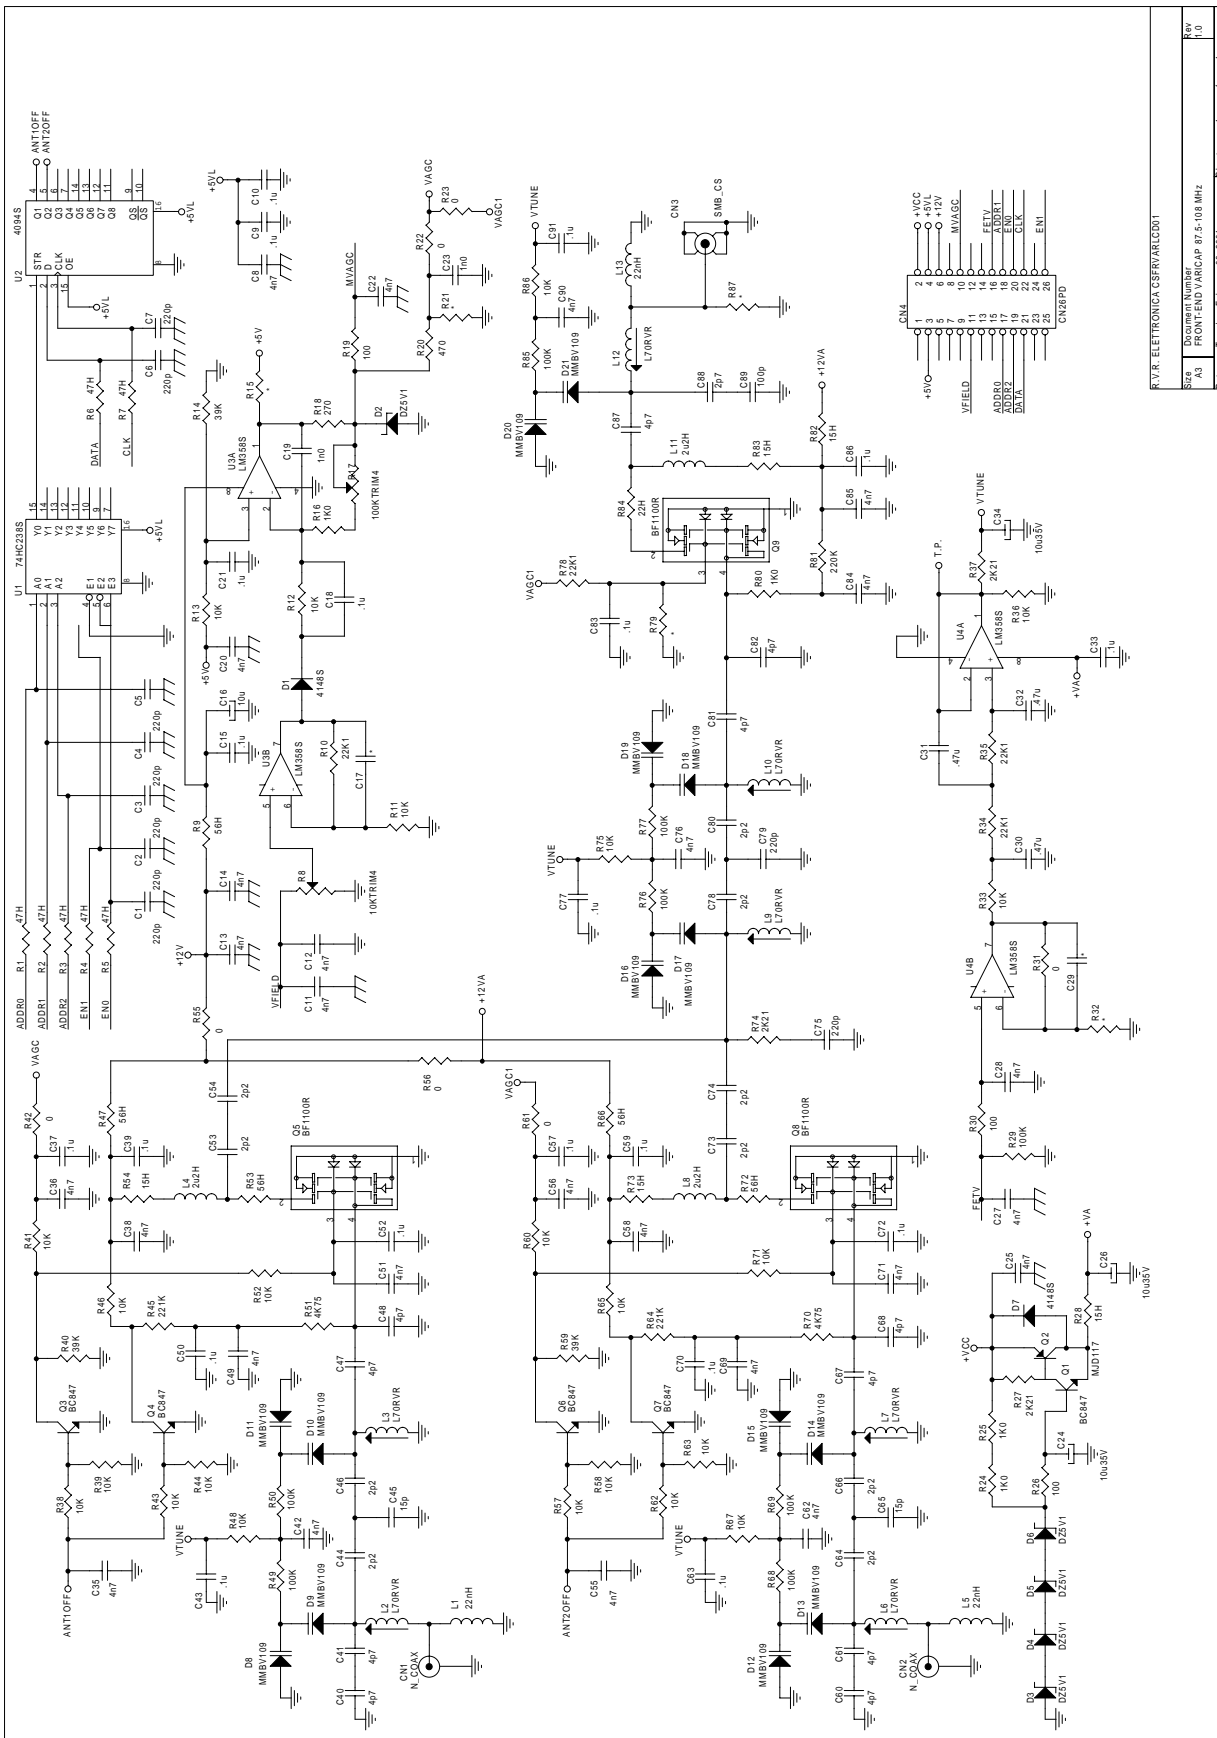

| | |
|-----------------------------------|---------------------------------|
| R.V.R. ELETTRONICA CSFRVARI LCD01 | |
| Rev. | Document Number |
| A3 | FRONT-END VARI CAP 87.5-108 MHz |
| Date: | TUESDAY, FEBRUARY 08, 2001 |
| Sheet: | 01 |

| FRONT-END VARICAP 87.5-108 MHz | | | Bill Of Materials | Page | 1 |
|--------------------------------|--------|--|-------------------|-----------------------|------|
| Item | Quant. | Reference | Part | Description | Code |
| 1 | 2 | CN1,CN2 | N_COAX | CONN. N A TELAIO | |
| 2 | 1 | CN3 | SMB_CS | CONN.SMB A STAMPATO | |
| 3 | 1 | CN4 | CN26PD | CONN. M 2X2.54 26PIN | |
| 4 | 9 | C1,C2,C3,C4,C5, C6,C7,C75,C79 | 220p | COND. CHIP 0805 | |
| 5 | 26 | C8,C11,C12,C13, C14,C20,C22,C25, C27,C28,C35,C36, C38,C42,C49,C51, C55,C56,C58,C62, C69,C71,C76,C84, C85,C90 | 4n7 | COND. CHIP 0805 | |
| 6 | 20 | C9,C10,C15,C18, C21,C33,C37,C39, C43,C50,C52,C57, C59,C63,C70,C72, C77,C83,C86,C91 | .1u | COND. CHIP 0805 | |
| 7 | 1 | C16 | 10u | COND. EL. SMD16V | |
| 8 | 7 | R15,C17,R21,C29, R32,R79,R87 | * | | |
| 9 | 2 | C19,C23 | 1n0 | COND. CHIP 0805 | |
| 10 | 3 | C24,C26,C34 | 10u35V | COND. EL. VER SMD 35V | |
| 11 | 3 | C30,C31,C32 | .47u | COND. CHIP 1206 | |
| 12 | 11 | C40,C41,C47,C48, C60,C61,C67,C68, C81,C82,C87 | 4p7 | COND. CHIP 0805 | |
| 13 | 10 | C44,C46,C53,C54, C64,C66,C73,C74, C78,C80 | 2p2 | COND. CHIP 0805 | |
| 14 | 2 | C45,C65 | 15p | COND. CHIP 0805 | |
| 15 | 1 | C88 | 2p7 | COND. CHIP 0805 | |
| 16 | 1 | C89 | 100p | COND. CHIP 0805 | |
| 17 | 2 | D7,D1 | 4148S | DIODO SIL. MINIMELF | |
| 18 | 5 | D2,D3,D4,D5,D6 | DZ5V1 | DIODO ZENER SMD 5V1 | |
| 19 | 14 | D8,D9,D10,D11, D12,D13,D14,D15, D16,D17,D18,D19, D20,D21 | MMBV109 | DIODO VARICAP SOT23 | |
| 20 | 3 | L1,L5,L13 | 22nH | IMPEDENZA SMD 1210 | |
| 21 | 7 | L2,L3,L6,L7,L9, L10,L12 | L70RVR | BOBINA 70 MHZ | |
| 22 | 3 | L4,L8,L11 | 2u2H | IMPEDENZA SMD 1210 | |
| 23 | 5 | Q1,Q3,Q4,Q6,Q7 | BC847 | TRANSISTOR SOT23 | |
| 24 | 1 | Q2 | MJD117 | TRANSISTOR 369A | |
| 25 | 3 | Q5,Q8,Q9 | BF1100R | DG MOSFET SOT143R | |
| 26 | 7 | R1,R2,R3,R4,R5, R6,R7 | 47H | RES. SMD 0805 5% | |
| 27 | 1 | R8 | 10KTRIM4 | TRIM.4X4mm SMD 10K | |
| 28 | 5 | R9,R47,R53,R66, R72 | 56H | RES. SMD 0805 5% | |
| 29 | 4 | R10,R34,R35,R78 | 22K1 | RES. SMD 0805 1% | |
| 30 | 23 | R11,R12,R13,R33, R36,R38,R39,R41, R43,R44,R46,R48, R52,R57,R58,R60, R62,R63,R65,R67, R71,R75,R86 | 10K | RES. SMD 0805 5% | |
| 31 | 3 | R14,R40,R59 | 39K | RES. SMD 0805 5% | |
| 32 | 4 | R16,R24,R25,R80 | 1K0 | RES. SMD 0805 5% | |
| 33 | 1 | R17 | 100KTRIM4 | TRIM.4X4mm SMD 100K | |
| 34 | 1 | R18 | 270 | RES. SMD 0805 5% | |
| 35 | 3 | R19,R26,R30 | 100 | RES. SMD 0805 5% | |
| 36 | 1 | R20 | 470 | RES. SMD 0805 5% | |
| 37 | 7 | R22,R23,R31,R42, R55,R56,R61 | 0 | RES. SMD O OHM | |
| 38 | 3 | R27,R37,R74 | 2K21 | RES. SMD 0805 1% | |
| 39 | 5 | R28,R54,R73,R82, R83 | 15H | RES. SMD 0805 5% | |
| 40 | 8 | R29,R49,R50,R68, R69,R76,R77,R85 | 100K | RES. SMD 0805 5% | |
| 41 | 2 | R45,R64 | 221K | RES. SMD 0805 1% | |

| | | | | |
|----|---|----------|----------|--------------------|
| 42 | 2 | R51, R70 | 4K75 | RES. SMD 0805 1% |
| 43 | 1 | R81 | 220K | RES. SMD 0805 5% |
| 44 | 1 | R84 | 22H | RES. SMD 0805 5% |
| 45 | 1 | U1 | 74HC238S | CI DIG. 74HC238SMD |
| 46 | 1 | U2 | 4094S | CI DIG. 4094SMD |
| 47 | 2 | U3, U4 | LM358S | CI LIN. LM358SMD |


Appendix B Piani di montaggio, schemi elettrici, liste componenti modificati per la versione 76-90MHz / *Component layouts, schematics, bills of material modified for 76-90MHz version*

Questa parte del manuale contiene i dettagli tecnici riguardanti la costruzione delle singole schede componenti il RX1-NV LCD modificate per il funzionamento nella frequenze 76-90MHz. L'appendice è composta dalle seguenti sezioni:


This part of the manual contains the technical details about the different boards of the RX1-NV LCD modified for the operation in 76-90MHz frequencies. This appendix is composed of the following sections:

| Description | RVR Code | Vers. | Pages |
|--------------|---------------|-------|-------|
| VCO | SLVCORTXLCD01 | 1.2 | 4 |
| Front-End RF | FOUT100M | 1.1 | 4 |

Pagina lasciata intenzionalmente in bianco
This page intentionally left blank

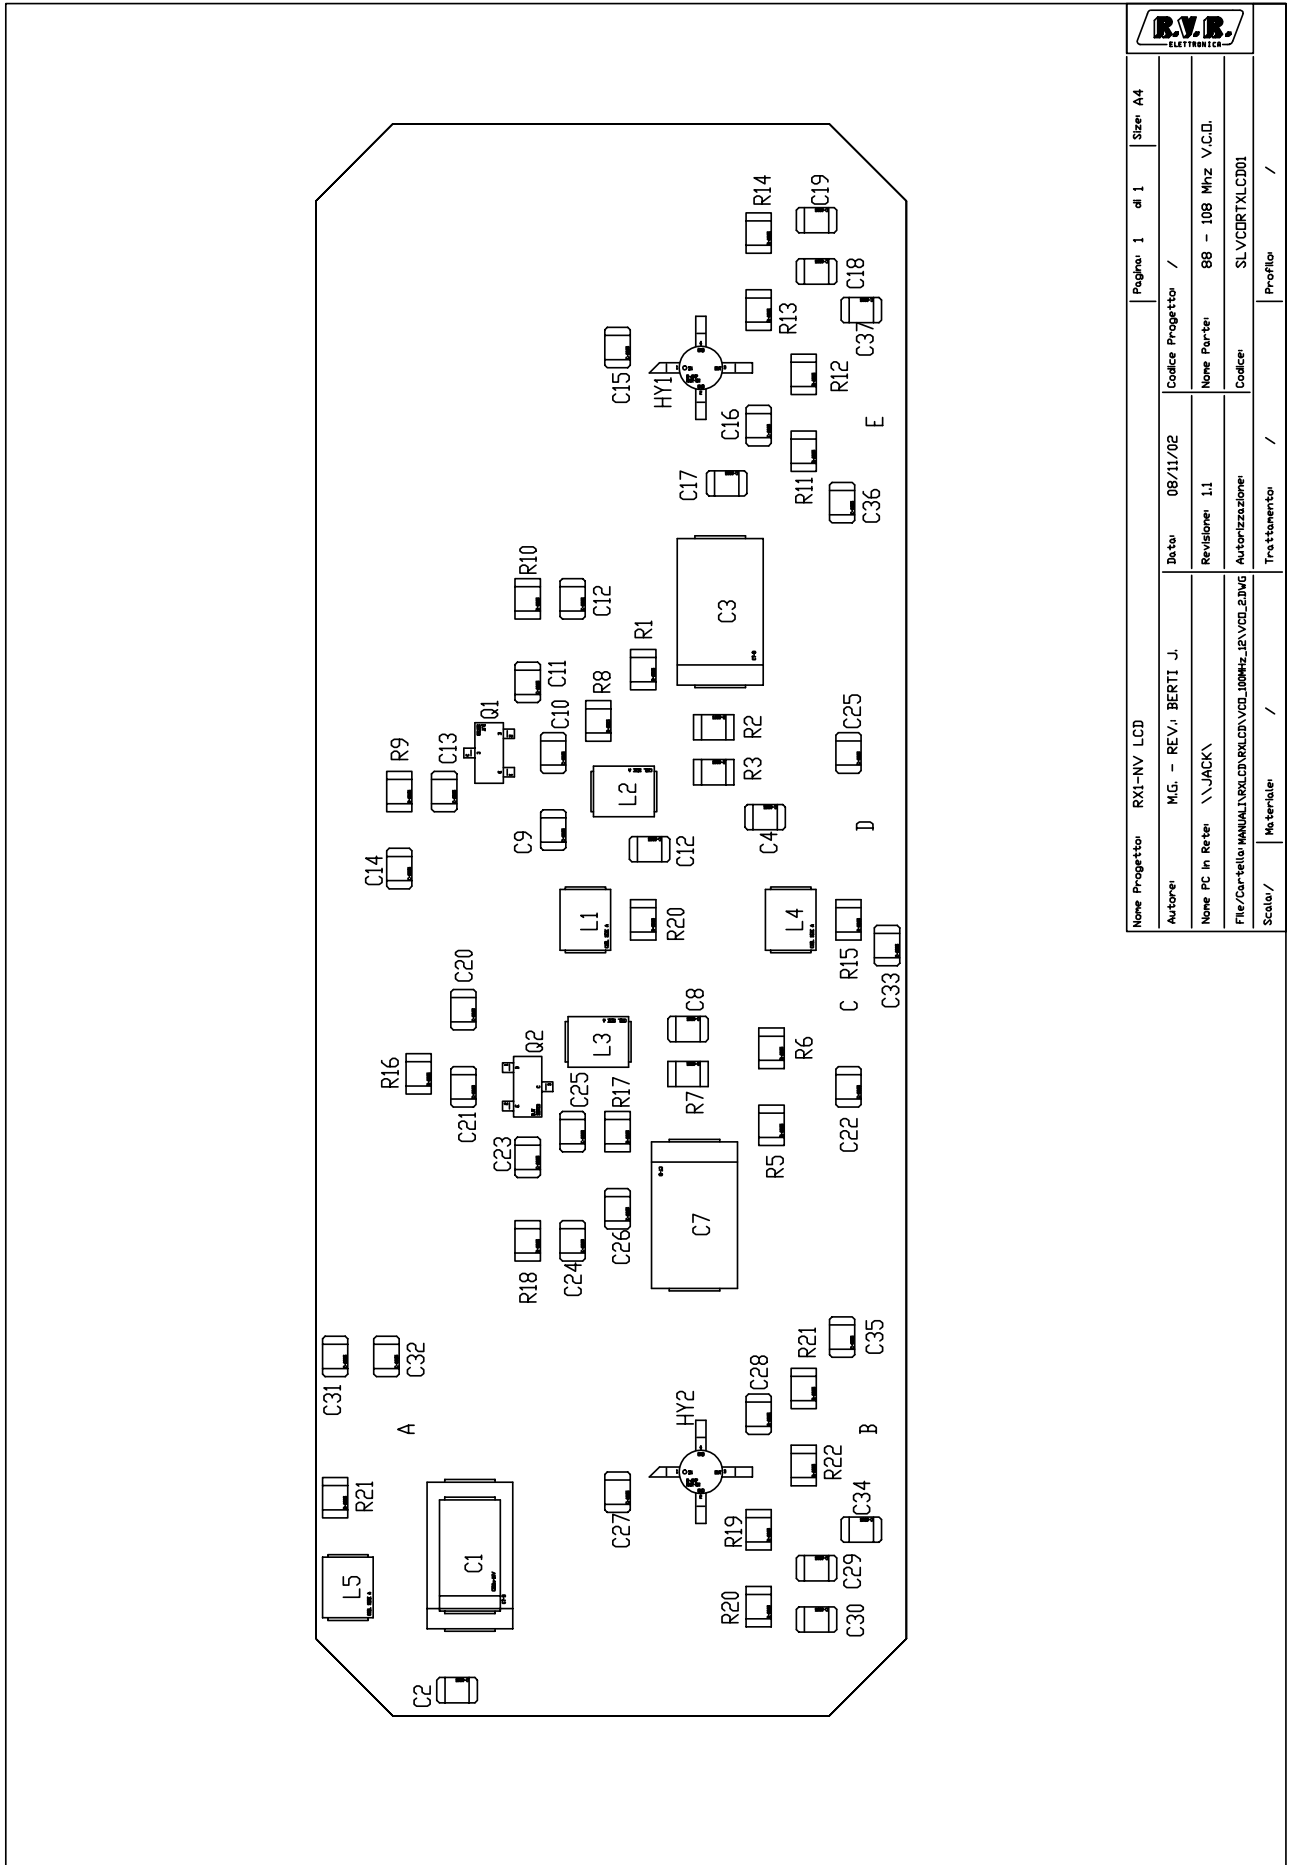

| | | | | | | | |
|--|--|---------------------------|--|---------------------------------|--|------------|--|
| | | Nome Progetto: RX1-NV LCD | | Pagina: 1 di 1 | | Size: A4 | |
| Autore: M.G. - REV. J. BERTI - J. | | Data: 08/11/02 | | Codice Progetto: / | | | |
| Nome FC in Rete: \\JACK\ | | Revisioni: 1.1 | | Nome Parte: 88 - 108 Mhz V.C.D. | | | |
| File/Cortella: MANUAL\ROLCD\RX1\LCD_VCD_100Mhz_12V_VCD_2.DWG | | Autorizzazione: / | | Codice: SLVCDRTLCD01 | | | |
| Scala: / | | Materiale: / | | Trattamento: / | | Profilo: / | |

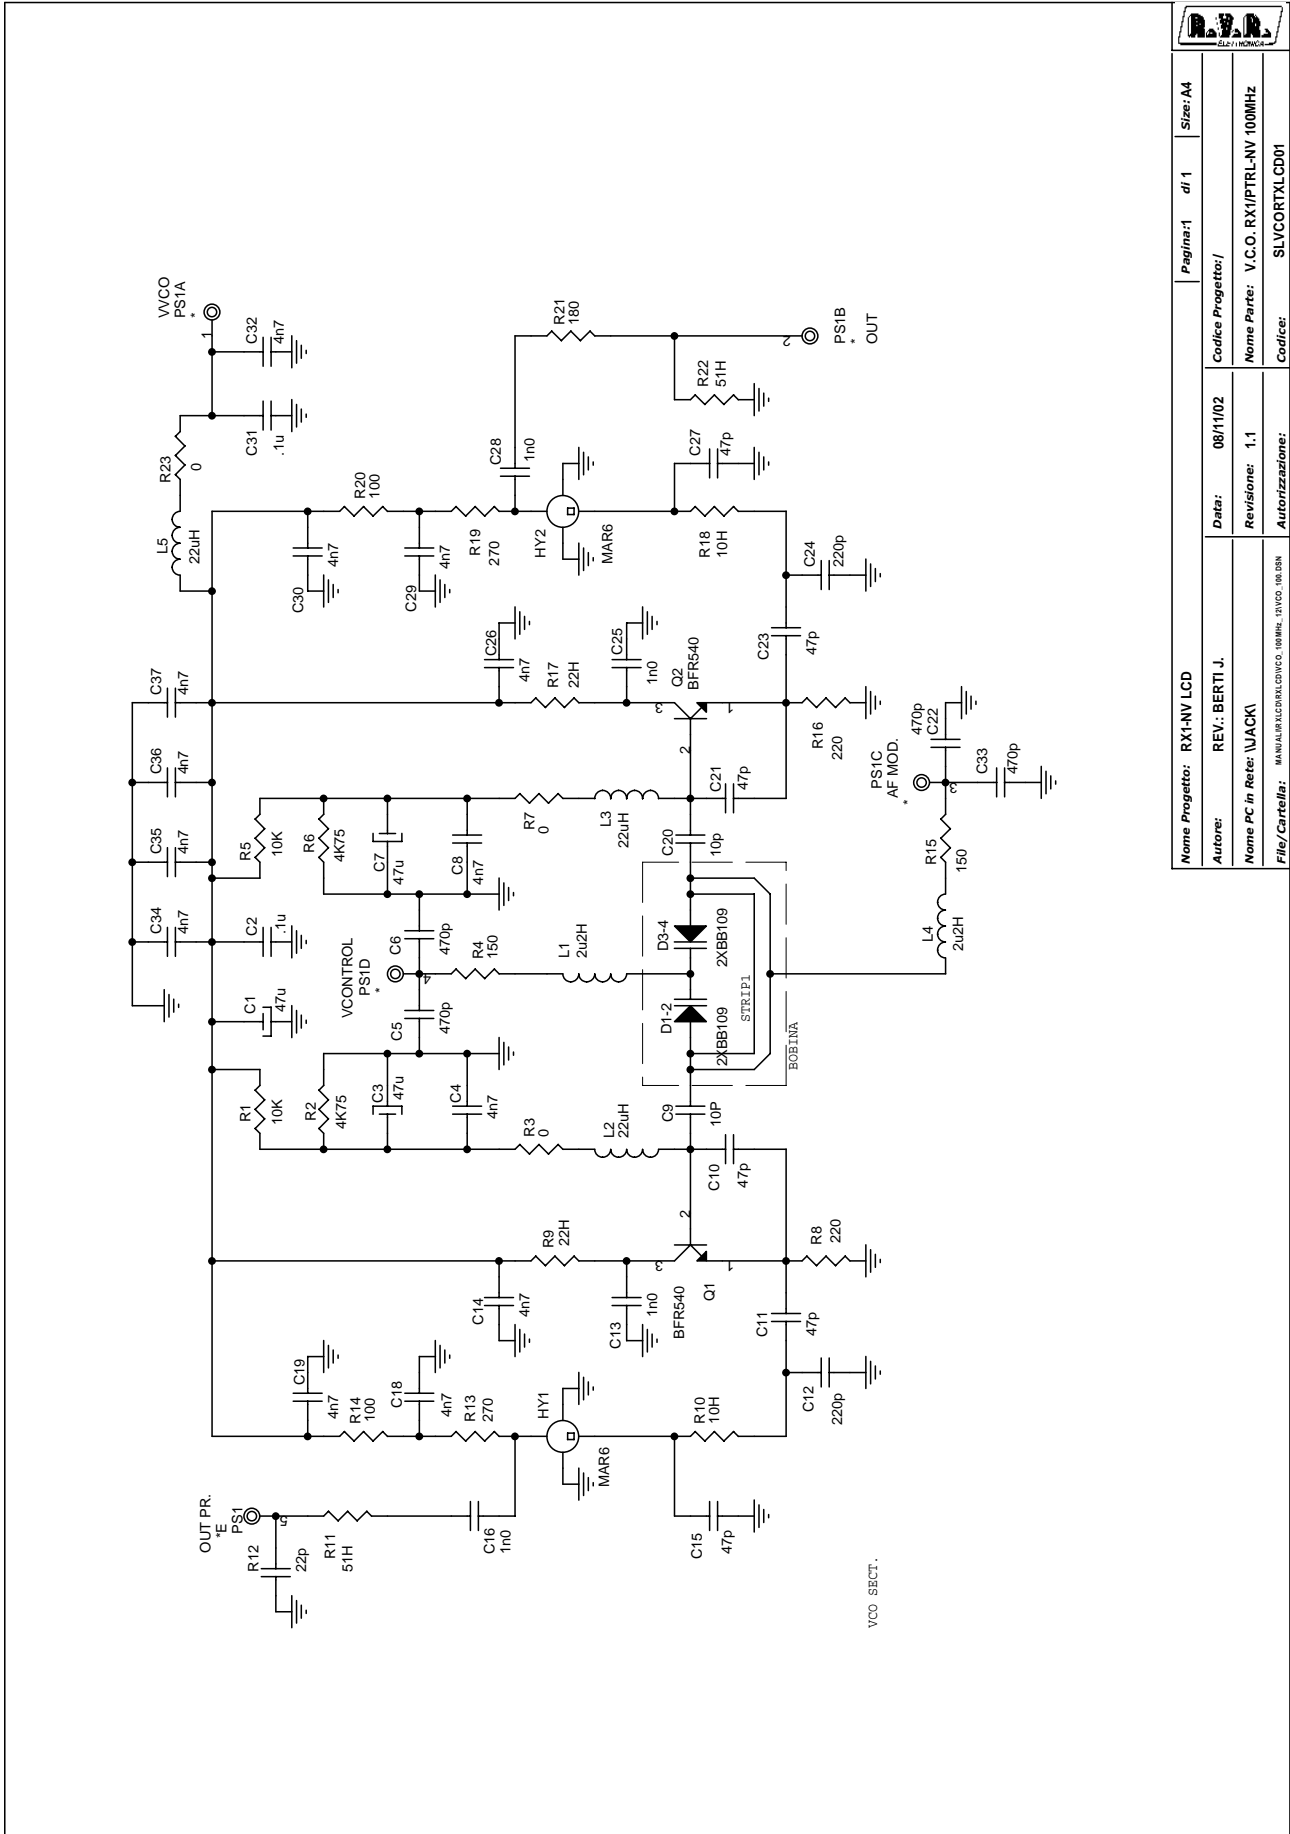


| | | | | |
|--|--|--------------------------------|---------------------------------------|----------|
| | | Pagina: 1 | di 1 | Size: A4 |
| Nome Progetto: RX1-NV LCD | | Codice Progettore: / | | |
| Autore: REV.: BERTI J. | | Data: 08/11/02 | | |
| Nome PC in Rete: \JACK1 | | Revisione: 1.1 | Nome Parte: V.C.O. RX1/PTRL-NV 100MHz | |
| File/Cartella: MANUALECDRDELVCO. INOME. 15VCO. INDIRIZ | | Autorizzazione: SLVCORTXL CD01 | | |

SLVCORTXLCD01 Bill Of Materials


 Page 1
 Code

| Item | Quant. | Reference | Part | Description |
|------|--------|--|---------|---------------------|
| 1 | 3 | C1, C3, C7 | 47u | COND. EL. SMD16V |
| 2 | 2 | C2, C31 | .1u | COND. CHIP 0805 |
| 3 | 13 | C4, C8, C14, C18, C19, C26, C29, C30, C32, C34, C35, C36, C37 | 4n7 | COND. CHIP 0805 |
| 4 | 4 | C5, C6, C22, C33 | 470p | COND. CHIP 0805 |
| 5 | 2 | C20, C9 | 10p | COND. CHIP 0805 |
| 6 | 6 | C10, C11, C15, C21, C23, C27 | 47p | COND. CHIP 0805 |
| 7 | 2 | C12, C24 | 220p | COND. CHIP 0805 |
| 8 | 4 | C13, C16, C25, C28 | 1n0 | COND. CHIP 0805 |
| 9 | 4 | D1, D2, D3, D4 | MMBV109 | DIODO VARICAP SOT23 |
| 10 | 2 | HY1, HY2 | MAR6 | MODULO IBR. MAR6 |
| 11 | 2 | L1, L4 | 2u2H | IMPEDENZA SMD 1210 |
| 12 | 3 | L2, L3, L5 | 22uH | IMPEDENZA SMD 1210 |
| 13 | 2 | Q1, Q2 | BFR540 | TRANSISTOR SOT23 |
| 14 | 2 | R5, R1 | 10K | RES. SMD 0805 5% |
| 15 | 2 | R2, R6 | 4K75 | RES. SMD 0805 1% |
| 16 | 3 | R3, R7, R23 | 0 | RES. SMD 0 OHM |
| 17 | 2 | R4, R15 | 150 | RES. SMD 0805 5% |
| 18 | 2 | R8, R16 | 220 | RES. SMD 0805 5% |
| 19 | 2 | R9, R17 | 22H | RES. SMD 0805 5% |
| 20 | 2 | R10, R18 | 10H | RES. SMD 0805 5% |
| 21 | 2 | R11, R22 | 51H | RES. SMD 0805 5% |
| 22 | 1 | R12 | 22p | COND. CHIP 0805 |
| 23 | 2 | R13, R19 | 270 | RES. SMD 0805 5% |
| 24 | 2 | R20, R14 | 100 | RES. SMD 0805 5% |
| 25 | 1 | R21 | 180 | RES. SMD 0805 5% |


Pagina lasciata intenzionalmente in bianco
This page was intentionally left blank

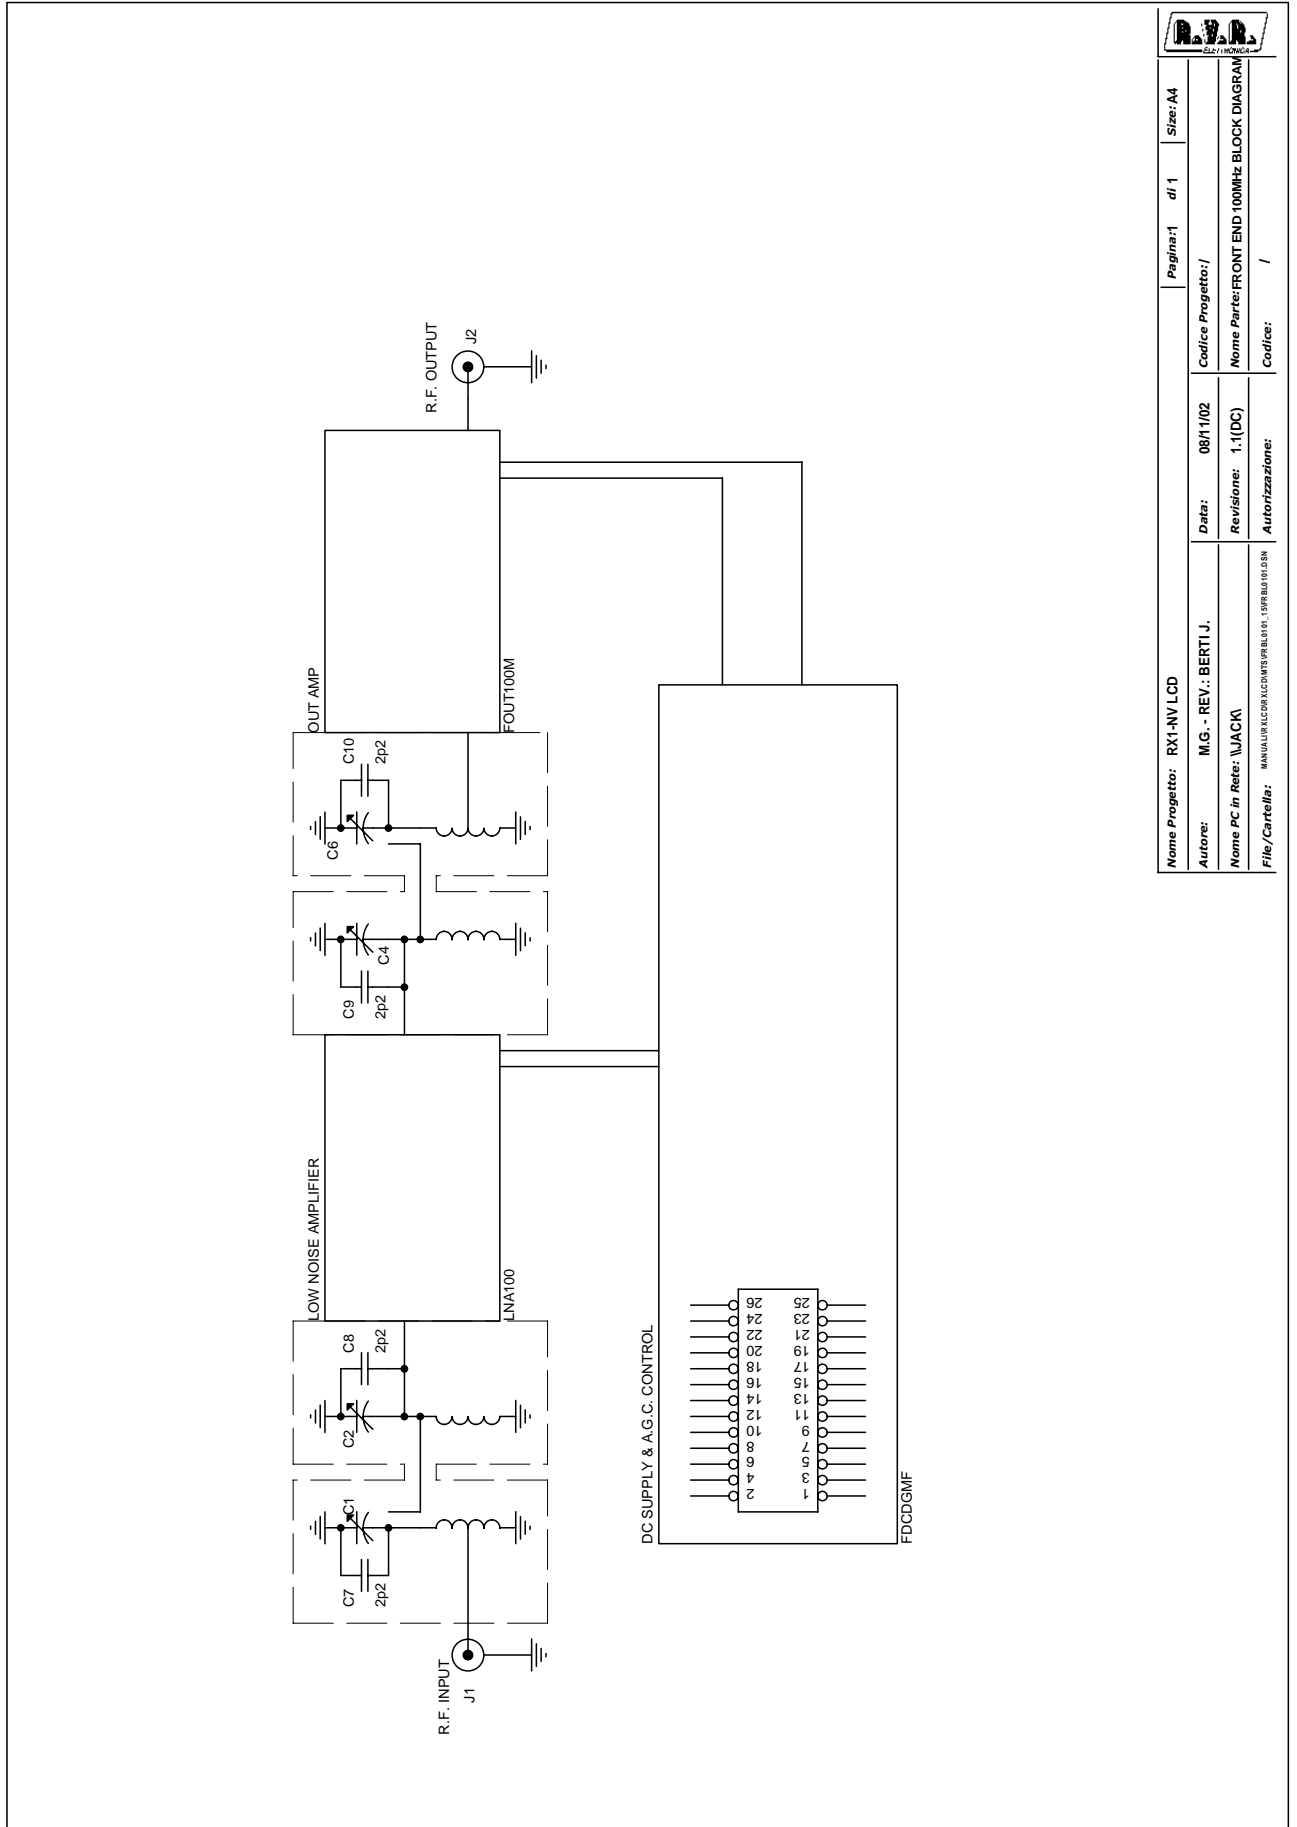

| | | | | |
|--|--|--------------------|--|----------|
| | | Pagina:1 | di 1 | Size: A4 |
| Nome Progetto: RX1-NV LCD | | Codice Progetto: / | | |
| Autore: M.G. - REV.: BERTI J. | | Data: 08/11/02 | | |
| Nome PC in Rete: \JACK | | Revisione: 1.1(DC) | Nome Parte: FRONT END 100MHz BLOCK DIAGRAM | |
| File/ Cartella: MANUALE\CORR\COM\FRBL0101_1\FRBL0101.DSN | | Autorizzazione: / | | |
| Codice: | | | | |

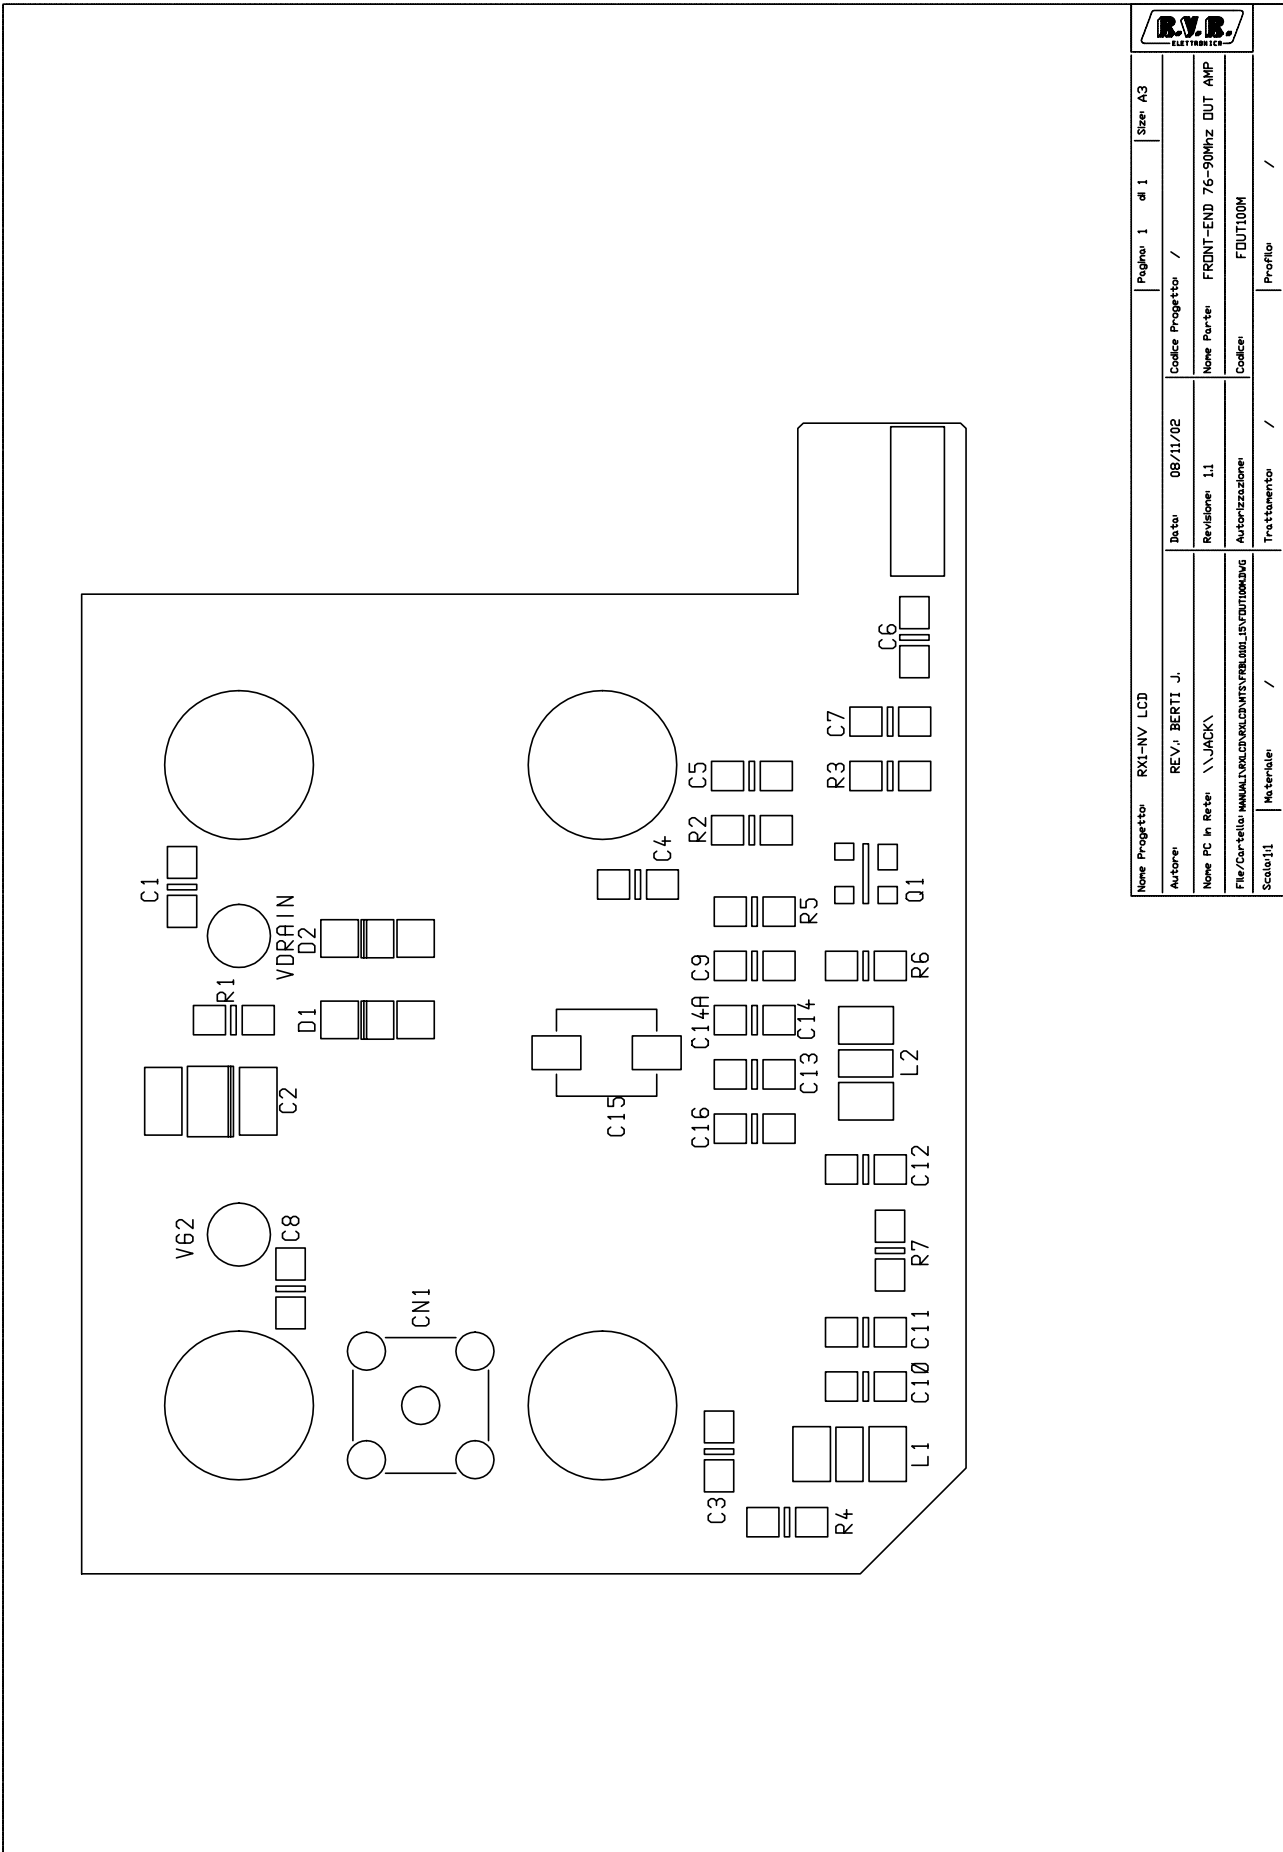

| | | | | |
|---|-------------------|--|------------|----------|
| Nome Progetto: RX1-NV LCD | | Pagina: 1 | di 1 | Size: A3 |
| Autore: REV. J. BERTI J. | Data: 08/11/02 | Codice Progetto: / | | |
| Nome PC in Rete: \\JACK\ | Revisione: 1.1 | Nome Parte: FRONT-END 76-90Mhz OUT AMP | | |
| File/Cartella: MMHALL\LCD\VALCD\WTS\FRBL0101\DVD100M\JG | Autore/Revisione: | Codice: F00T100M | | |
| Scala: 1:1 | Materiale: / | Trattamento: / | Profilo: / | |

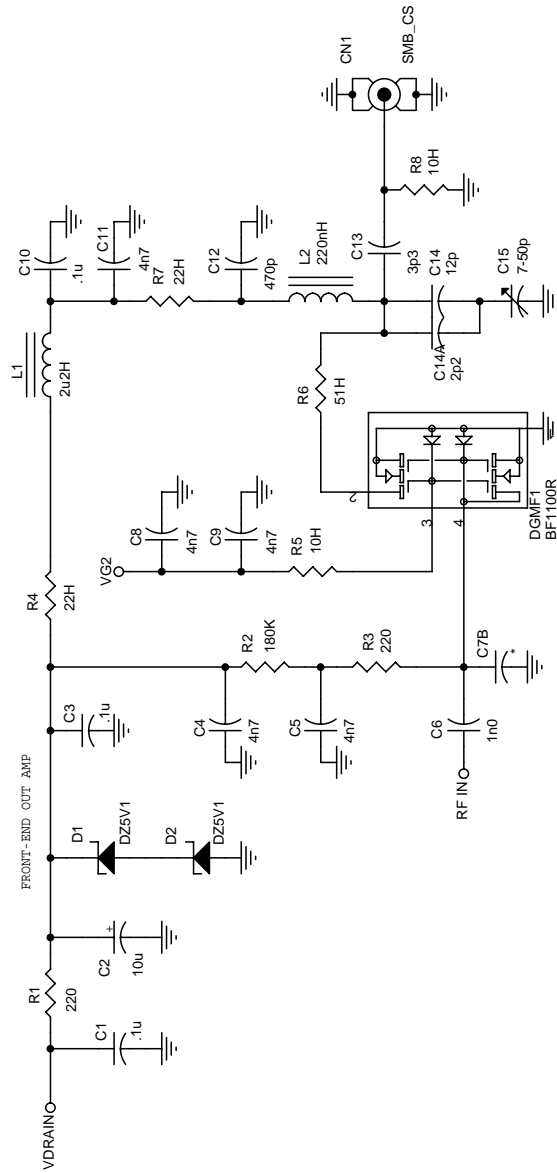

| | |
|--|---|
| | |
| Nome Progetto: RX1-NV/LCD | Pagina: 1 di 1 |
| Autore: REV.: BERTI J. | Size: A4 |
| Nome PC in Rete: \JACKI | Codice Progetto: / |
| File/Cartella: MANUALECORRALCOMISFRBL01_18FOUT100M2K | Data: 08/11/02 |
| | Revisione: 1.1 |
| | Nome Parte: FRONT-END 76-90 MHz OUT AMP |
| | Codice: FOUT100M |
| | Autorizzazione: |

R.V.R. ELETTRONICA Spa
FOUT100M

Revised: October 13, 2000
Revision: 1.0

Bill Of Materials

October
Part

13, 2000
Description

17:30:26

Page 1

| Item | Quant. | Reference | Part | Description |
|------|--------|-----------------|---------|---------------------|
| 1 | 1 | CN1 | SMB_CS | CONN.SMB A STAMPATO |
| 2 | 3 | C1,C3,C10 | .1u | COND. CHIP 0805 |
| 3 | 1 | C2 | 10u | COND. EL. SMD16V |
| 4 | 5 | C4,C5,C8,C9,C11 | 4n7 | COND. CHIP 0805 |
| 5 | 1 | C6 | 1n0 | COND. CHIP 0805 |
| 6 | 1 | C7B | * | |
| 7 | 1 | C12 | 470p | COND. CHIP 0805 |
| 8 | 1 | C13 | 3p3 | COND. CHIP 0805 |
| 9 | 1 | C14 | 12p | COND. CHIP 0805 |
| 10 | 1 | C15 | 7-50p | |
| 11 | 1 | DGMF1 | BF1100R | DG MOSFET SOT143R |
| 12 | 2 | D1,D2 | DZ5V1 | DIODO ZENER SMD 5V1 |
| 13 | 1 | L1 | 2u2H | IMPEDEENZA SMD 1210 |
| 14 | 1 | L2 | 220nH | IMPEDEENZA SMD 1210 |
| 15 | 2 | R3,R1 | 220 | RES. SMD 0805 5% |
| 16 | 1 | R2 | 180K | RES. SMD 0805 5% |
| 17 | 2 | R4,R7 | 22H | RES. SMD 0805 5% |
| 18 | 2 | R5,R8 | 10H | RES. SMD 0805 5% |
| 19 | 1 | R6 | 51H | RES. SMD 0805 5% |